Software

SuperDrive G2 12.0.0

User's Manual

User's Manual

Series: SuperDrive G2

Language: English

Document: 10001140879 / 17

Publication Date: 09/2015

Contents

1 SuperDrive G2 12.0.0 5

2 Getting Started 6

1 Welcome ... 6
2 Main Features ... 6
3 What's New ... 6
4 Copyright Notice ... 14
5 Safety Warning ... 14
6 User's Manual - PDF ... 14

3 Installation Instructions 15

1 Before Installing ... 15
2 Minimum Requirements ... 15
3 Supported Drives ... 16
4 Installing ... 22
5 Uninstalling ... 28
6 USB Driver ... 32

4 Menus 33

1 Project ... 33

New ... 33
Open ... 34
Close ... 34
Save ... 35
Save As ... 35
Remove ... 36
Import ... 36
Export ... 37
Change Voltage ... 37
Print ... 38
Project Information ... 38
Exit ... 39

2 Drive ... 39

Identify Drive ... 39
Communication Setup ... 41
Security System ... 43
Security System (Session) ... 44
New Parameters File ... 45
Edit Parameters File ... 46
Remove Parameters File ... 47
Export Parameters File ... 47
Read Parameters from Drive ... 48
Write Parameters to Drive ... 49
Monitor Parameters ... 49
Monitor using Keypad ... 50
Monitor Status ... 51
Monitor Speed Reference ... 53

Trend 54
Remove Trend File 58
Export Trend File 58
Trace 59
Remove Trace File 62
Export Trace File 62
3 Tools 63
Options 63
4 Help 66
Contents 66
About 66
5 Context menus 68
1 Project 68
Rename 68
Save As 69
Close 70
6 Communication 71
1 Drive Parametrization 71
2 Connecting the Drive (USB) 73
3 Connecting the Drive (USB - Virtual COM Port) 75
4 Connecting the Drive (RS232) 87
5 Connecting the Drive (RS485) 89
6 Connecting the Drive (Bluetooth) 105
7 RS232 Cable 124
8 USB Cable 125
9 USB to Serial Adapter 127
10 Bluetooth USB Adapter 129
11 Before Trying to Establish Communication 129
12 Exception During Monitoring 129
7 Libraries 130
1 JFreeChart 130
2 jSSC 130
Index 131

1 SuperDrive G2 12.0.0

Technical Support: Contact a local branch or representative.

Contact Us: http://www.weg.net/

Publication Date: 09/2015

Start

Click the Welcome button to start.

Welcome

2 Getting Started

Welcome
Main Features
What's New
Copyright Notice
Safety Warning
User's Manual - PDF

2.1 Welcome

Welcome to SuperDrive G2!

Thank you for using SuperDrive G2, a windows based graph tool for parameter setting, command and monitoring of drives.

SuperDrive G2 is a computer tool for making the use of drives as easy and convenient as possible.

SuperDrive G2 provides user-friendly tools for viewing, manipulating, and exchanging data with the drive. Data can be retrieved, changed and stored. The computer is connected to the drive using serial communication.

2.2 Main Features

- Online identification of connected drive;
- Offline configuration of drive;
- Parameter transfer from computer to the drive;
- Parameter transfer from drive to the computer;
- Offline editing of the parameters stored on the computer;
- Online editing of the parameters in drive;
- Monitoring of the drive status;
- Command operations (motor stop/run, jog, forward/reverse, local/remote, etc);
- Supports multiple databases for standard and special firmware version;
- RS232, RS485 and USB point-to-point serial communication;
- Graphical monitoring of parameters;
- Configuration, import and visualization of variables stored in Trace function of the drive (CFW-11, SCA06 and CTW900)
- Project importation and exportation;
- Online help.

NOTE!
Some features are not available in all drives.

2.3 What's New

SuperDrive G2 12.0.0
09/30/2015

New Functions:

- Windows 8.1 (x86, x64) is supported;
- German language is supported;
- Function to change voltage in project (CFW11 only);
- Communication with CFW11 V4.21;
- Communication with CFW11 V15.16;
- Communication with CFW11 V15.84;
- Communication with CFW11 V15.90;
- Communication with CFW11 V15.91;
- Communication with CFW11 V15.97;
- Communication with CFW11 V45.11;
- Communication with CFW11 V45.12;
- Communication with CFW100 V2.4X;
- Communication with CFW500 V1.8X;
- Communication with CFW501 V1.8X;
- Communication with SCA06 V1.5X;
- Communication with SSW7000 V1.3X;
- Communication with SSW7000 V1.4X;
- Communication with PLC11-01 V1.7X;
- Communication with PLC11-02 V1.7X;
- Communication with CTW900 V1.1X;
- Communication with SSW06 V1.8X;
- Communication with SSW07 V1.5X;
- Communication with SSW08 V1.5X.

Enhancements:

- Reduced the response time when connected with CFW11;
- Visual improvements (new icons);
- Improvement in presentation of option Projects (in Options > Projects);
- USB driver update;
- Communication with CFW11 V3.5X, added database in german language;
- Communication with CFW11 V5.4X, added database in german language;
- Communication with CFW11 V65.1X, added database in german language;
- Communication with CFW500 V1.5X, added database in german language;
- Communication with CFW700 V2.0X, added database in german language;
- Communication with MW500 V1.5X, added database in german language.

Corrections:

- Communication with CFW11 V5.4X;
- Communication with ECW500 V1.0X.

SuperDrive G2 11.3.0

09/24/2014

New Functions:

- Function Save As project;
- Function Rename project;
- New options for printing parameters;
- Function Remove project;
- Export graphics and parameters to CSV format files;
- Function Security System for CFW11 V65.1X;
- Function Trace for CTW900;
- Communication with CFW501 V1.3X;
- Communication with CFW501 V1.5X;
- Communication with CFW11 V65.1X;

- Communication with CFW11 V5.31;
- Communication with CFW700 V2.0X line 600V;
- Communication with CFW701 V2.0X line 600V;
- Communication with CFW100 V2.3X.

Enhancements:

- Added operation mode in the status window of ECW500;
- Allow change the default folder where projects are stored.

Corrections:

- Database correction of ECW500 V1.0X;
- Database correction of CFW100 V2.2X (english);
- Correction in printing parameters where overlapping characters could occur.

SuperDrive G2 11.2.0

05/21/2014

The following features were added:

- Communication with MW500 V1.5X;
- Communication with CFW100 via Bluetooth;
- Communication with CFW100 V2.2X;
- Communication with SCA06 V1.4X;
- Communication with CFW11 V5.4X;
- Communication with CFW11 V5.30;
- Communication with CFW11 V4.20;
- Communication with CFW11 V3.30;
- Communication with CFW11 V3.31;
- Communication with CFW11 V3.32;
- Communication with CFW11 V3.33.

Minor changes:

- Correction of instability during printing parameters;
- Database correction of CFW500 V1.1X;
- Database correction of CFW500 V1.5X;
- Database correction of CFW700 V2.0X;
- Database correction of CFW701 V2.0X.

SuperDrive G2 11.1.0

02/06/2014

The following features were added:

- Communication with CFW100 V2.1X.

Minor changes:

- Correction in Trace function where there was error in the read/write configuration,
- Fix reading of parameters that were not saved correctly when the reading was taken before saving the project.

SuperDrive G2 11.0.0

12/03/2013

The following features were added:

- Compatible with Windows 8 x86, Windows 8 x64

Minor changes:

- Indication on the parameter list of what has changed (different from standard);
- Fixed the window of Speed Reference to CFW100, CFW500, CFW700/701, CFW11, CTW900, which presented incorrect values;
- Fixed the New File Parameters function (offline generation of files parameters with default values), where the parameters firmware version, rated current of the drive and rated voltage of the drive had incorrect values;
- Fixed the Trend function which stored incorrectly content 0 when reading error occurred;
- Communication with CFW701 V2.0x, database correction.

SuperDrive G2 10.00
10/07/2013

The following features were added:

- Communication with CFW11 V5.1X.

SuperDrive G2 9.90
09/13/2013

The following features were added:

- Communication with CFW100 V2.0X.

SuperDrive G2 9.80
08/22/2013

The following features were added:

- Communication with CFW500 V1.5X;
- Communication with CFW700 V2.0X;
- Communication with CFW701 V2.0X;
- Communication with SSW7000 V1.2X.

SuperDrive G2 9.70
07/12/2013

The following features were added:

- Communication with CFW-11 V3.5X.

SuperDrive G2 9.60
07/05/2013

The following features were added:

- Communication with ECW500 V1.0X;
- Communication with CFW-11 V4.01;
- Communication with CFW-11 V4.10;
- Improved communication with drives (RS232 and RS485);
- Language change no longer requires program restart;
- Automatic loading of database on alternative language.

Minor changes:

- Communication with CFW-11 V3.1x, database correction;
- Communication with CFW100 V1.1x, database correction;
- Communication with CTW900 V1.0x, database correction;
- Several improvements in Identify Drive and Communication Setup windows.

SuperDrive G2 9.50
10/05/2012

The following features were added:

- Communication with CFW100 V1.1X;
- Size and position of windows are saved;
- Project importation and exportation.

Minor changes:

- Communication with CFW701 V1.2X, database correction.

SuperDrive G2 9.40
05/03/2012

The following features were added:

- Communication with CFW11 V3.1X;
- Communication with CFW700 V1.2X.

Minor changes:

- Communication with CFW700 V1.0X, database correction.

SuperDrive G2 9.30
03/16/2012

The following features were added:

- Communication with CTW900 V1.0X;
- Communication with SCA06 V1.2X.

SuperDrive G2 9.20
12/05/2011

The following features were added:

- Communication with CFW500 V1.1X;
- Communication with CFW701 V1.2X;

- Communication with CFW-11 V3.11;
- Communication with CFW-11 V3.12.

SuperDrive G2 9.10
09/27/2011

The following features were added:

- Trend in the function and Trace, minimum, maximum and legend are now saved when the graph is closed;
- Communication with CFW-11 V2.46;
- Communication with CFW-11 V2.50;
- Communication with CFW-11 V2.51;
- Communication with CFW-11 V3.90.

Minor changes:

- Communication with CFW-11 V3.0x, database correction;
- Communication with CFW700 V1.0x, database correction.

SuperDrive G2 9.00
05/27/2011

The following features were added:

- Offline programming.

SuperDrive G2 8.90
04/05/2010

The following features were added:

- Communication with CFW-11 V3.0x.

SuperDrive G2 8.80
02/22/2010

The following features were added:

- Communication with SSW7000 V1.1x;
- Communication with SSW-07 V1.4x;
- Communication with SSW-08 V1.4x;
- Compatible with Windows 7 x86, Windows 7 x64;
- Compatible with Windows Vista x86, Windows Vista x64;
- Compatible with Windows XP x86, Windows XP x64.

SuperDrive G2 8.70
10/20/2010

The following features were added:

- Communication with SCA06 V1.1x;
- Communication with SSW-06 V1.7x.

SuperDrive G2 8.60
08/10/2010

The following features were added:

- Communication with CFW700 V1.0x.

SuperDrive G2 8.50
03/05/2010

The following features were added:

- Communication with CFW-11 V2.0x;
- Communication with CFW-11 + PLC11-01 V1.4x;
- Communication with CFW-11 + PLC11-02 V1.4x.

SuperDrive G2 8.40
09/08/2009

The following features were added:

- Identify Drive address selection,
- Write Parameters to Drive destination address selection;
- Communication with CFW-11 + PLC11-01 V1.2x;
- Communication with CFW-11 + PLC11-02 V1.2x;
- Communication with SSW-06 V1.6x.

SuperDrive G2 8.33
05/15/2009

The following features were added:

- Communication with CFW-11 + PLC11-02 V1.0x.

SuperDrive G2 8.32
12/18/2008

The following features were added:

- Communication with CFW-09 PM V12.0x;
- Communication with CFW-11 V1.6x.

SuperDrive G2 8.31
05/20/2008

The following features were added:

- Communication with CFW-11 V1.3x;
- Communication with CFW-11 + PLC11-01 V1.0x.

SuperDrive G2 8.30
04/16/2008

The following features were added:

- Trend function,
- Communication with CFW-09 PM V11.3x;
- Communication with SSW-07 V1.3x;
- Communication with SSW-08 V1.3x.

SuperDrive G2 8.21
08/31/2007

The following features were added:

- Communication with CFW-11 V1.1x;
- Communication with SSW-06 V1.4x.

SuperDrive G2 8.20
08/01/2007

The following features were added:

- Communication with SSW-07 V1.2x;
- Communication with CFW-09 PM V10.0x;
- New baud rate for RS232: 4800 bps.

Minor changes:

- Option "Always on Top" was removed from several windows;
- New layout in monitoring windows;
- It is no more necessary to reopen the project after changing Communication Setup.

SuperDrive G2 8.11
04/24/2007

Minor changes:

- Updated CFW-11 data base;
- New baud rate for RS232: 57600 bps.

SuperDrive G2 8.10
03/29/2007

The following features were added:

- Communication with CFW-11 V1.0x;
- USB point-to-point serial communication;
- Reference speed monitoring of CFW-11;
- Trace function;
- Language selection: English, Portuguese and Spanish.

Minor changes:

- Monitor Parameters: a divider offers user-controlled resizing of two components: parameters and messages;
- Monitor Parameters: if the user press the right button of the mouse in the messages container, a small popup menu appears with the option to clean the messages;
- Monitor Parameters and Edit Parameters File: Ok and Cancel buttons were replaced with Close button;
- Monitor Keypad: validation of parameter value;
- Monitor Keypad: the user may now type a value directly into the parameter field;
- Always on top functionality is not selected any more when a window is opened;
- Parameters conversion for hexadecimal and binary now supported.

SuperDrive G2 8.00
12/20/2006

Initial Version:

- Automatic identification of connected drives;
- Parameter transfer from computer to the drive;
- Parameter transfer from drive to the computer;
- Offline editing of the parameters stored in files on the computer;
- Monitoring (visualization and change) of drive parameters;
- Monitoring of the drive status and command operations (motor stop/run, jog, forward/ reverse, local/remote, etc);
- Supports multiple databases for special firmware version;
- RS232 point-to-point serial communication;
- Online help.

2.4 Copyright Notice

This computer program is protected by copyright law and international treaties. Unauthorized reproduction or distribution of this program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under law.

2.5 Safety Warning

The use of this software can change the operation or the performance of the drive. The user is responsible for the adoption of all necessary precautions to ensure the safety of the equipment and involved personnel. Before this Software is used, read carefully all Instruction of the Online Help. The non observation of these instructions can cause serious damages to the equipment and result in serious personnel injuries.

2.6 User's Manual - PDF

The user's manual in PDF format can be found in the "\docs\en_US\help\PDF" folder where SuperDrive G2 is installed.

Example: C:\WEG\SuperDrive G2 12.0.0\docs\en_US\help\PDF

3 Installation Instructions

The following instructions cover information of all necessary installations and uninstallations.

Contents

- Before Installing
- Minimum Requirements
- Supported Drives
- Installing
- Uninstalling
- USB Driver

3.1 Before Installing

Check the following items before installing SuperDrive G2:

- If the microcomputer meets the Minimum Requirements;
- Your antivirus software must allow you to install software;
- If the SuperDrive G2 version is compatible with your drive, see Supported Drives.

3.2 Minimum Requirements

Item	Description
Processor	Windows Vista - 1 GHz or faster processor
	Windows 7 - 1 GHz or faster processor
	Windows 8 - 1 GHz or faster processor
	Windows 8.1 - 1 GHz or faster processor
Operating System	Windows Vista SP2 (x86, x64)
	Windows 7 SP1 (x86, x64)
	Windows 8 (x86, x64)
	Windows 8.1 (x86, x64)
	You must have administrator privileges to install the software
Memory	Windows Vista (x86, x64) - 1 GB or more recommended
	Windows 7 (x86) - 1 GB or more recommended; Windows 7 (x64) - 2 GB or more recommended
	Windows 8 (x86) - 1 GB or more recommended; Windows 8 (x64) - 2 GB or more recommended
	Windows 8.1 (x86) - 1 GB or more recommended; Windows 8.1 (x64) - 2 GB or more recommended
Display Color	High color resolution (16 bits) or more
Display Resolution	1024x768 pixels 1280x1024 pixels or higher-resolution screen recommended
Disk Space	1 GB of free disk space for SuperDrive G2
Drive	CD-ROM or DVD-ROM drive
Pointing Device	Mouse or compatible pointing device
Java Runtime Environment	Java Runtime Environment (JRE) 8 Update 60 or greater
Internet Browser	Mozilla Firefox 40 or greater
	Opera 32 or greater
	Safari 5.1 or greater
	Internet Explorer 8/9 (Windows Vista)

	Internet Explorer 8/9/10 (Windows 7) Internet Explorer 10 (Windows 8, 8.1)
	JavaScript enabled Browser should support Cascading Style Sheets (CSS1) and JavaScript

(x86) = 32-bit Edition.
(x64) = 64-bit Edition.

3.3 Supported Drives

The following table shows drives and firmware versions that each database supplied with SuperDrive G2 supports.

Drive		SuperDrive G2
		12.0.0
CFW-11	1.0X	X
	1.1X	X
	1.3X	X
	1.6X	X
	2.0X	X
	2.46	X
	2.50	X
	2.51	X
	3.0X	X
	3.11	X
	3.12	X
	3.1X	X
	3.30	X
	3.31	X
	3.32	X
	3.33	X
	3.5X	X
	3.90	X
	4.01	X
	4.10	X
	4.20	X
	4.21	X
	5.1X	X
	5.30	X
	5.31	X
	5.4X	X
	15.16	X
	15.84	X
	15.90	X
	15.91	X
	15.97	X
	45.11	X
	45.12	X
	65.1X	X
CFW701	1.2X	X
	2.0X	X
CFW700	1.0X	X

	1.2X	X
	2.00	X
	2.0X	X
CFW500	1.1X	X
	1.5X	X
	1.8X	X
CFW501	1.3X	X
	1.5X	X
	1.8X	X
CFW100	1.1X	X
	2.0X	X
	2.1X	X
	2.2X	X
	2.3X	X
	2.4X	X
MW500	1.5X	X
ECW500	1.0X	X
PLC11-01	1.0X	X
	1.2X	X
	1.4X	X
	1.7X	X
PLC11-02	1.0X	X
	1.2X	X
	1.4X	X
	1.7X	X
CTW900	1.0X	X
	1.1X	X
SCA06	1.1X	X
	1.2X	X
	1.4X	X
	1.5X	X
SSW-06	1.3X	X
	1.4X	X
	1.6X	X
	1.7X	X
	1.8X	X
SSW-07	1.2X	X
	1.3X	X
	1.4X	X
	1.5X	X
SSW-08	1.3X	X
	1.4X	X
	1.5X	X
SSW7000	1.1X	X
	1.3X	X
	1.4X	X
CFW-09 PM	10.0X	X
	11.3X	X
	12.0X	X

NOTE!

(1) SSW-06 1.3X - From version 1.31 and on

(2) SSW-07 1.2X - From version 1.21 and on

(3) CFW700 1.0X - From version 1.02 and on

As new firmware versions are created, additional databases are added to SuperDrive G2.

The additional databases can be found on the Internet at the manufacturer's web site (see SuperDrive G2 12.0.0).

If your drive uses a special firmware version (customized version), SuperDrive G2 needs an additional database. Request this additional database for the manufacturer.

The software allows communication only with the drive types listed in the above table.

Firmware is the software which controls the drive. To find out which is the firmware version, read parameter P0023.

Older Versions

The following tables show drives and firmware versions that each database supplied with SuperDrive G2 supports.

Drive		SuperDrive G2			
		11.0.0	11.1.0	11.2.0	11.3.0
CFW-11	1.0X	X	X	X	X
	1.1X	X	X	X	X
	1.3X	X	X	X	X
	1.6X	X	X	X	X
	2.0X	X	X	X	X
	2.46	X	X	X	X
	2.50	X	X	X	X
	2.51	X	X	X	X
	3.0X	X	X	X	X
	3.11	X	X	X	X
	3.12	X	X	X	X
	3.1X	X	X	X	X
	3.30			X	X
	3.31			X	X
	3.32			X	X
	3.33			X	X
	3.5X	X	X	X	X
	3.90	X	X	X	X
	4.01	X	X	X	X
	4.10	X	X	X	X
	4.20			X	X
	5.1X	X	X	X	X
	5.30			X	X
	5.31				X
	5.4X			X	X
	65.1X				X
CFW701	1.2X	X	X	X	X
	2.0X	X	X	X	X
CFW700	1.0X	X	X	X	X
	1.2X	X	X	X	X
	2.00			X	X
	2.0X	X	X	X	X
CFW500	1.1X	X	X	X	X

	1.5X	X	X	X	X
CFW501	1.3X				X
	1.5X				X
CFW100	1.1X	X	X	X	X
	2.0X	X	X	X	X
	2.1X		X	X	X
	2.2X			X	X
	2.3X				X
MW500	1.5X			X	X
ECW500	1.0X	X	X	X	X
PLC11-01	1.0X	X	X	X	X
	1.2X	X	X	X	X
	1.4X	X	X	X	X
PLC11-02	1.0X	X	X	X	X
	1.2X	X	X	X	X
	1.4X	X	X	X	X
CTW900	1.0X	X	X	X	X
SCA06	1.1X	X	X	X	X
	1.2X	X	X	X	X
	1.4X			X	X
SSW-06	1.3X	X	X	X	X
	1.4X	X	X	X	X
	1.6X	X	X	X	X
	1.7X	X	X	X	X
SSW-07	1.2X	X	X	X	X
	1.3X	X	X	X	X
	1.4X	X	X	X	X
SSW-08	1.3X	X	X	X	X
	1.4X	X	X	X	X
SSW7000	1.1X	X	X	X	X
CFW-09 PM	10.0X	X	X	X	X
	11.3X	X	X	X	X
	12.0X	X	X	X	X

Drive		**SuperDrive G2**												
		8.80	**8.90**	**9.00**	**9.10**	**9.20**	**9.30**	**9.40**	**9.50**	**9.60**	**9.70**	**9.80**	**9.90**	**10.00**
CFW-11	1.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.1X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.6X	X	X	X	X	X	X	X	X	X	X	X	X	X
	2.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	2.46				X	X	X	X	X	X	X	X	X	X
	2.50				X	X	X	X	X	X	X	X	X	X
	2.51				X	X	X	X	X	X	X	X	X	X
	3.0X		X	X	X	X	X	X	X	X	X	X	X	X
	3.11					X	X	X	X	X	X	X	X	X
	3.12					X	X	X	X	X	X	X	X	X
	3.1X							X	X	X	X	X	X	X
	3.30													
	3.31													
	3.32													
	3.33													

	3.5X										X	X	X	X
	3.90				X	X	X	X	X	X	X	X	X	X
	4.01									X	X	X	X	X
	4.10									X	X	X	X	X
	4.20													
	5.1X													X
	5.30													
	5.31													
	5.4X													
	65.1X													
CFW701	1.2X					X	X	X	X	X	X	X	X	X
	2.0X											X	X	X
CFW700	1.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.2X							X	X	X	X	X	X	X
	2.0X											X	X	X
CFW500	1.1X					X	X	X	X	X	X	X	X	X
	1.5X											X	X	X
CFW501	1.3X													
	1.5X													
CFW100	1.1X								X	X	X	X	X	X
	2.0X												X	X
	2.1X													
	2.3X													
MW500	1.5X													
ECW500	1.0X									X	X	X	X	X
PLC11-01	1.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.2X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X	X	X	X	X	X	X	X	X	X	X	X	X	X
PLC11-02	1.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.2X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X	X	X	X	X	X	X	X	X	X	X	X	X	X
CTW900	1.0X						X	X	X	X	X	X	X	X
SCA06	1.1X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.2X						X	X	X	X	X	X	X	X
	1.4X													
SSW-06	1.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.6X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.7X	X	X	X	X	X	X	X	X	X	X	X	X	X
SSW-07	1.2X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X	X	X	X	X	X	X	X	X	X	X	X	X	X
SSW-08	1.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X	X	X	X	X	X	X	X	X	X	X	X	X	X
SSW7000	1.1X	X	X	X	X	X	X	X	X	X	X	X	X	X
CFW-09 PM	10.0X	X	X	X	X	X	X	X	X	X	X	X	X	X
	11.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	12.0X	X	X	X	X	X	X	X	X	X	X	X	X	X

Drive		**SuperDrive G2**

		8.00	8.10	8.11	8.20	8.21	8.30	8.31	8.32	8.33	8.40	8.50	8.60	8.70
CFW-11	1.0X		X	X	X	X	X	X	X	X	X	X	X	X
	1.1X					X	X	X	X	X	X	X	X	X
	1.3X							X	X	X	X	X	X	X
	1.6X								X	X	X	X	X	X
	2.0X												X	X
	2.46													
	2.50													
	2.51													
	3.0X													
	3.11													
	3.12													
	3.1X													
	3.30													
	3.31													
	3.32													
	3.33													
	3.5X													
	3.90													
	4.01													
	4.10													
	4.20													
	5.1X													
	5.30													
	5.31													
	5.4X													
	65.1X													
CFW701	1.2X													
	2.0X													
CFW700	1.0X												X	X
	1.2X													
	2.0X													
CFW500	1.1X													
	1.5X													
CFW501	1.3X													
	1.5X													
CFW100	1.1X													
	2.0X													
	2.1X													
	2.3X													
MW500	1.5X													
ECW500	1.0X													
PLC11-01	1.0X							X	X	X	X	X	X	X
	1.2X										X	X	X	X
	1.4X											X	X	X
PLC11-02	1.0X									X	X	X	X	X
	1.2X										X	X	X	X

	1.4X											X	X	X
CTW900	1.0X													X
SCA06	1.1X													X
	1.2X													
	1.4X													
SSW-06	1.3X	X	X	X	X	X	X	X	X	X	X	X	X	X
	1.4X					X	X	X	X	X	X	X	X	X
	1.6X										X	X	X	X
	1.7X													X
SSW-07	1.2X				X	X	X	X	X	X	X	X	X	X
	1.3X						X	X	X	X	X	X	X	X
	1.4X													
SSW-08	1.3X						X	X	X	X	X	X	X	X
	1.4X													
SSW7000	1.1X													
	1.2X													
CFW-09 PM	10.0X				X	X	X	X	X	X	X	X	X	X
	11.3X						X	X	X	X	X	X	X	X
	12.0X								X	X	X	X	X	X

NOTE!
(1) SSW-06 1.3X - From version 1.31 and on
(2) SSW-07 1.2X - From version 1.21 and on
(3) CFW700 1.0X - From version 1.02 and on

3.4 Installing

When installing a newer version of SuperDrive G2 it is recommended that you first uninstall the previous version and re-boot your system to make sure the installation executes correctly.

Close all open programs currently running to prevent interference with the installation process.

To install SuperDrive G2, please follow the steps below.

Installation

1. You must be logged in as an administrator to install the program; if you're using a standard account, the application will fail to run;

2. If User Account Control (UAC) is enabled (Control Panel > User Accounts > Change User Account Control Settings), you will be notified before the installer starts the installation and try to make a change in the Windows configuration; click Yes to confirm that you allow the program to make changes to your computer, otherwise you can not install the program;

3. You should also run the installer with elevated privileges; to do so, right-click installer displays a menu; click Run as administrator;

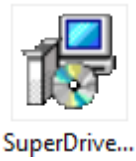

4. Select the language and click OK.

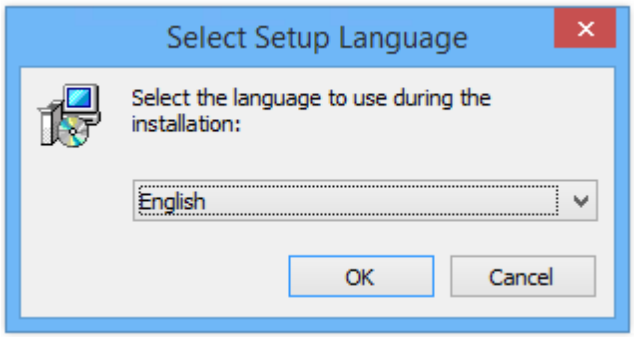

5. The installation program will start and a welcoming screen will appear. Click Next.

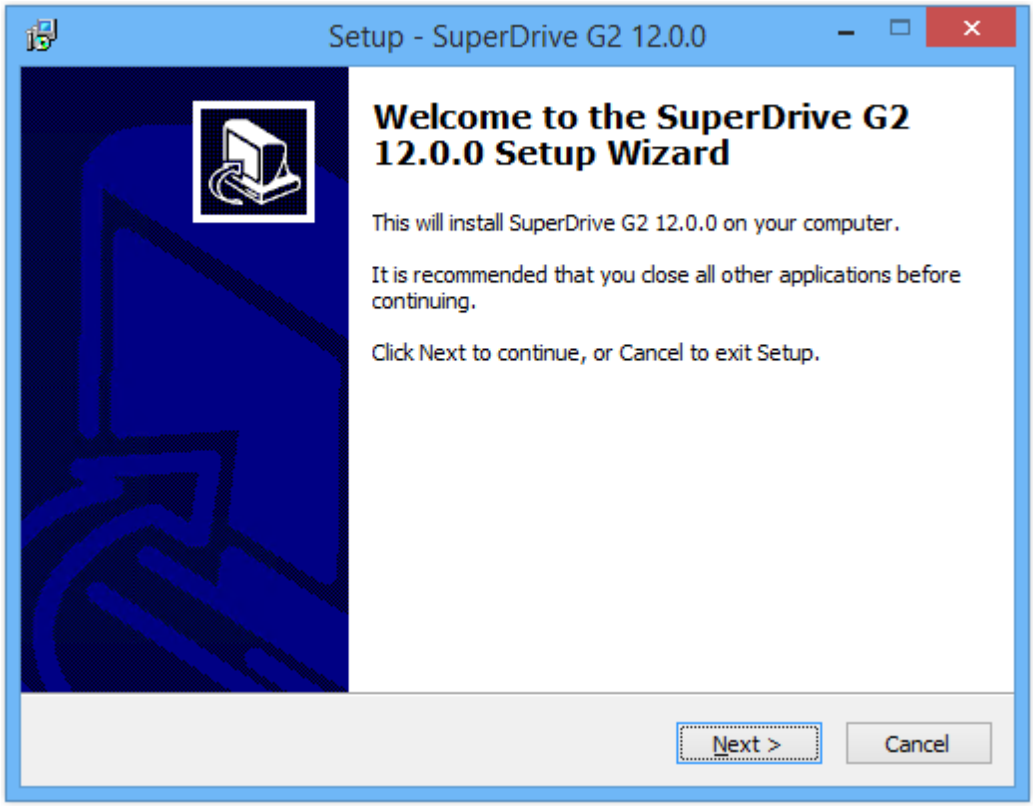
Setup - SuperDrive G2 12.0.0
Welcome to the SuperDrive G2 12.0.0 Setup Wizard
This will install SuperDrive G2 12.0.0 on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

6. In the install wizard, respond to the License Agreement, then click Next.

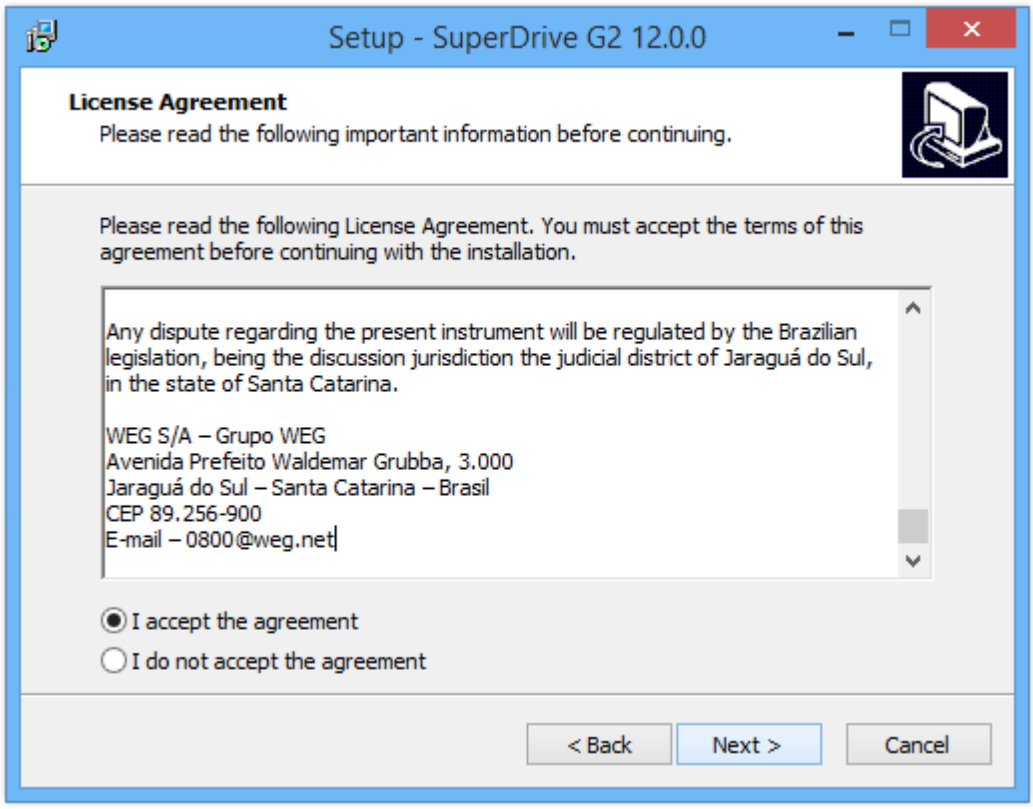
Setup - SuperDrive G2 12.0.0
License Agreement
Please read the following important information before continuing.
Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.
Any dispute regarding the present instrument will be regulated by the Brazilian legislation, being the discussion jurisdiction the judicial district of Jaraguá do Sul, in the state of Santa Catarina.
WEG S/A – Grupo WEG
Avenida Prefeito Waldemar Grubba, 3.000
Jaraguá do Sul – Santa Catarina – Brasil
CEP 89.256-900
E-mail – 0800@weg.net
I accept the agreement
I do not accept the agreement
< Back
Next >
Cancel

7. Click Next.

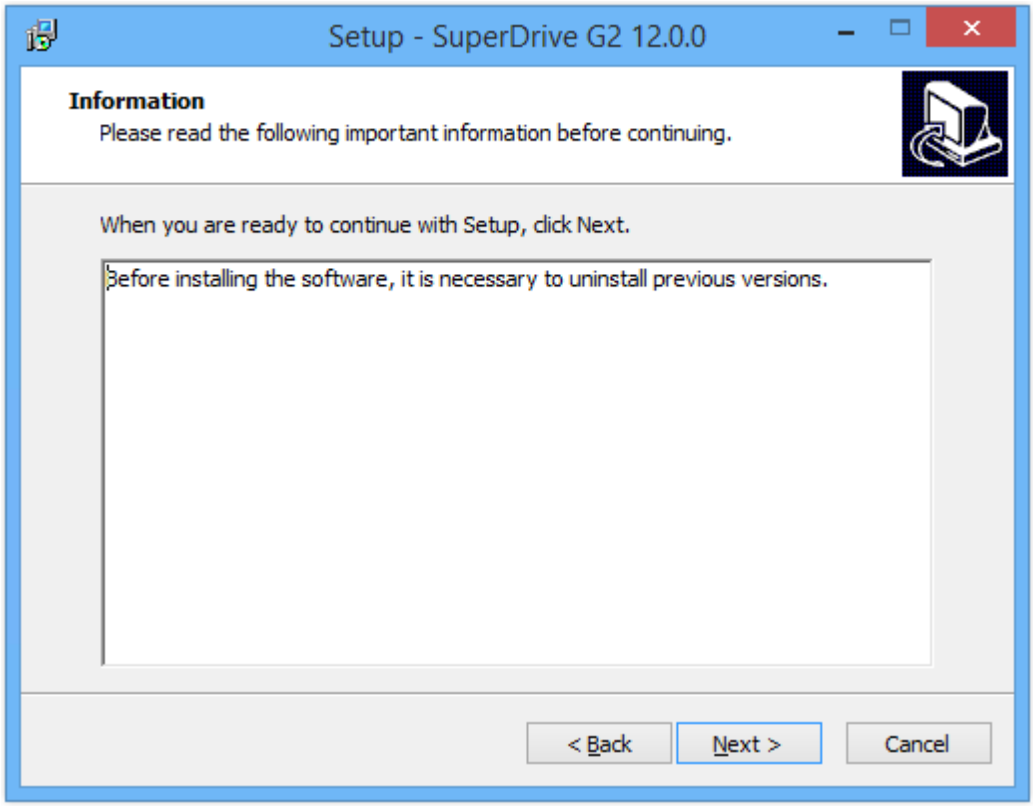
Setup - SuperDrive G2 12.0.0
Information
Please read the following important information before continuing.
When you are ready to continue with Setup, click Next.
Before installing the software, it is necessary to uninstall previous versions.
< Back
Next >
Cancel

8. Specify an empty folder within which to install SuperDrive G2. Verify that the installation location is correct and that you have available disk space for the installation.

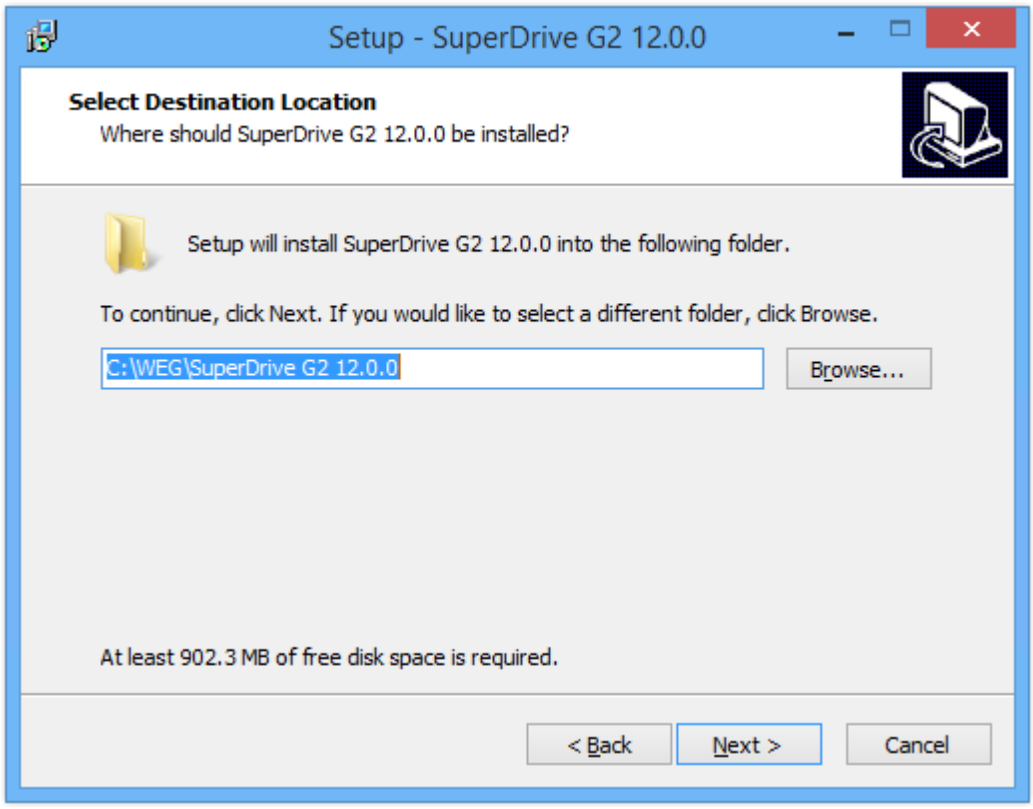
Setup - SuperDrive G2 12.0.0
Select Destination Location
Where should SuperDrive G2 12.0.0 be installed?
Setup will install SuperDrive G2 12.0.0 into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\WEG\SuperDrive G2 12.0.0
Browse...
At least 902.3 MB of free disk space is required.
< Back
Next >
Cancel

9. Confirm to create the empty folder.

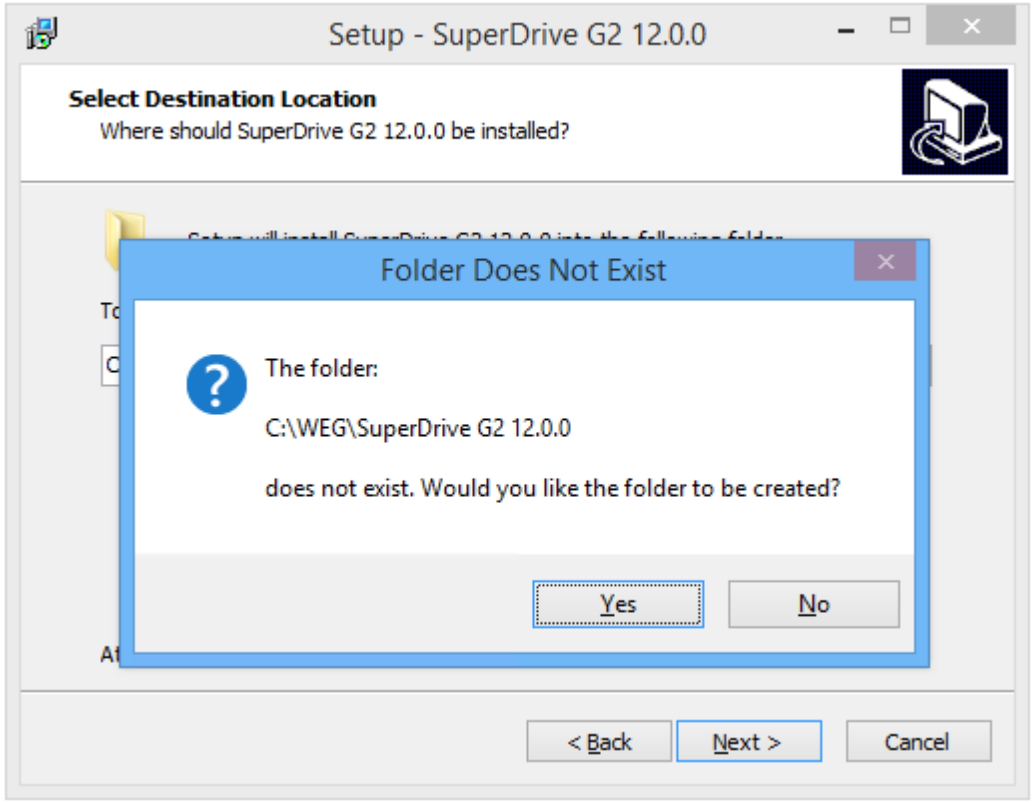

10. Click Next.

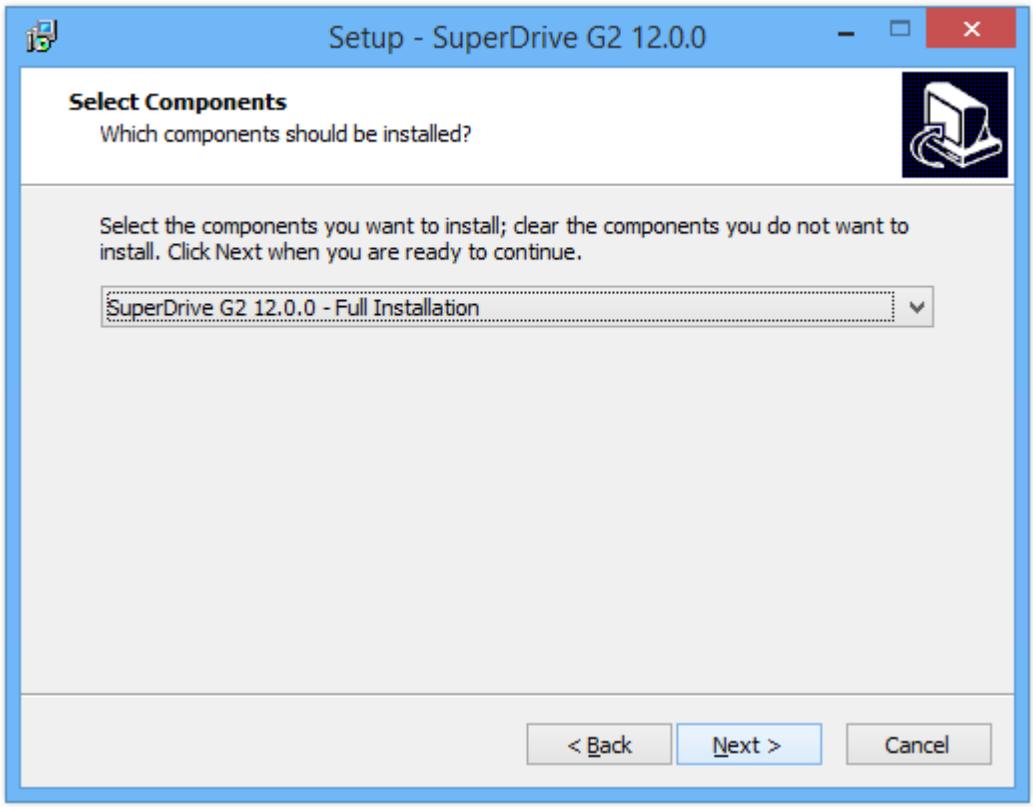
Setup - SuperDrive G2 12.0.0
Select Components
Which components should be installed?
Select the components you want to install; clear the components you do not want to install. Click Next when you are ready to continue.
SuperDrive G2 12.0.0 - Full Installation
< Back
Next >
Cancel

11. Select the program group to create program's shortcuts and click Next.

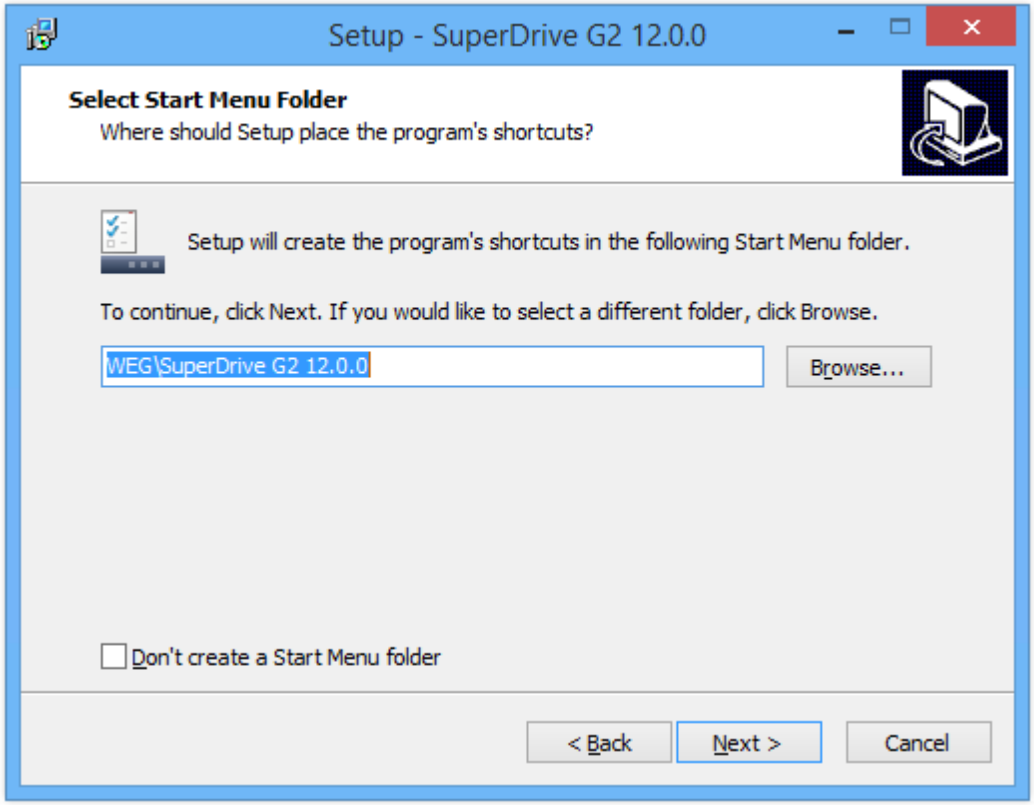
Setup - SuperDrive G2 12.0.0
Select Start Menu Folder
Where should Setup place the program's shortcuts?
Setup will create the program's shortcuts in the following Start Menu folder.
To continue, click Next. If you would like to select a different folder, click Browse.
WEG\SuperDrive G2 12.0.0
Browse...
Don't create a Start Menu folder
< Back
Next >
Cancel

12. Select the program's shortcuts you want as additional icons: create a desktop icon and create a quick launch icon. Click Next.

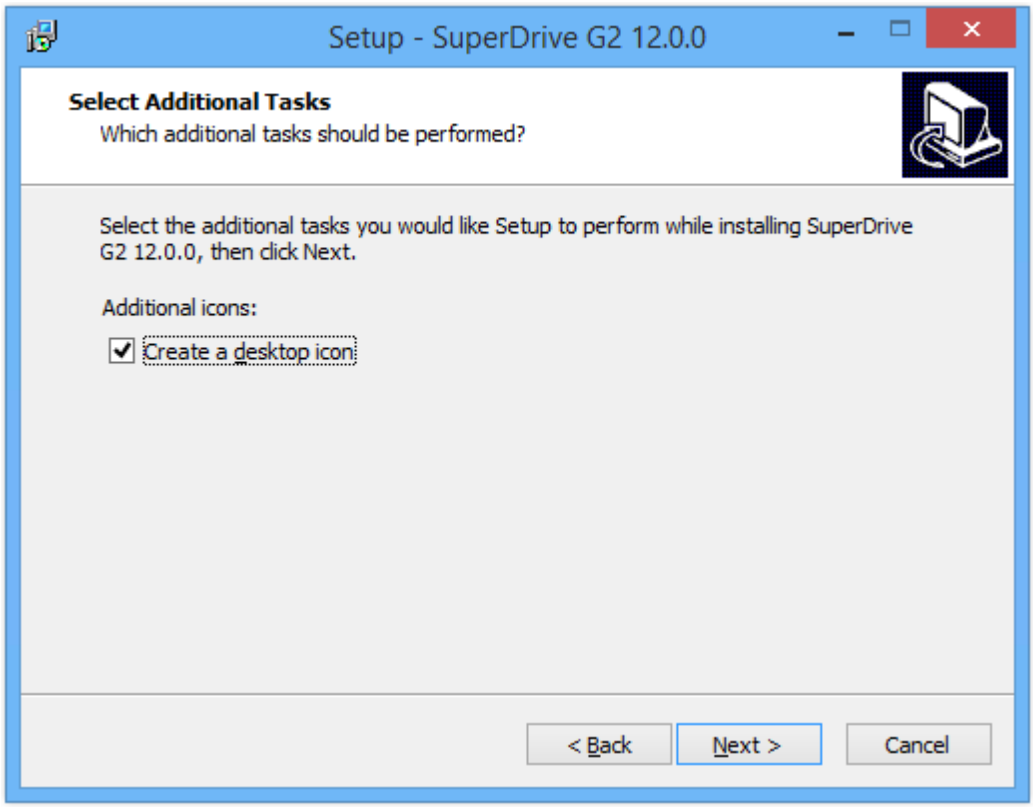
Setup - SuperDrive G2 12.0.0
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing SuperDrive G2 12.0.0, then click Next.
Additional icons:
Create a desktop icon
< Back
Next >
Cancel

13. Please review or change any settings. Click Install to begin the installation.

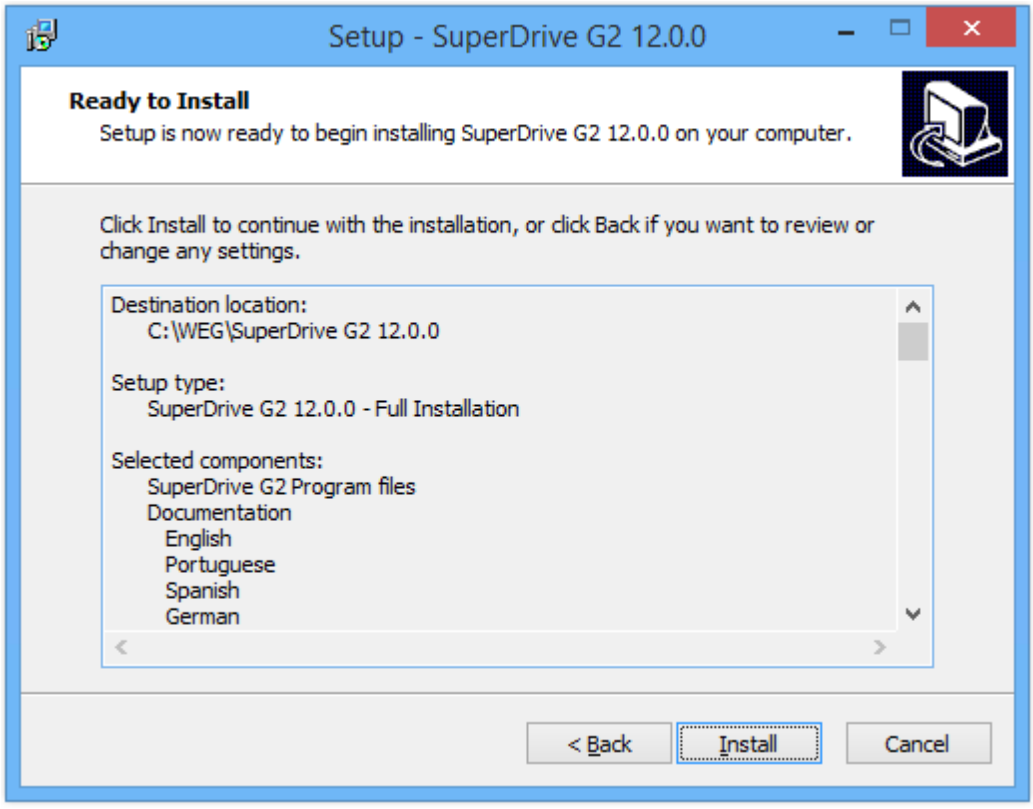

14. Click Finish to complete the setup.

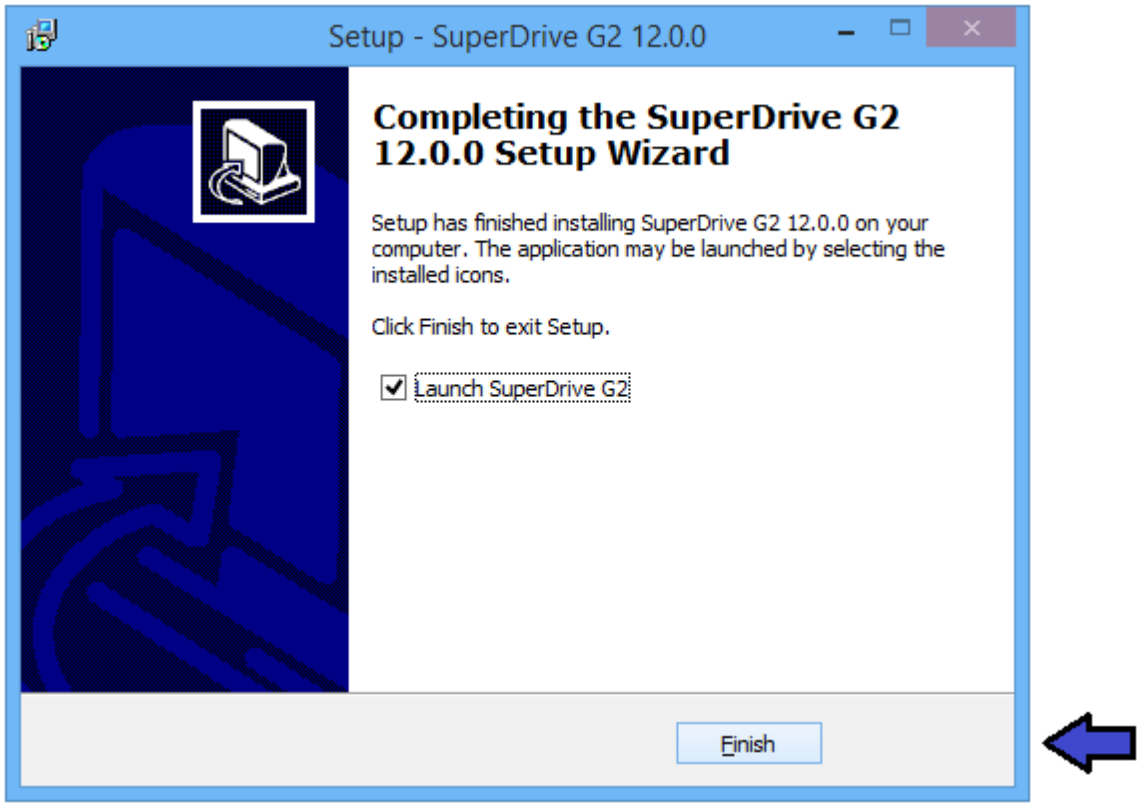
Setup - SuperDrive G2 12.0.0
Completing the SuperDrive G2 12.0.0 Setup Wizard
Setup has finished installing SuperDrive G2 12.0.0 on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Launch SuperDrive G2
Finish

3.5 Uninstalling

If necessary, you can uninstall SuperDrive G2 using the following procedures.

Uninstall

NOTE!
As indicated below, use the Programs and Features utility to remove SuperDrive G2. Do not manually delete files and folders.

Windows 8.1

1. You must be logged in as an administrator to remove the program; if you're using a standard account, then you can not remove the software;

2. If User Account Control (UAC) is enabled (Control Panel > User Accounts > Change User Account Control Settings), you will be notified before starting the removal and try to make a change in the Windows configuration; click Yes to confirm that you allow the program to make changes to your computer, otherwise you can not remove the program;

3. Right mouse click on Start button, and then select Programs and Features option.

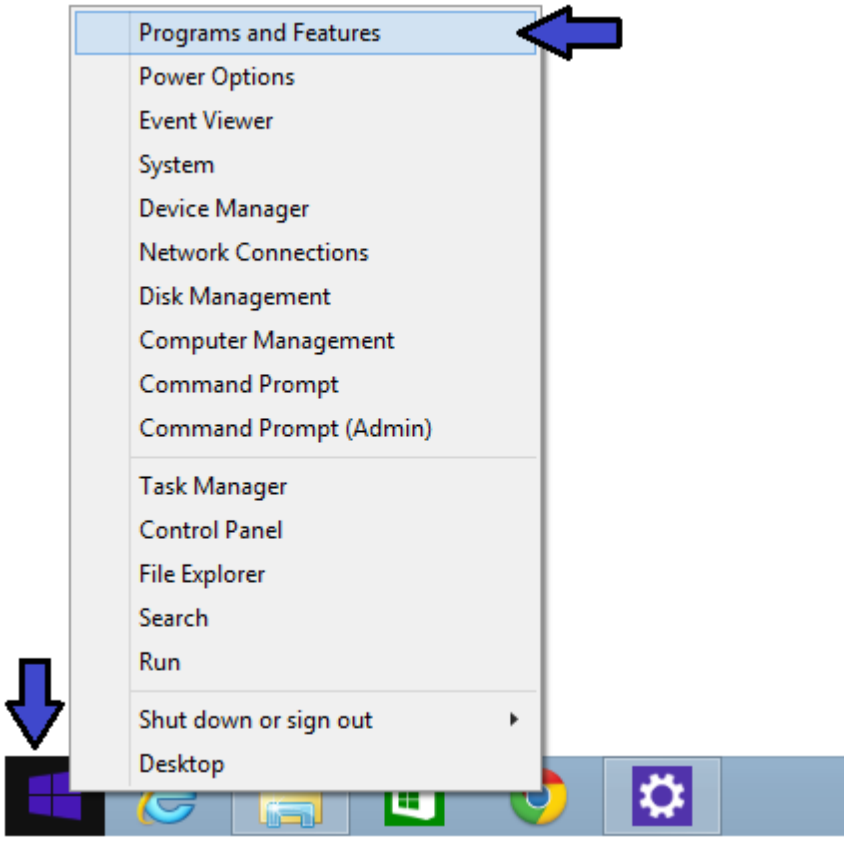

4. Select SuperDrive G2 from the list and click Uninstall.

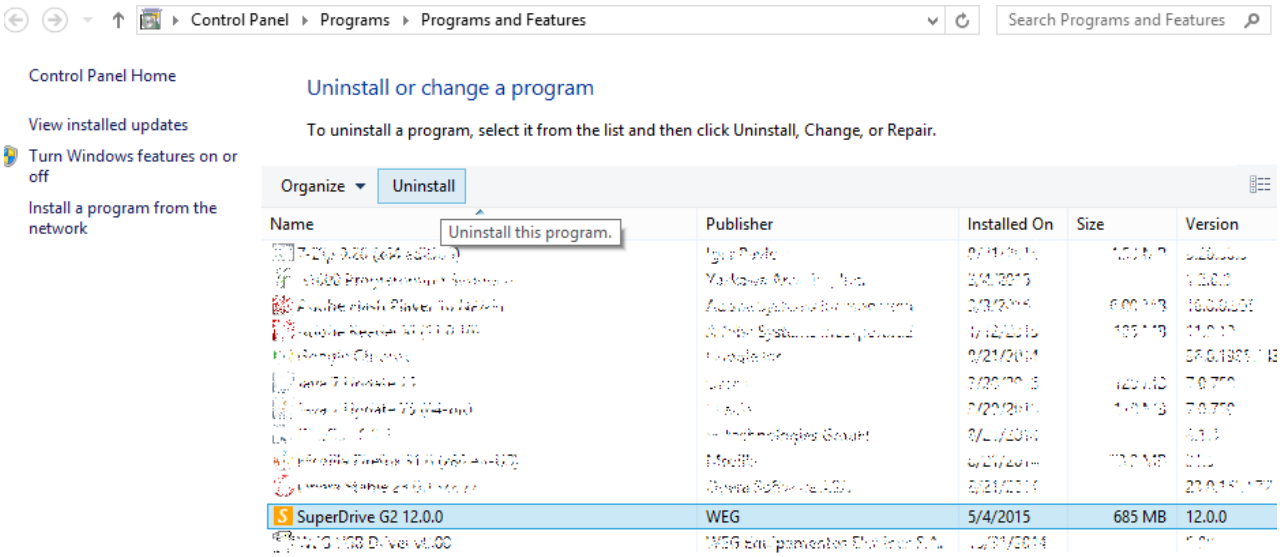

5. Follow the instructions to remove the software.

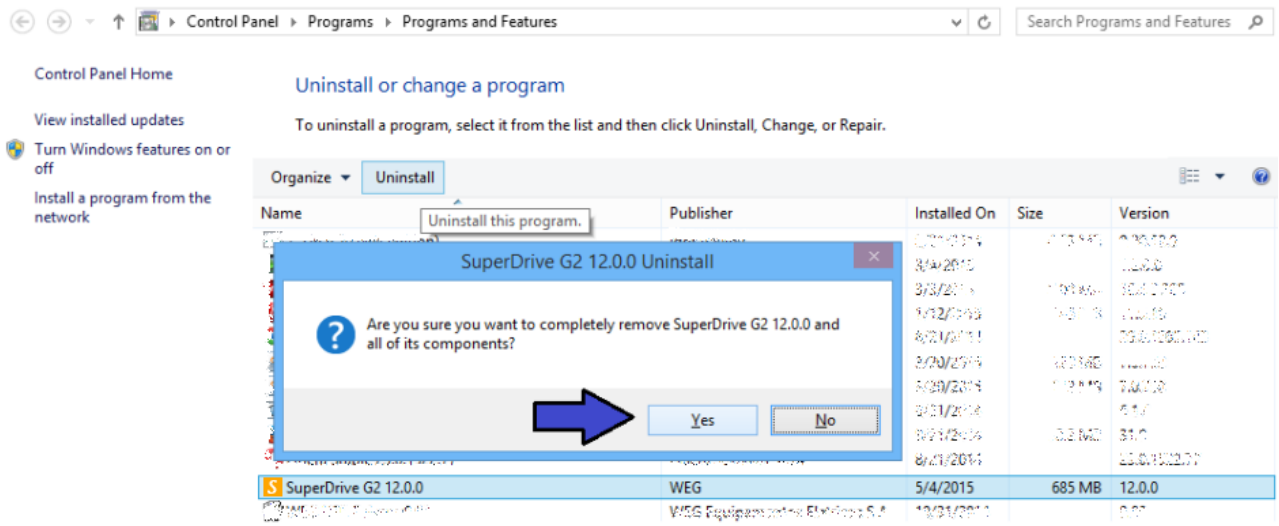

Windows 7 / Vista

1. You must be logged in as an administrator to remove the program; if you're using a standard account, then you can not remove the software;

2. If User Account Control (UAC) is enabled (Control Panel > User Accounts > Change User Account Control Settings), you will be notified before starting the removal and try to make a change in the Windows configuration; click Yes to confirm that you allow the program to make changes to your computer, otherwise you can not remove the program;

3. From your system's Start menu, choose Control Panel.

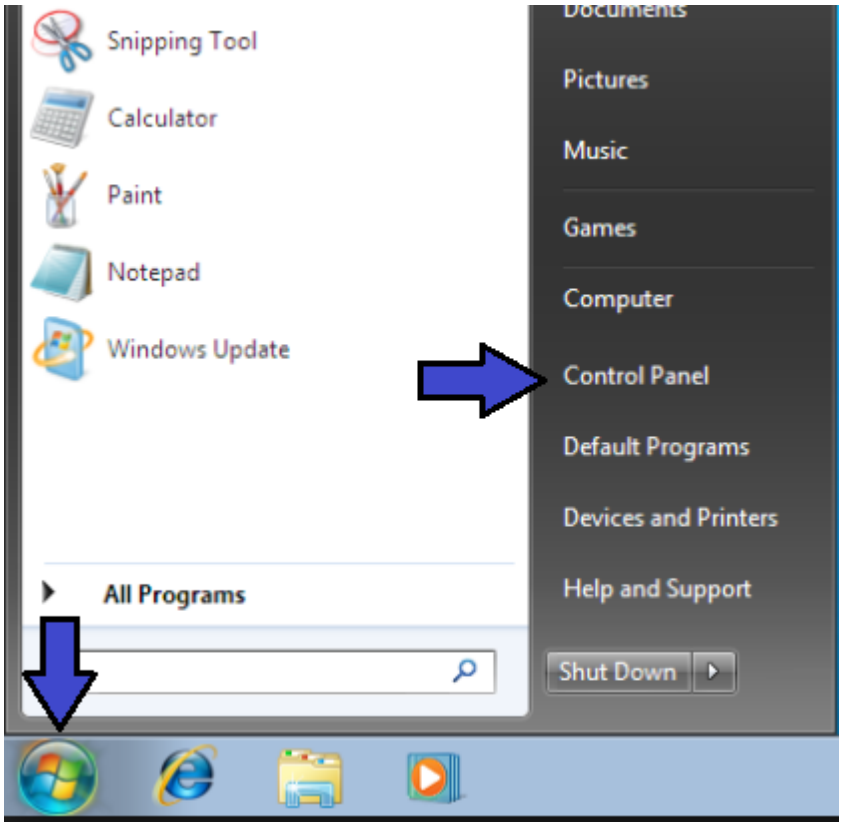

4. Double-click the Programs and Features icon.

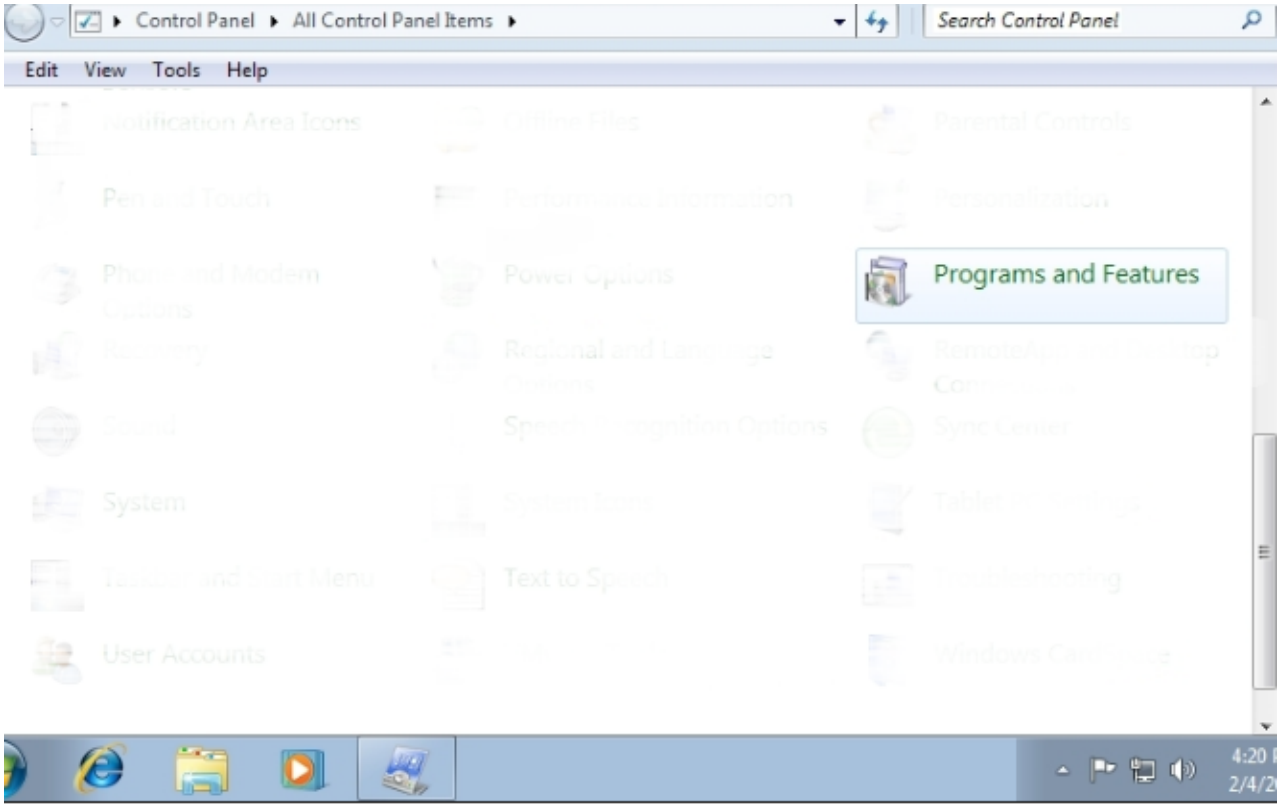

5. Select SuperDrive G2 from the list and click Uninstall.

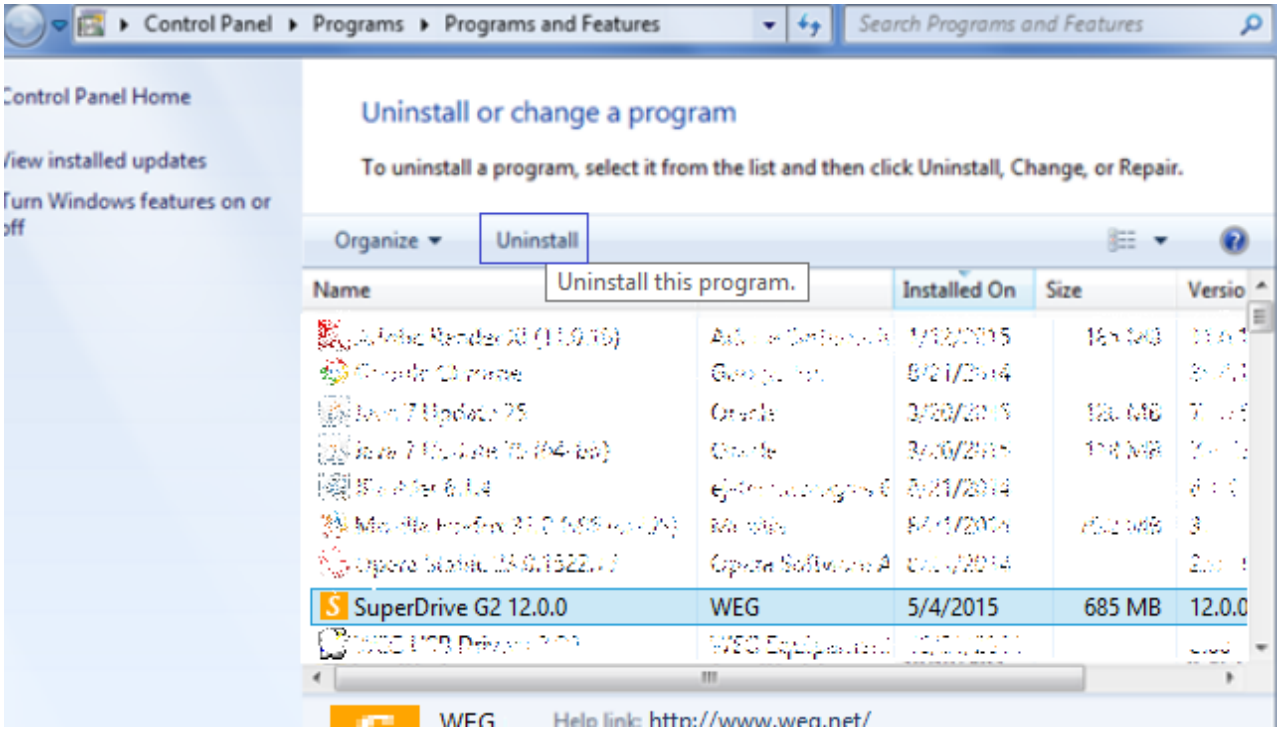

6. Follow the instructions to remove the software.

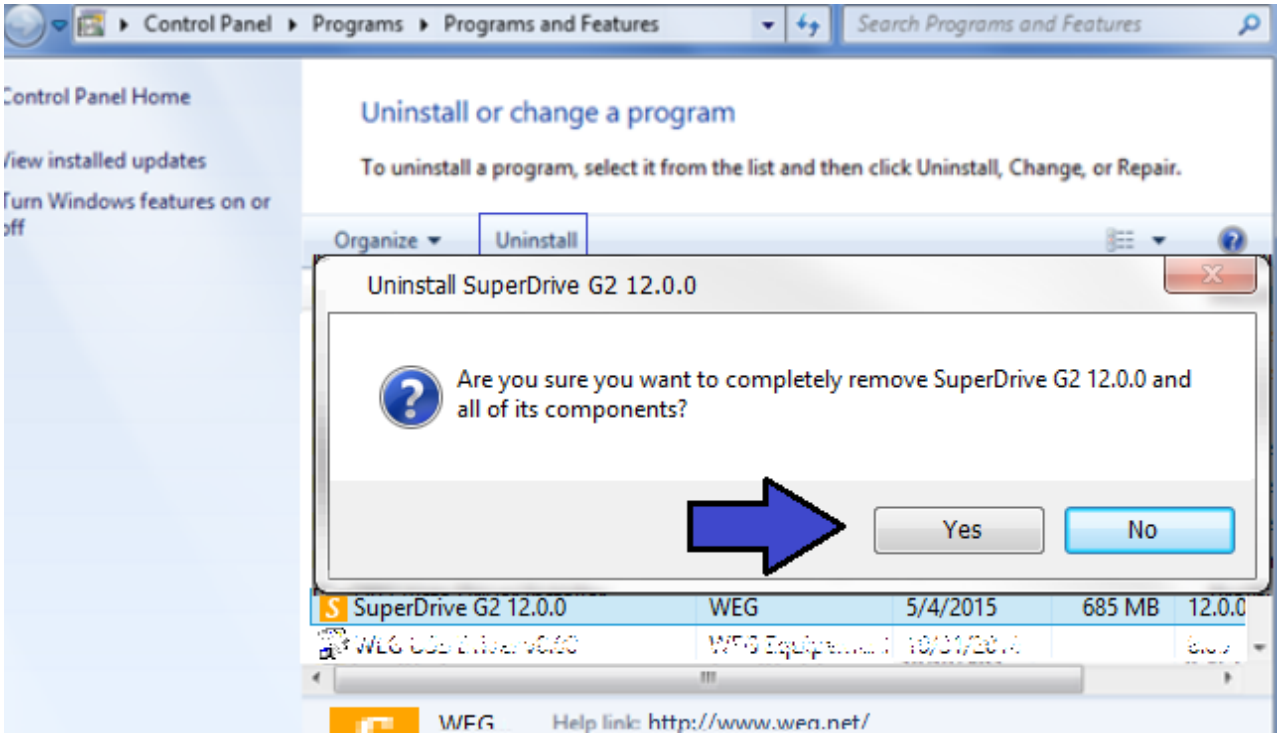
Control Panel ▸ Programs ▸ Programs and Features
Search Programs and Features
Control Panel Home
View installed updates
Turn Windows features on or off
Uninstall or change a program
To uninstall a program, select it from the list and then click Uninstall, Change, or Repair.
Organize
Uninstall
Uninstall SuperDrive G2 12.0.0
Are you sure you want to completely remove SuperDrive G2 12.0.0 and all of its components?
Yes
No
SuperDrive G2 12.0.0
WEG
5/4/2015
685 MB
12.0.0
Help link: http://www.weg.net/

3.6 USB Driver

Use the USB driver that comes with SuperDrive G2.

Follow the installation instructions.

The USB driver can be found in the USB_Driver folder where SuperDrive G2 is installed.

Example: C:\WEG\SuperDrive G2 12.0.0\USB_Driver

4 Menus

Project
New
Open
Close
Save
Save As
Remove
Import
Export
Change Voltage
Print
Project Information
Exit

Drive
Identify Drive
Communication Setup
Security System
Security System (Session)
New Parameters File
Edit Parameters File
Remove Parameters File
Export Parameters File
Read Parameters from Drive
Write Parameters to Drive
Monitor Parameters
Monitor using Keypad
Monitor Status
Monitor Speed
Reference
Trend
Remove Trend File
Export Trend File
Trace
Remove Trace File
Export Trace File

Tools
Options

Help
Contents
About

4.1 Project

New
Open
Close
Save
Save As
Remove
Import
Export
Change Voltage
Print
Project Information
Exit

4.1.1 New

ACCESS

Toolbar:
Menu: Project > New
Shortcut Key: Ctrl+N

FUNCTION

Creates a new project with a standard name.

DESCRIPTION

Drive Identification window is presented. See Identify Drive.

4.1.2 Open

ACCESS

Toolbar:
Menu: Project > Open
Shortcut Key: Ctrl+O

FUNCTION

Opens a previously saved project.

DESCRIPTION

User must select a project folder and open the project.
The project name and the drive information are shown in the Project Window.

4.1.3 Close

ACCESS

Toolbar:
Menu: Project > Close
Shortcut Key: none

FUNCTION

Closes the project.

DESCRIPTION

If the project contains unsaved data, a save request dialog will be shown.

4.1.4 Save

ACCESS

Toolbar:
Menu: Project > Save
Shortcut Key: Ctrl+S

FUNCTION

Saves the project.

DESCRIPTION

Enabled if the project has unsaved changes.

When the project is first time saved, a dialog is shown with the following information:

- Name - type a name for the new project. If the specified name is invalid or already exists, a warning message will be prompted.
- Location - a default location is shown, but can be changed.
- Folder - view only.
- Description - type the project description. It can be changed later in the Project Information.

4.1.5 Save As

ACCESS

Toolbar:
Menu: Project > Save As
Shortcut Key: Ctrl+D

FUNCTION

Saves a project with different name.

DESCRIPTION

Enabled when a project is created or opened.

When Save As function runs, a dialog is shown with the following information:

- Name - type a name for the new project. If the specified name is invalid or already exists, a warning message will be prompted.
- Location - a default location is shown, but can be changed.
- Folder - view only.
- Description - type the project description. It can be changed later in the Project Information.

4.1.6 Remove

ACCESS

Toolbar:
Menu: Project > Remove
Shortcut Key: none

FUNCTION

Erases the current project.

DESCRIPTION

Enabled when a project is open.

When Remove function runs, a confirmation dialog is shown with the following information:

- Name - name of the project which is going to be deleted.
- Location - a default location is shown.
- Folder - project's location is shown.
- Description - the project description is shown.
- Button OK confirms the exclusion of current project, and Cancel button keeps the current project.

4.1.7 Import

ACCESS

Toolbar:
Menu: Project > Import
Shortcut Key: none

FUNCTION

Imports a previously exported project.

DESCRIPTION

User must select a project file with extension sdg2z and click the Import button.

This project will be imported into the default folder for projects.

If the project or any of the files already exist, the user will receive a confirmation box to overwrite the project.

If the user chooses to overwrite the conflicting files will be overwritten, otherwise, no files will be overwritten and the project will not be imported.

If, during import of the project, another project is open, then it will be closed. If data is not

saved, a confirmation window appears allowing the user to save changes, discard them, or cancel the operation.

When completed the import process, the project will be imported automatically open.

4.1.8 Export

ACCESS

Toolbar:
Menu: Project > Export
Shortcut Key: none

FUNCTION

Exports the current project to a file.

DESCRIPTION

The project must be open.

Click the Export button. Initially the default filename is the name of the project, which can be changed.

Clicking the save button, the file is created with the extension sdg2z which can be imported using the Import function.

4.1.9 Change Voltage

ACCESS

Toolbar:
Menu: Project > Change Voltage
Shortcut Key: none

FUNCTION

Allow to migrate the currently opened project to a new one, with another model of CFW11 drive.

DESCRIPTION

User must have a project opened.
This option loads an wizard to help changing the model of drive and checking its parameters.
If there are no compatible drives to the current model, no options will be presented to choice.

4.1.10 Print

ACCESS

Toolbar:
Menu: Project > Print
Shortcut Key: Ctrl+P

FUNCTION

Prints the parameters file selected in the Project Window.

DESCRIPTION

Prints all parameters stored in the parameters file:

- Parameter number.
- User's settings.
- Unit.

4.1.11 Project Information

ACCESS

Toolbar:
Menu: Project > Project Information
Shortcut Key: Ctrl+I

FUNCTION

Adds or modifies project information.

DESCRIPTION

Shows the following information:

- Name - the name of the project. View only.
- Location - the location of the project. View only.
- Folder - the folder where the project is. View only.
- Description - type the project description.

Name, Location and folder can not be changed after it is first time saved. See Save.

Description can be changed at any time.

4.1.12 Exit

ACCESS

Toolbar:
Menu: Project > Exit
Shortcut Key: Ctrl+Q

FUNCTION

Exits SuperDrive G2.

DESCRIPTION

SuperDrive G2 asks the user if he wishes to exit.
If the project contains unsaved data, a save request dialog will be shown.

4.2 Drive

Identify Drive
Communication Setup
Security System
Security System (Session)
New Parameters File
Edit Parameters File
Remove Parameters File
Export Parameters File
Read Parameters from Drive
Write Parameters to Drive
Monitor Parameters
Monitor Using Keypad
Monitor Status
Monitor Speed Reference
Trend
Remove Trend File
Export Trend File
Trace
Remove Trace File
Export Trace File

4.2.1 Identify Drive

ACCESS

Toolbar:
Menu: Drive > Identify Drive
Shortcut Key: none

FUNCTION

Automatic identification of the drive (drive must be connected to computer) or user select the drive manually.

APPEARANCE

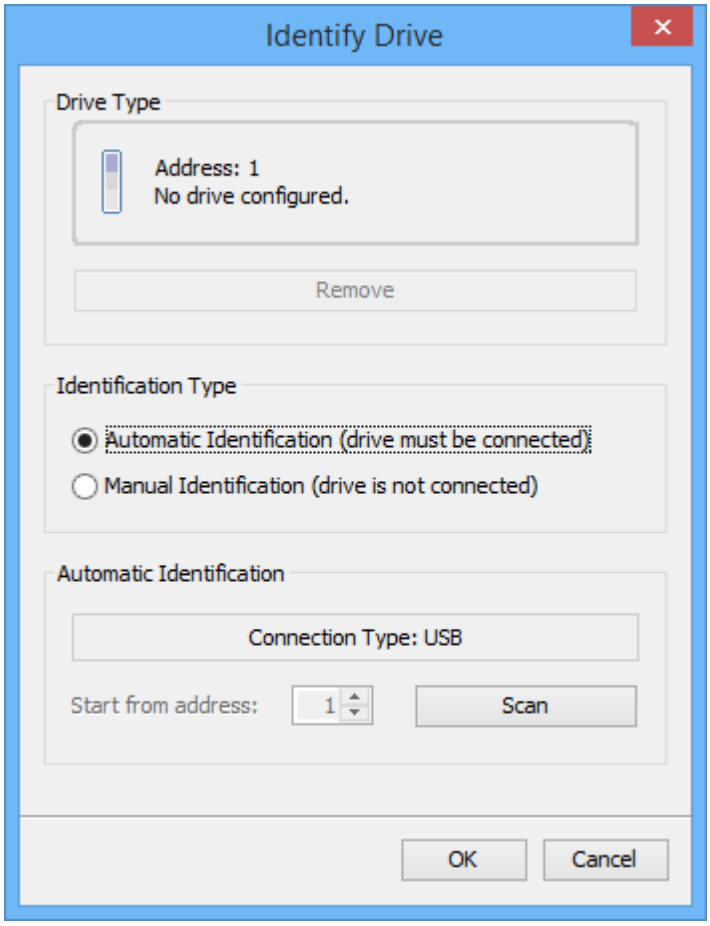

DESCRIPTION

Drive Type

If no drive is configured, it shows the address and "No Drive Configured" message.

If any drive is configured, the following information is displayed:

- Address.
- Type.
- Firmware version.
- Nominal voltage.
- Nominal current.

Remove button: clears the Drive Type field (remove the drive configuration).

Automatic Identification

Connection Type: USB => When USB is selected in Communication Setup window.

Connection Type: Serial => When Serial is selected in Communication Setup window.

Connection Type: Bluetooth => When Bluetooth is selected in Communication Setup window.

Scan button: scans for drives connected to the computer. If any drive is connected, configuration is presented. The scan is finished when a drive is identified.

Start from Address button: to select the initial address of the scan when the connection type is serial; for USB connection, this button is disabled.

Manual Identification

Connection Type: ----- => The drive need not to be connected to the computer.

Model Button: select the drive model, firmware version and nominal voltage / current.

Accessory button: selects the accessory when it exists; select accessory name and firmware version.

General Buttons

Ok button: applies changes and closes the window.

Cancel button: discard all changes and closes the window.

4.2.2 Communication Setup

ACCESS

Toolbar:
Menu: Drive > Communication Setup
Shortcut Key: none

FUNCTION

This dialog box allows you to configure the communication port of the computer to match the setting on the drive for proper communication.

APPEARANCE

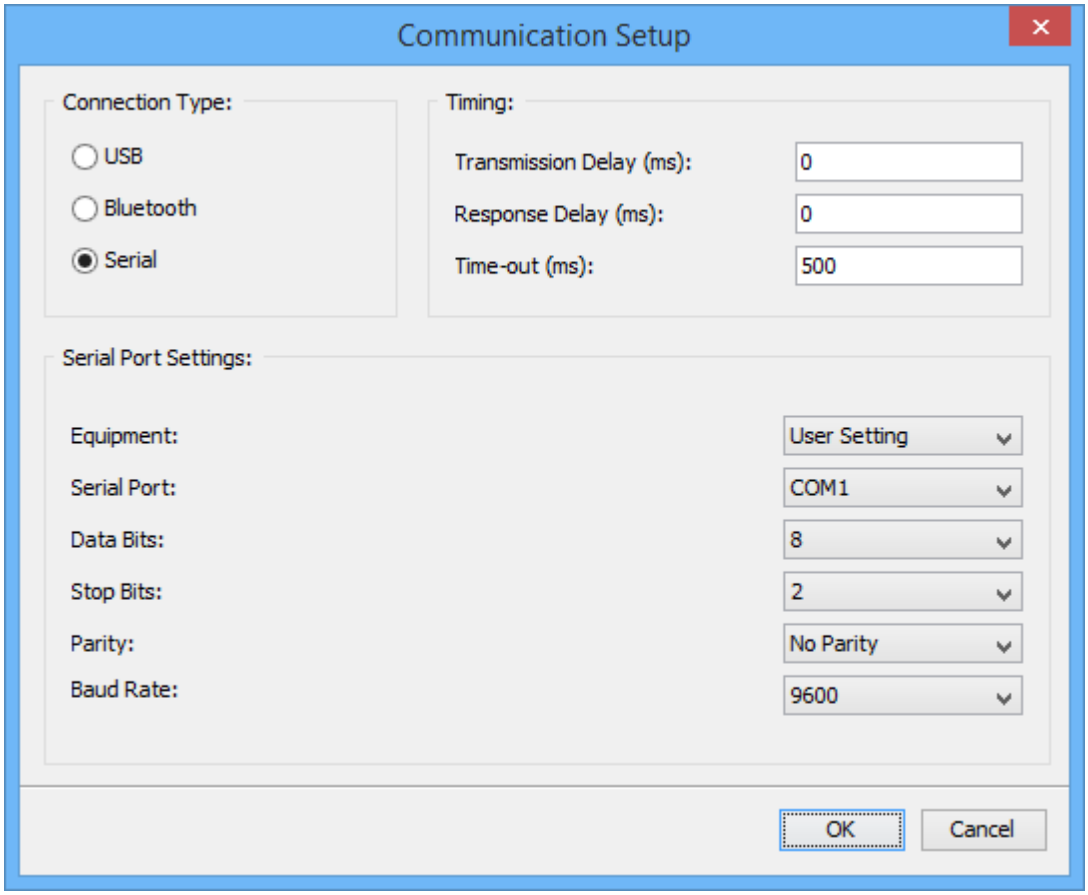

DESCRIPTION

Select the connection type: USB, Bluetooth or Serial.

Serial

For RS232 you need to adjust some values. The communication protocol is Modbus-RTU.

Connection Type	Serial Port Settings	Range	Default
RS232	Baud rate (bps)	4800, 9600, 19200, 38400 or 57600	9600
	Data bits	8	8
	Stop bits	1 or 2	2
	Parity	No Parity, Even or Odd	No Parity

Besides the possibility of manual configuration of the fields, you can load the factory default values for each drive. Select the model in the combobox "Equipment". In addition to the default values, the combobox also has the user setting, this is saved every time a change is made to the settings listed in the table above.

USB

For USB no adjustment is necessary.

Get Version Button: Click this button to read the version of USB driver installed on the microcomputer.

Installed Version Field: displays the version of USB driver installed on the microcomputer.

Recommended Version Field: displays the correct version of USB driver should be installed on the computer.

Note Field: displays a message indicating whether the USB driver is installed OK or not.

Message on Note Field	User Action
USB driver Ok!	Nothing to do, USB driver correctly installed.
Reasons - No drive (equipment) is connected to the PC - Old USB driver - No USB driver installed See online help.	Install the USB driver available in USB_Driver\USBIO folder where SuperDrive G2 is installed. To install: run setup.exe and follow the installation wizard.

USB and Serial

The following timing settings are available for both USB and Serial:

Timing	Range	Default
Transmission Delay (ms)	0 ... 20000	0
Response Delay (ms)	0 ... 20000	0
Time-out (ms)	100 ... 20000	500

For more details see Drive Parametrization.

Bluetooth

The following timing settings are available for Bluetooth:

Timing	Range	Default
Transmission Delay (ms)	0 ... 20000	0
Response Delay (ms)	0 ... 20000	50
Time-out (ms)	100 ... 20000	500

Buttons

Ok: applies changes and closes the window.
Cancel: discard all changes and closes the window.

4.2.3 Security System

ACCESS

Toolbar:
Menu: Drive > Security System
Shortcut Key: none

FUNCTION

The Security System allows you to configure a password to lock online parameters edition

during a communication between PC and the drive.
The offline activities and/or the execution of commands are not locked by Security System.

DESCRIPTION

The Security System - when available - allows to enable, disable or change current drive's password. These operations are done in online mode.

SuperDrive G2 shows a message alerting the user if current drive does not have Security System capabilities.

WARNING!
Define a strong password to the Security System. Use uppercase and lowercase letters and numbers intercalated.
Minimal requirement for password in SuperDrive G2 is one digit, but is strongly recommended to define a password with at least eight characters.
Keep your password in a safe place.

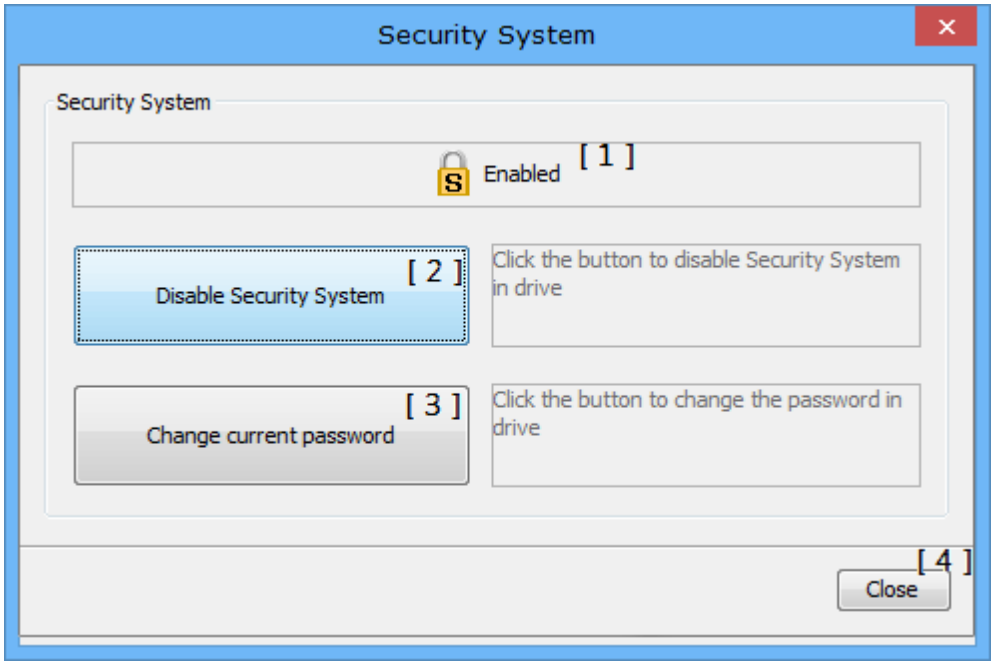

[1] Presents the current Security System state. It could be: Enabled, Disabled or Communication Failure;
[2] This button Disables the Security System (when the current state is Enabled) or Enables the Security System (when the current state is Disabled);
[3] This button changes the current Security System password;
[4] This button closes the Security System window.

4.2.4 Security System (Session)

ACCESS

Toolbar:
Menu: Drive > Security System (Session)
Shortcut Key: none

FUNCTION

The Security System (Session) allows you to temporarily unlock online parameters edition during a communication between PC and the drive. By this option, it is not necessary to disable permanently the Security System. So, when the current project is closed the Security System is automatically enabled, locking the online parameters edition.

DESCRIPTION

The Security System (Session) - when available - allows to online parameters editing. This operation is done in online mode.

SuperDrive G2 shows a message alerting the user if current drive does not have Security System capabilities.

To allow the temporary online parameters edition it is mandatory you inform the password which is stored in drive.

This option is only available if the drive (which is connected to PC) already have a password to the Security System.

To access any functionality with access to edit a parameter, SuperDrive G2 asks if the user wants to allow the temporary online edition of parameters. The answer to this question keeps in SuperDrive G2 until the current project is closed.

To lock the temporary online edition of parameters just close the current project, or click over the icon - it corresponds to the Security System (Session) - and confirm the locking of online parameters edition in the confirmation message.

4.2.5 New Parameters File

ACCESS

Toolbar:
Menu: Drive > New Parameters File
Shortcut Key: none

FUNCTION

Creates a new parameters file with factory setting.

DESCRIPTION

If the project does not exist, a project name is requested to save.
If the project already exists, a parameters file name is requested.

Buttons

Save: saves the parameters file and closes window.

Cancel: discard all changes and closes the window.

The filename must be specified by user and it it created with factory setting.
The file created is shown in Project Window (list of drive files).
This new file can be changed using Edit Parameters File.

4.2.6 Edit Parameters File

ACCESS

Toolbar:
Menu: Drive > Edit Parameters File
Shortcut Key: none

FUNCTION

Opens a previously saved parameters file. Allows to view and change the parameters in the offline editor.

DESCRIPTION

User must select a filename in the Project Window and double click on the filename or click on edit parameters file.

The program will show an overview of all the available parameters in a separate window. To edit a parameter double click on the parameter's user setting you would like to edit.

The following fields are available:

- Parameter number.
- Function.
- Minimum value.
- Maximum value.
- Factory setting.
- User's setting.
- Unit.

When the parameter is read-only, the user's setting field is disabled (it can't be edited).

The user types the parameter value and press Enter. Only values between minimum and maximum are allowed.

Some parameters shows a simple list of values in a single column. The user can select list entries with the mouse. Only one item can be selected at a time.

Buttons

Close: applies changes if user selects Yes and closes the window.

4.2.7 Remove Parameters File

ACCESS

Toolbar:
Menu: Drive > Remove Parameters File
Shortcut Key: none

FUNCTION

Removes the parameters file.

DESCRIPTION

User must select a filename in the Project Window.

SuperDrive G2 will ask the user to confirm deleting the file.

4.2.8 Export Parameters File

ACCESS

Toolbar:
Menu: Drive > Export Parameters File
Shortcut Key: none

FUNCTION

Exports the content of a parameters file to another file in CSV format.

DESCRIPTION

User must select a parameters file name in Project Window.

SuperDrive G2 requests user to confirm the file export. In affirmative case, a window is shown with the following options:

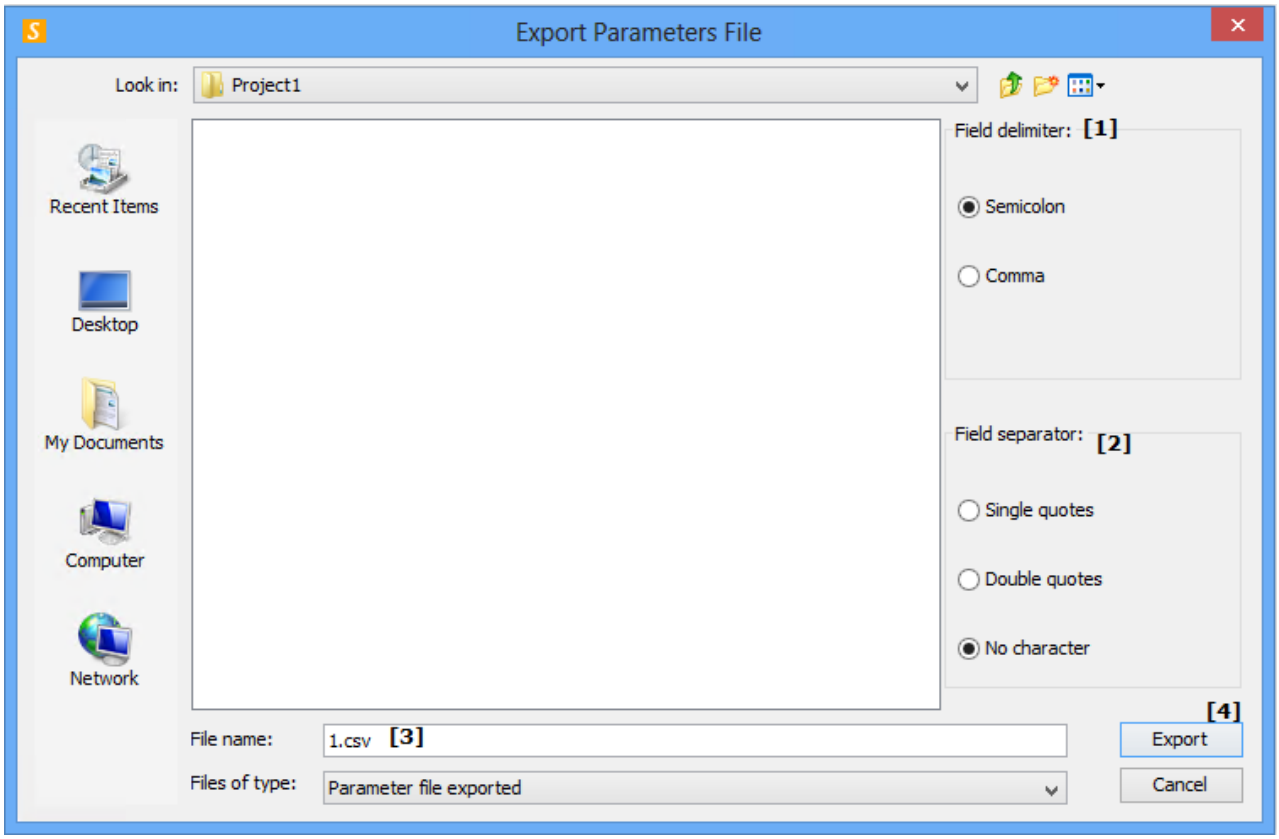

[1] Field delimiter. Options: semicolon or comma.
[2] Field separator. Options: single quotes, double quotes or without quotes.
[3] The name of the new file, in CSV format.
[4] Buttons to export and to cancel the export.

4.2.9 Read Parameters from Drive

ACCESS

Toolbar:
Menu: Drive > Read Parameters from Drive
Shortcut Key: none

FUNCTION

Reads all parameters from the drive to the computer.

DESCRIPTION

All the parameters are saved in a file in computer. The user specifies the filename. Later the user can view or edit the parameters.

4.2.10 Write Parameters to Drive

ACCESS

Toolbar:
Menu: Drive > Write Parameters to Drive
Shortcut Key: none

FUNCTION

Send all parameters from the computer to the drive.

DESCRIPTION

User must select a filename in the Project Window.
Some parameters can be changed only with the drive disabled (motor stopped).
Select the address of the drive you wish to send the parameters.

4.2.11 Monitor Parameters

ACCESS

Toolbar:
Menu: Drive > Monitor Parameters
Shortcut Key: none

FUNCTION

Monitors all parameters in a grid. Allows to view and change the parameters in the online editor.

DESCRIPTION

The program will show an overview of all the available parameters in a separate window. When SuperDrive G2 is online with a drive, it will show information from the drive being monitored. To edit a parameter double click on the parameter's user setting you would like to edit.

The following fields are available:

- Parameter number;
- Function;
- Minimum value;
- Maximum value;
- Factory setting;
- User's setting;
- Unit;
- Comparison.

When the parameter is read-only, the user's setting field is disabled (it can't be edited).

The user types the parameter value and press Enter. Only values between minimum and maximum are allowed.

In the online mode, to save the parameters in a file it is necessary confirming the action when the window is closed.

Some parameters shows a simple list of values in a single column. The user can select list entries with the mouse. Only one item can be selected at a time. When the user selects an item, any previously selected item is deselected first.

4.2.12 Monitor using Keypad

ACCESS

Toolbar:
Menu: Drive > Monitor using Keypad
Shortcut Key: none

FUNCTION

Monitors one parameter and sends commands to the drive.

DESCRIPTION

The following information related to the parameter are shown:

- Parameter number.
- Function.
- User's setting.
- Unit.

The user can view/change one parameter at a time.

Besides the parameters number there is a pair of tiny arrow buttons that let the user select the parameter number from an ordered sequence.

When the parameter is read-only, the user can't change the parameter value.

When the parameter can be changed, a button is available for changing the parameter's user setting.

Clicking on this button opens a new window where the user can change the parameter's user setting and press the Send button. Only values between minimum and maximum are allowed.

Some parameters shows a simple list of values in a single column. The user can select list entries with the mouse. Only one item can be selected at a time.

The drive commands window has buttons as described below.

Command Buttons

- Jog.
- Direction of rotation (forward/reverse).

- Local/Remote.
- Start.
- Stop.
- General Enable.
- General Disable.
- Reset.

To use these command buttons in SuperDrive G2, some parameters must be programmed to the serial/USB option:

- CFW-11 / CFW700 / CFW701 / CFW500 / CFW501 / MW500 - P0220...P0228;
- CFW100 - P220, P222, P226...P228;
- SSW-06 / SSW-07 / SSW-08 / SSW7000 - P220, P229, P230.

4.2.13 Monitor Status

ACCESS

Toolbar:
Menu: Drive > Monitor Status
Shortcut Key: none

FUNCTION

Shows the status of the drive.

DESCRIPTION

The drive status window has indicators as described below.

CFW-11 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Ramp Enable;
- Jog.

CFW700 / CFW701 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Ramp Enable;
- Jog.

CFW500 / CFW501 / MW500 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enabled;

- Motor running;
- Jog;
- Configuration Mode;
- Alarm;
- Fault.

CFW100 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enabled;
- Motor running;
- Jog;
- Configuration Mode;
- Alarm;
- Fault.

ECW500 Status

- Drive status;
- State of limiters;
- State of digital inputs;
- Events.

SSW-06 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Motor Running;
- Jog;
- Accelerating;
- Current Limit;
- Full Voltage;
- Decelerating;
- Braking;
- Reverting;
- Main Power On;
- Bypass.

SSW-07 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Motor Running;
- Jog;
- Accelerating;
- Current Limit;
- Full Voltage;
- Decelerating;
- Braking;
- Reverting;
- Main Power On;
- Bypass.

SSW-08 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Motor Running;
- Jog;
- Accelerating;
- Current Limit;
- Full Voltage;
- Decelerating;
- Braking;
- Reverting;
- Main Power On;
- Bypass.

SSW7000 Status

- Drive Status;
- Direction of Rotation: Forward/Reverse;
- Local/Remote;
- General Enable;
- Motor Running;
- Jog;
- Accelerating;
- Full Voltage;
- Bypass;
- Decelerating;
- Braking;
- Reverting;
- Delay P0831;
- Main Power On;
- Configuration Mode;
- Alarm;
- Fault.

4.2.14 Monitor Speed Reference

ACCESS

Toolbar:

Menu: Drive > Monitor Speed Reference
Shortcut Key: none

FUNCTION

Shows the speed reference of the drive.

DESCRIPTION

There are 6 fields which show data related to speed reference:

- Speed Reference - RPM or 13 bits

- Parameter
- User Setting
- Minimum
- Maximum
- New User Setting

The user can type a new value in New User Setting field and press Send button. Only values between minimum and maximum value are allowed.

The new value will appear in User Setting field after the drive has changed the value.

4.2.15 Trend

ACCESS

Toolbar:
Menu: Drive > Trend
Shortcut Key: none

FUNCTION

Captures signal values from drives and displays it as a graph. Data can also be saved, printed and exported.

Up to ten drive signals can be monitored.

The Trend is for low to medium sampling rates.

APPEARANCE

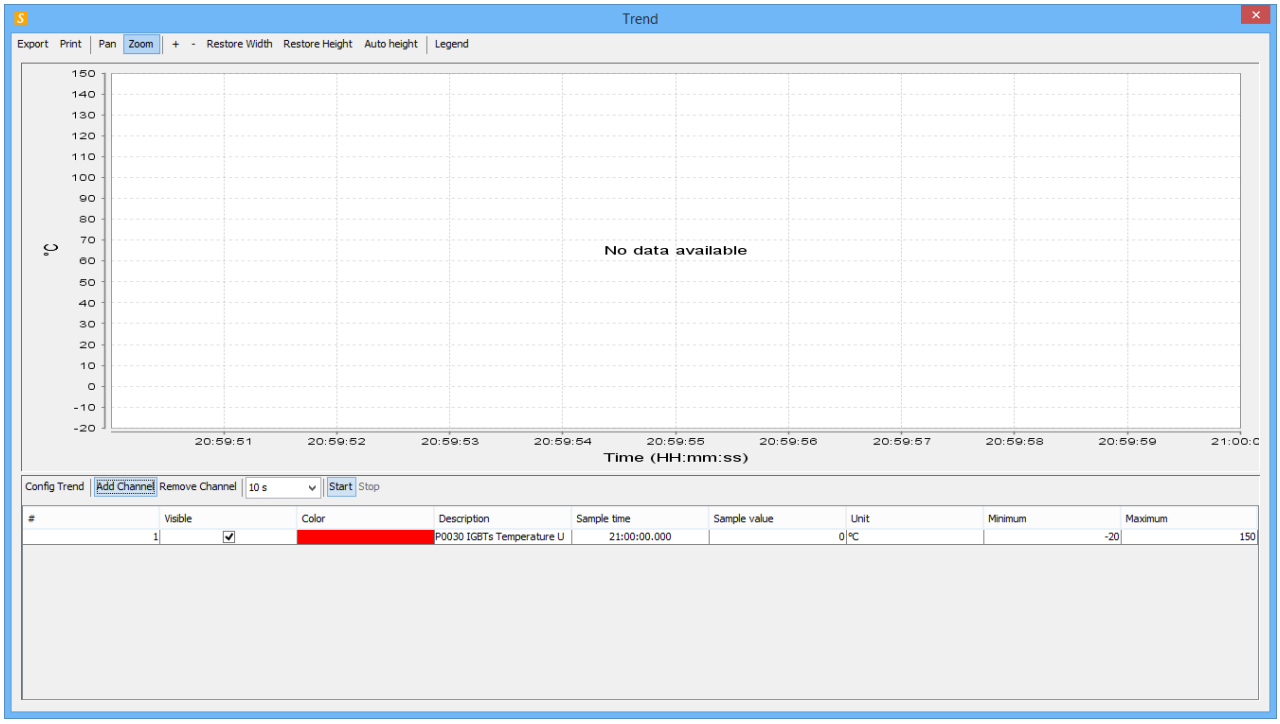

DESCRIPTION

Configuring the Trend

Adding Channels

To add a channel, choose Add Channel.

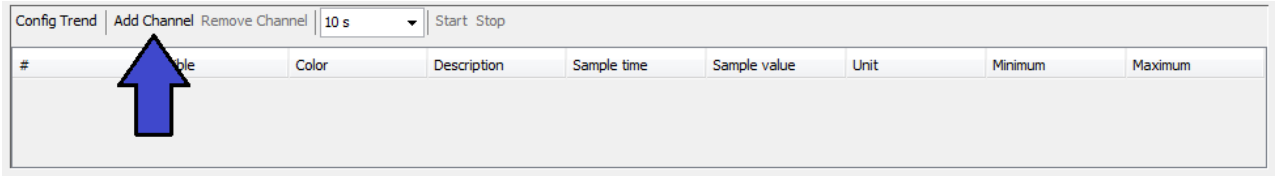

In the Add Channel dialog box, enter the channel information. Use the drop down list to select the channel variable.

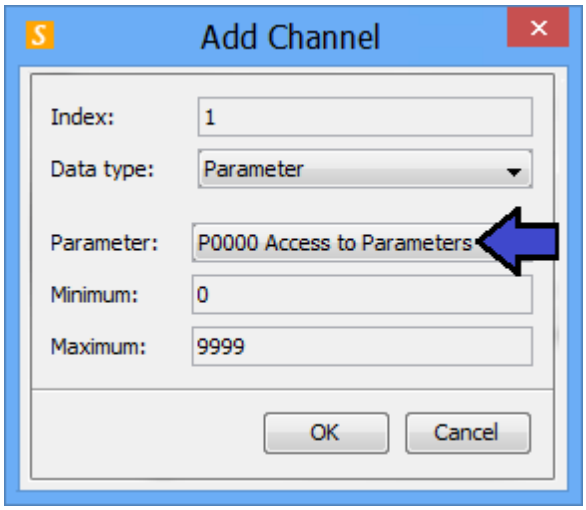

Once the channel is added to the trend, the range (upper and lower limits of Y-axis) and other properties related can be set.

To set the channel range and other properties:

1. Select the desired channel.
2. Set the maximum and minimum limits of the Y-axis labels and change the color of the line used to draw the signal.

To hide channels in the trend:

1. Select the desired channel.
2. Uncheck the visibility property.

NOTE!
To redisplay hidden channels, check the visibility property again.

Removing Channels

To remove a channel from the trend
1. Select the desired channel.
2. Choose Remove Channel.

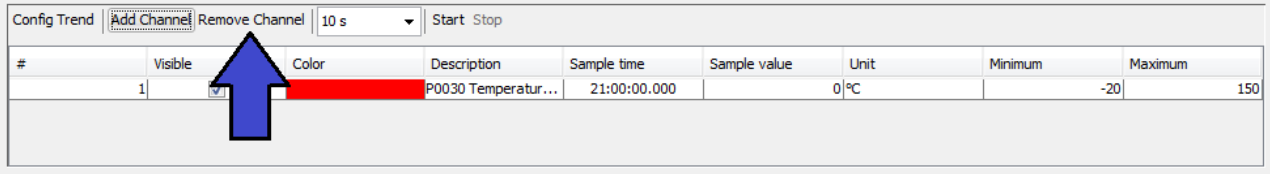

Configuring the Time Axis

The range of the time (horizontal axis) visible on the graph can be changed by using the Trend Time Axis drop down list. The time axis requires a range in seconds.

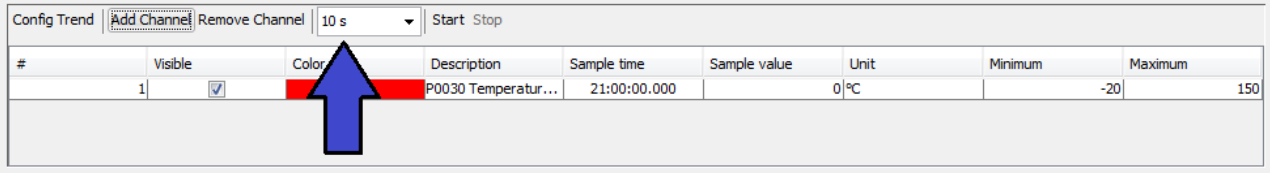

Selecting the Sampling Rate

Choose Configure Trend to set up the trend sampling period.

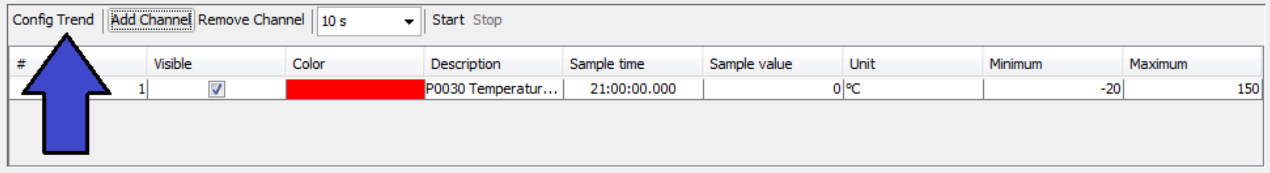

The sampling period requires a value in milliseconds.

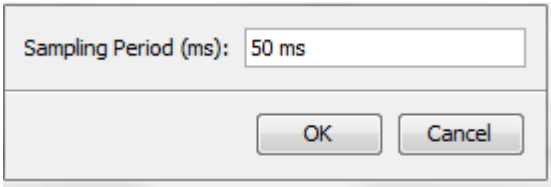

Capturing and Saving Trends

After you have added the channels to the trend, you must start capturing to view the trend on the graph.

Press Start button to start trending.



Press Stop button to stop trending of the selected signals. SuperDrive offers an option to save a trend for later analysis without a drive connected. The files have the extension **.trend**.

NOTE!
The minimum sampling period can vary according to the number of channels, communications' baud rate, etc.
While capturing, the Trend displays the values of the channels. However, if the values are not saved, and once they scroll off the screen, they cannot be viewed.

Viewing Trends

To open a previously saved trend, select the file with the **.trend** extension in the Project Window and then choose menu **Drive > Trend**.

It is not necessary to have the drive connected while viewing previously saved trends.

You can move through the samples using the scroll bar to examine data in detail.

Using the Cursor

To activate this marker press the left mouse button over the graph area.
The marker can be moved by clicking the mouse over the trend screen.
The selected sample time and value of each channel are indicated.

Zoom

You can zoom in and zoom out of the trend.

To zoom in on the trend, choose + or Zoom and place the mouse pointer at the top left corner of the area you want to zoom in. Click and hold the left mouse button then drag the pointer to draw a rectangle and release the mouse button.



The view of the trend zooms in.

To zoom out of the trend, choose -. The view of the trend zooms out. Horizontal Zoom Out stops when the width reaches its original value.

Scroll (Pan)

You can scroll the trend using the mouse.

To scroll the trend, choose Pan.

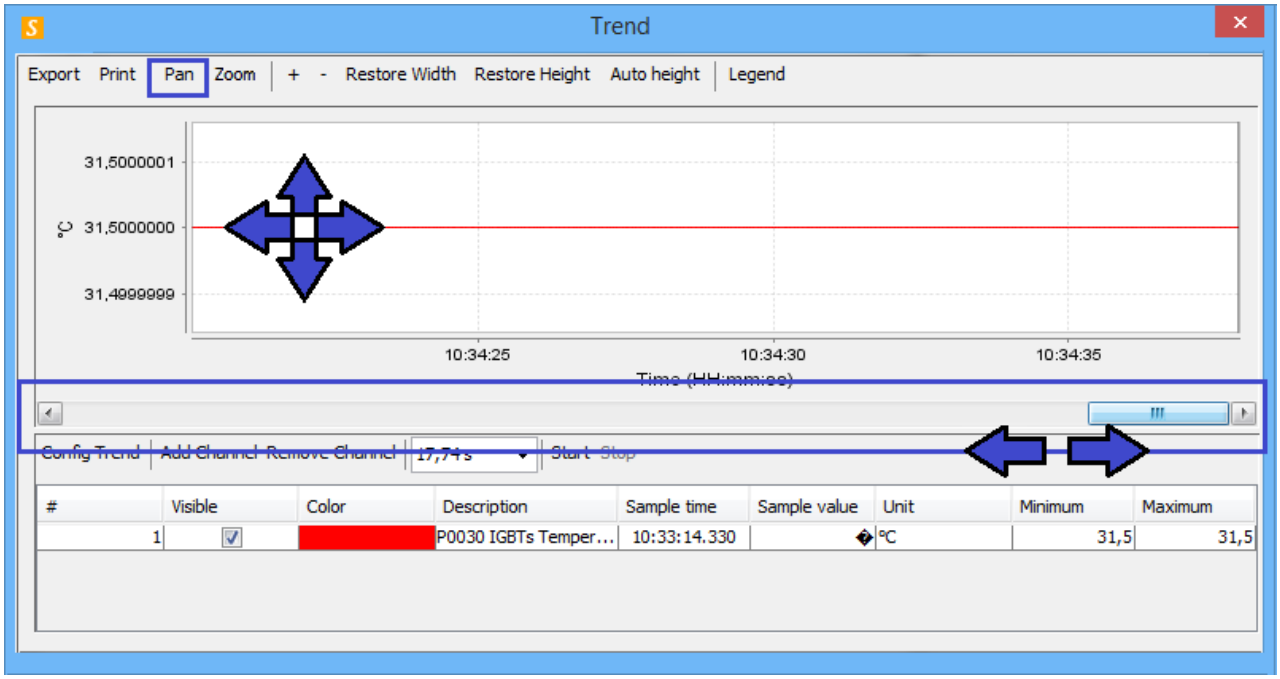

Click and hold the left mouse button at the graph area then drag the pointer to move graph in direction the mouse is moved.

Exporting Trends

The currently displayed trend can be exported to a PNG file.

To export a trend:

1. Open the trend you want to export.
2. Choose Export.



3. Enter a filename for the PNG file.

Printing Trends

The currently displayed trend can be printed.

To print a trend:

1. Open the trend you want to print.
2. Choose Print.



NOTE!
When printing or exporting, it is recommended to set the legend visible.

4.2.16 Remove Trend File

ACCESS

Toolbar:
Menu: Drive > Remove Trend File
Shortcut Key: none

FUNCTION

Remove all trend files.

DESCRIPTION

User must select a filename in the Project Window.

SuperDrive G2 will ask the user to confirm deleting all trend files.

4.2.17 Export Trend File

ACCESS

Toolbar:
Menu: Drive > Export Trend File
Shortcut Key: none

FUNCTION

Exports the content of a trend file to another file in CSV format.

DESCRIPTION

User must select a trend file name in Project Window.

SuperDrive G2 requests user to confirm the file export. In affirmative case, a window is shown with the following options:

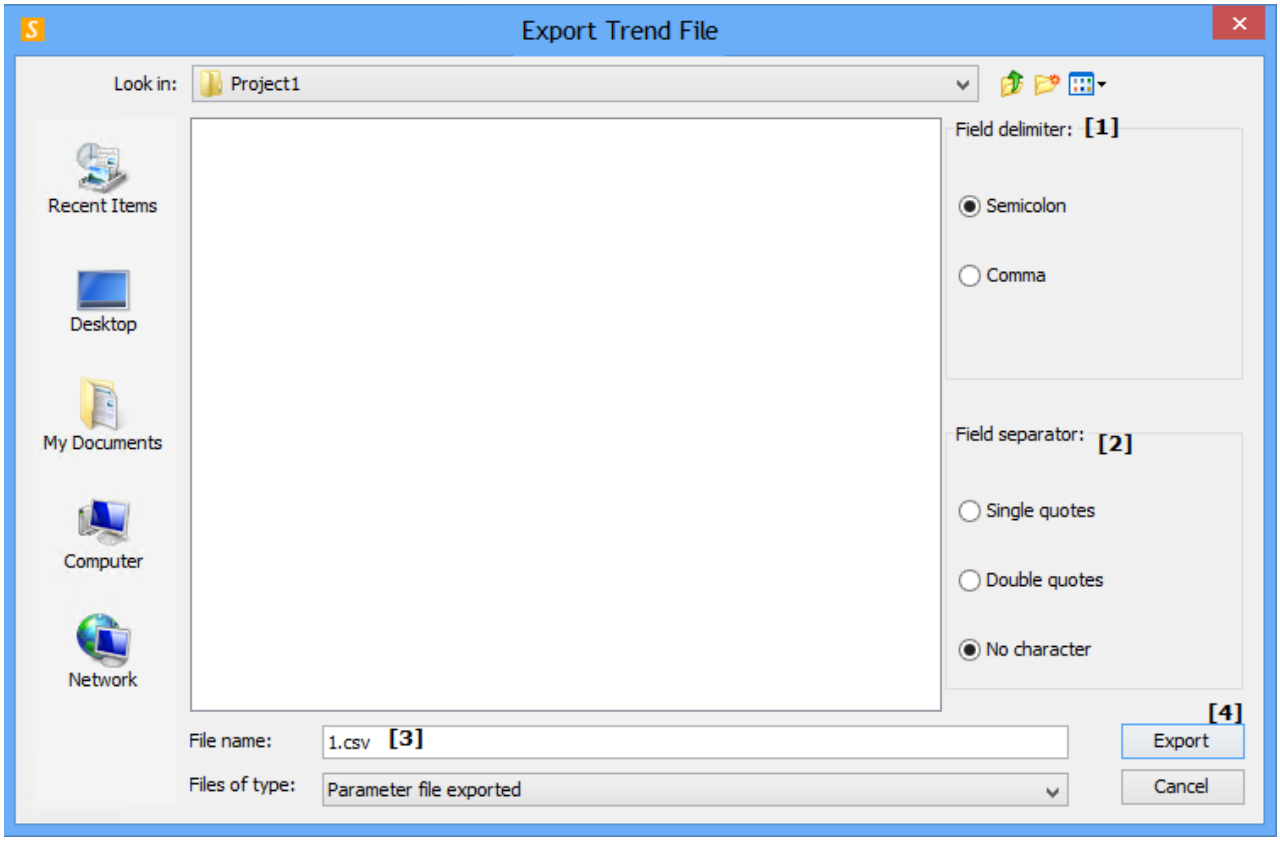

[1] Field delimiter. Options: semicolon or comma.
[2] Field separator. Options: single quotes, double quotes or without quotes.
[3] The name of the new file, in CSV format.
[4] Buttons to export and to cancel the export.

4.2.18 Trace

ACCESS

Toolbar:
Menu: Drive > Trace
Shortcut Key: none

FUNCTION

It presents a graph of acquired trace function's data.

APPEARANCE

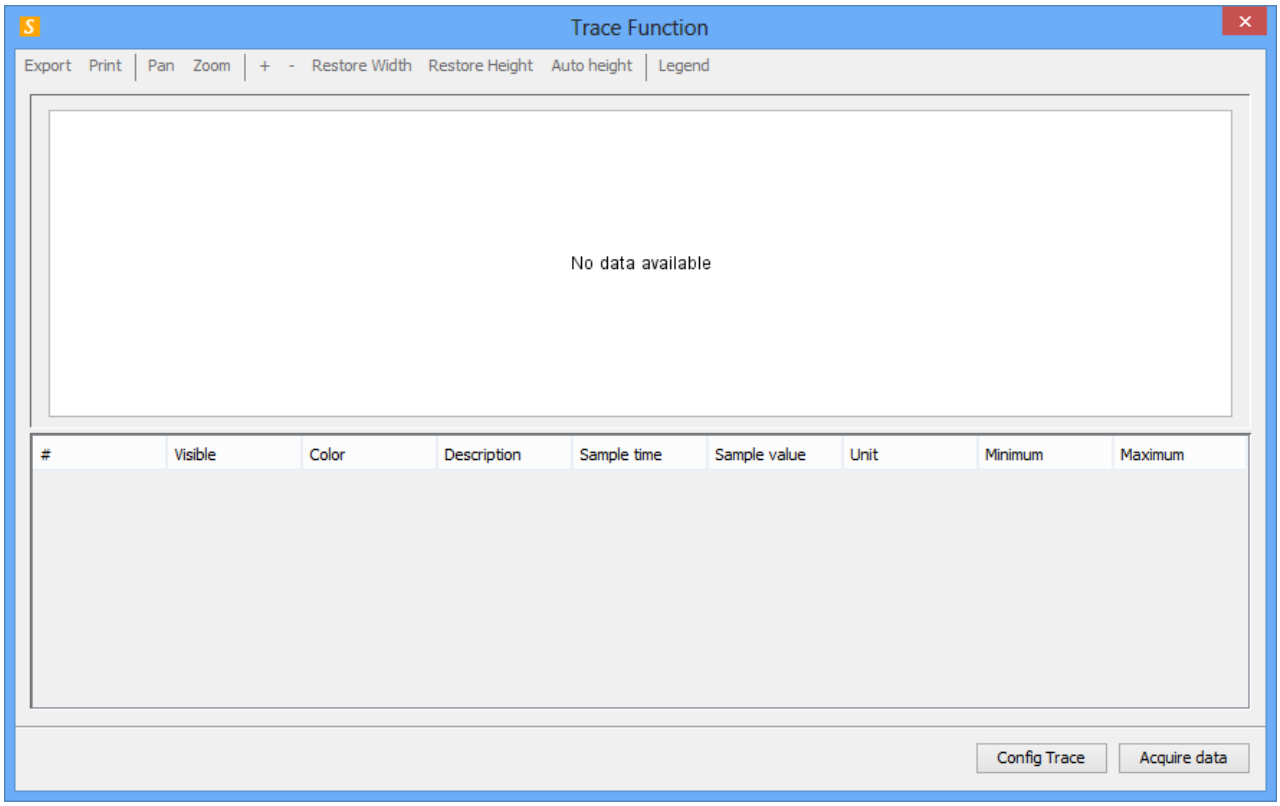

DESCRIPTION

The window presents a graph of trace channel's data for the selected file. If no file is selected, a blank graph is presented.

Press the button Config Trace to configure the trace function.

Trace Function Configuration

A window with trace configuration parameters is presented.
Use the editable fields to change parameters contents.
The editable fields have the factory default value (if no file was selected), or the values from the previously saved file.

- Read configuration - to read the trace configuration parameters from the drive. The parameters settings will be read from the drive and presented in the window.
- Write configuration - to send the trace configuration to the drive. The configuration parameters are sent to the drive.
- Start Trace - used to start the trace function on the drive. The start trace command is sent to the drive.
- Close - to close the configuration window.
- Acquire data - to acquire trace function data.

Trace Function Acquisition

If the trace function status is not complete, the trace function status monitor window is presented.
While the status is not complete, the button Ok is disabled and the acquisition can not be performed.

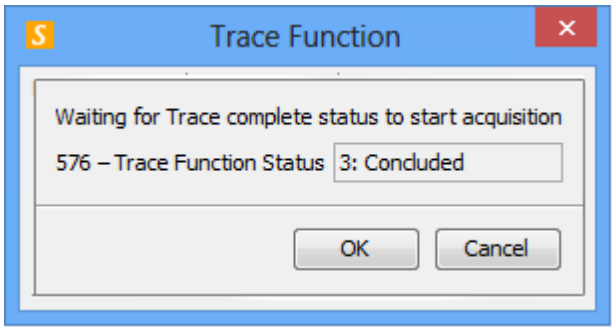

When the status is complete, all programmed trace channel's data is acquired.
When the acquisition is complete please type the file name where all trace information and channel's data is to be stored.

Graph Visualization

Trace channel's data is presented in a graph.
The channel information table is presented below the graph.

- # - trace channel's index.
- Visible - shows/changes channel's visibility in the graph.
- Color - shows/changes the color which represents channel's data in the graph.
- Description - trace channel's acquired variable description.
- Sample time - time of the selected sample in the chart.
- Sample value - value of the selected sample in the chart.
- Unit - trace channel's data unit.
- Minimum - shows/changes the lower bound for the axis of this channel in the graph.
- Maximum - shows/changes the upper bound for the axis of this channel in the graph.

A black vertical line is shown at the trigger position. At the top of the graph is the trigger description.

Graph Manipulation

It is possible to change the sample cursor position by clicking at the graph.
A toolbar with the following options can be found above the graph:

- Export: exports the graph area as a PNG image.
- Print: prints the graph area.
- Pan: changes to Pan Mode.
- Zoom: changes to Zoom Mode.
- Zoom +: magnifies the graph area.
- Zoom -: zoom out the graph area.
- Restore width: restores the initial width of the horizontal axis.
- Restore height: restores the initial height of the vertical axis.
- Auto height: automatic height depending on the maximum or minimum values of the samples.
- Legend: shows/hide the graph legend.

Pan Mode

In Pan Mode press the mouse button over the graph area and drag to move the graph in the desired direction.

Zoom Mode

In Zoom Mode press the mouse button over the graph area and drag to draw a zoom box. Release the mouse button to magnify the selected graph area.

4.2.19 Remove Trace File

ACCESS

Toolbar:
Menu: Drive > Remove Trace File
Shortcut Key: none

FUNCTION

Remove all trace files.

DESCRIPTION

User must select a filename in the Project Window.

SuperDrive G2 will ask the user to confirm deleting all trace files.

4.2.20 Export Trace File

ACCESS

Toolbar:
Menu: Drive > Export Trace File
Shortcut Key: none

FUNCTION

Exports the content of a trace file to another file in CSV format.

DESCRIPTION

User must select a trace file name in Project Window.

SuperDrive G2 requests user to confirm the file export. In affirmative case, a window is shown with the following options:

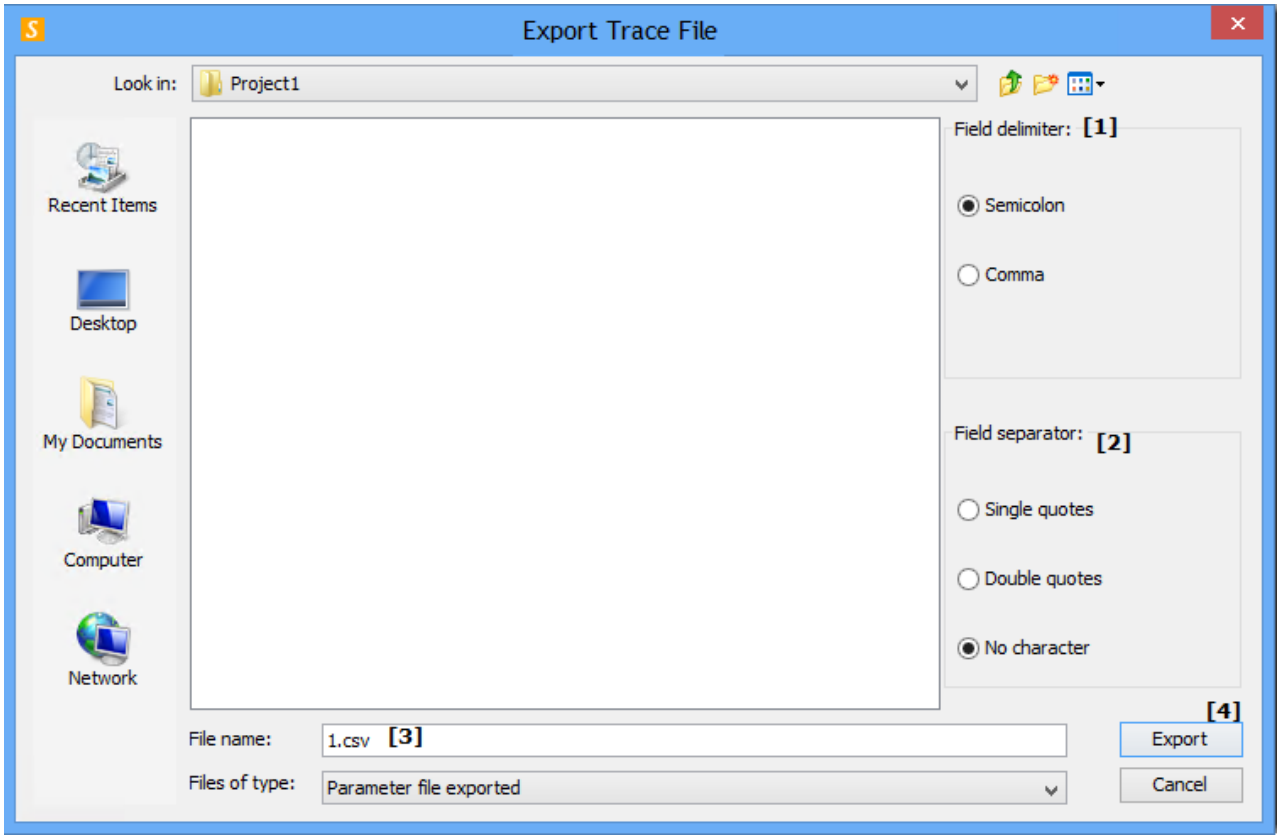

[1] Field delimiter. Options: semicolon or comma.
[2] Field separator. Options: single quotes, double quotes or without quotes.
[3] The name of the new file, in CSV format.
[4] Buttons to export and to cancel the export.

4.3 Tools

Options

4.3.1 Options

ACCESS

Toolbar:
Menu: Tools > Options
Shortcut Key: none

FUNCTION

Allows the user to select options for SuperDrive G2.

PRESENTATION

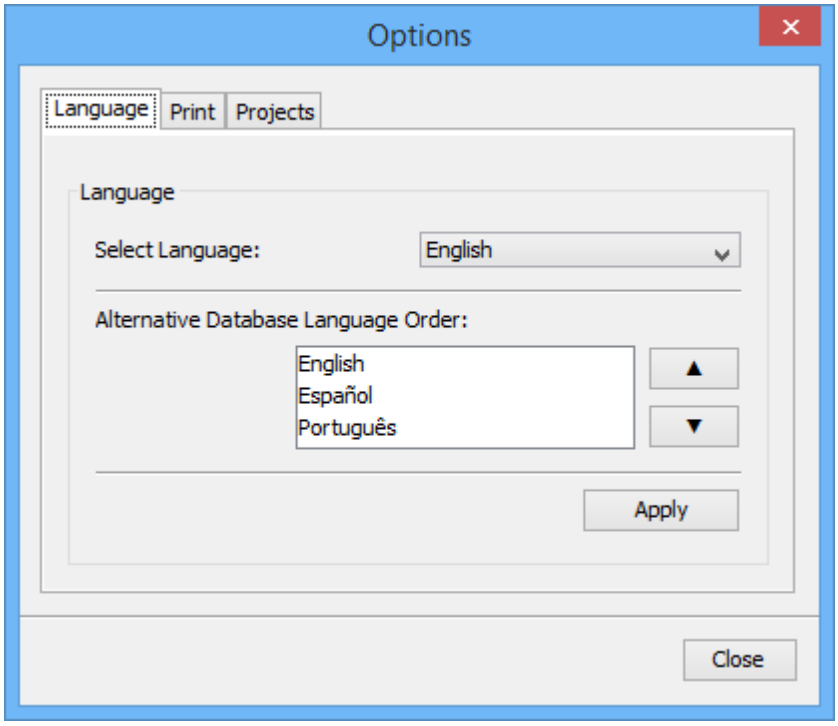

DESCRIPTION

The options are available via tabbed menu. To access them, click over the tab name:

- Language
- Print
- Projects

Language

Allows the user to select a language.

Three languages are available:

- English;
- Spanish;
- Portuguese.

Besides the language selection of the software, the user can change the priority language selection of alternative database, which occurs when the selected drive does not have support for the selected language.

When successfully applies a language change, system presents a confirmation message.

Print

Allows the user to select the parameters printing options.

Four options are available:

- Print all parameters;
- Print all parameters, highlight changes in bold font (when compared to standard values);

- Print all parameters, highlight changes in red font (when compared to standard values);
- Print changed parameters only (when compared to standard values).

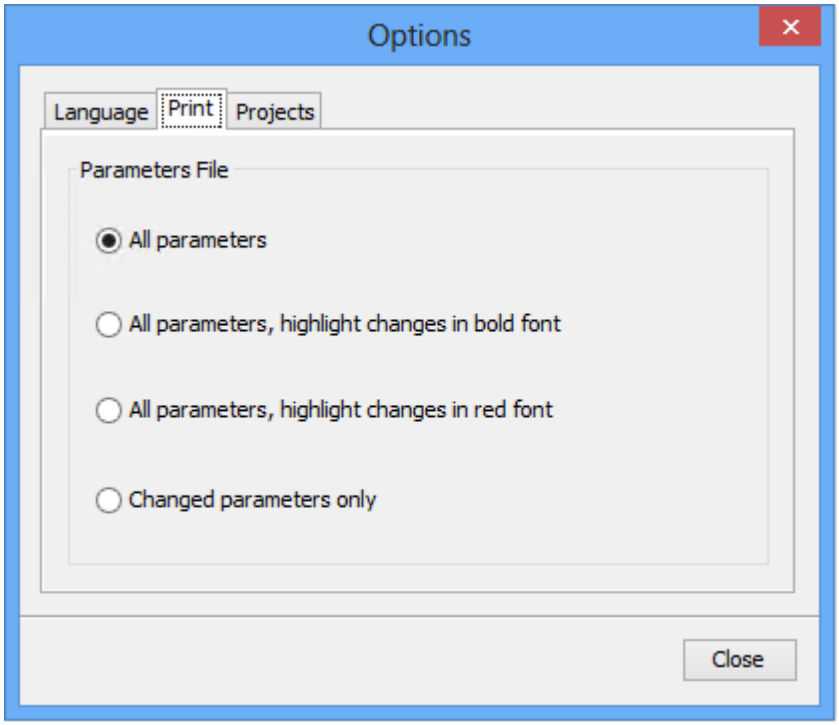

Projects

Allows the user to select the main projects folder, when SuperDrive G2 projects are stored.

This option presents the current main projects folder, where is possible to change this path: You must close the project before accessing this function. Otherwise, while a project is open SuperDrive G2 disables this option.

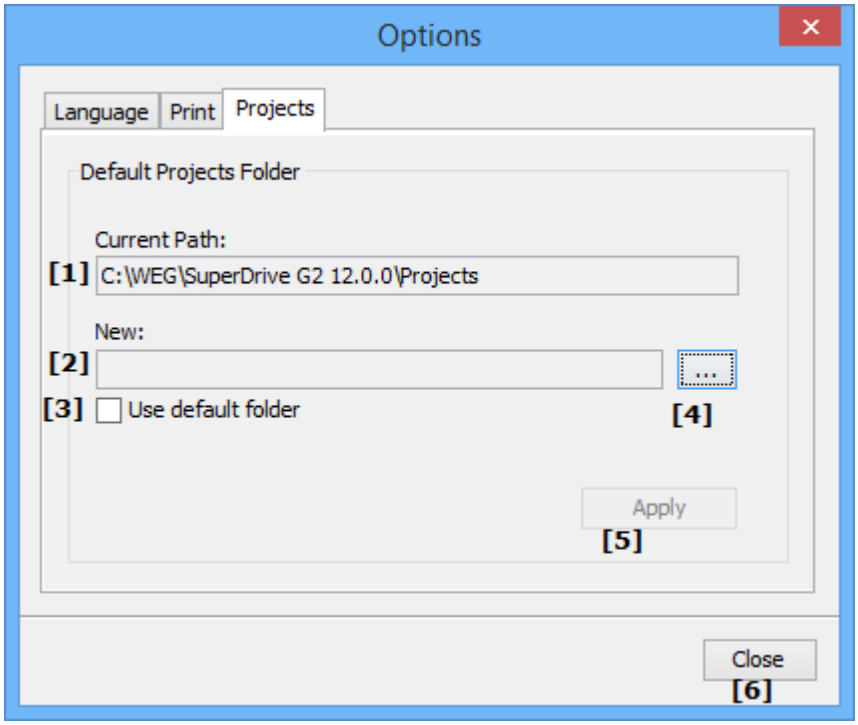

[1] Current path and folder where projects are stored.
[2] New path where projects will be stored. This field only updates after you choose a new path throws items [3] or [4].
[3] When selecting this option, the system restores the standard path and folder where projects will be stored.
[4] This button selects a new path where projects will be stored.
[5] This button apply the changes. It will be available only if there were changes.
[6] This button closes the options window.

4.4 Help

Contents
About

4.4.1 Contents

ACCESS

Toolbar:
Menu: Help > Contents
Shortcut Key: none

FUNCTION

Opens the online help.

DESCRIPTION

A comprehensive online documentation is available. The documentation can be printed.

4.4.2 About

ACCESS

Toolbar:
Menu: Help > About
Shortcut Key: none

FUNCTION

Displays information about SuperDrive G2 version, build, etc.

DESCRIPTION

Displays the following information:

- Software name.
- Version.
- Build.
- Launch date.
- Copyright.
- Simplified software description.
- Operational systems where the software can run.
- Java informations.

5 Context menus

This chapter about context menus covers the following information:

- Rename
- Save As
- Close

5.1 Project

ACCESS

Toolbar: none
Context Menu
Shortcut Key: none

FUNCTION

Allows the user to select options related to current project.

DESCRIPTION

The options are available throws a context menu. To access them, select the current project name and then right mouse click over it:

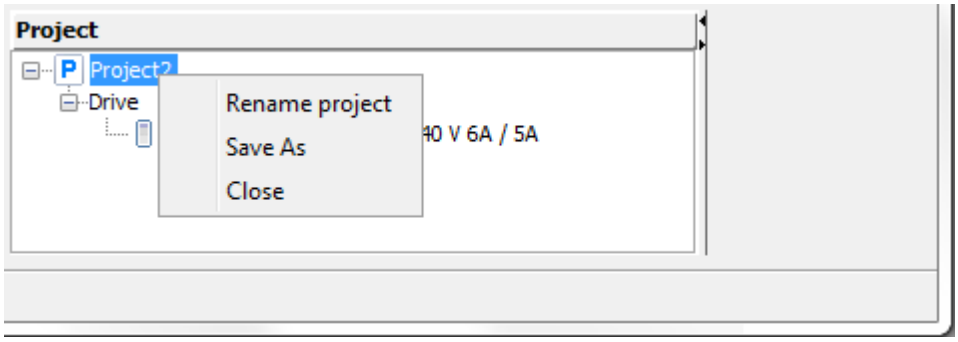

SuperDrive G2 offers three options via context menu:
- Rename
- Save As
- Close

5.1.1 Rename

ACCESS

Toolbar: none
Context Menu > Rename project
Shortcut Key: none

FUNCTION

Allows the user to rename current project.

DESCRIPTION

This option is available throws a context menu. To access it, right mouse click over the current project name:

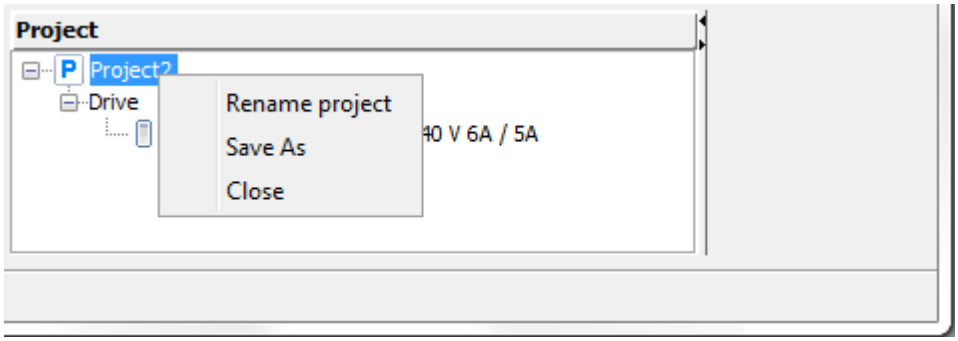

A dialog box is shown, asking for a new project name.

Case the new name already exists, system adds automatically an unique code to the end of name was typed.

5.1.2 Save As

ACCESS

Toolbar:
Context Menu > Save As
Shortcut Key: Ctrl+D

FUNCTION

Saves a project with different name.

DESCRIPTION

Enabled when a project is created or opened.

When Save As function runs, a dialog is shown with the following information:

- Name - type a name for the new project. If the specified name is invalid or already exists, a warning message will be prompted.
- Location - a default location is shown, but can be changed.
- Folder - view only.
- Description - type the project description. It can be changed later in the Project Information.

5.1.3 Close

ACCESS

Toolbar:
Context Menu > Close
Shortcut Key: none

FUNCTION

Closes the project.

DESCRIPTION

If the project contains unsaved data, a save request dialog will be shown.

6 Communication

This chapter about communication covers the following information:

- Drive Parametrization
- Connecting the Drive (USB)
- Connecting the Drive (USB - Virtual COM Port)
- Connecting the Drive (RS232)
- Connecting the Drive (RS485)
- Connecting the Drive (Bluetooth)
- RS232 Cable
- USB Cable
- USB to Serial Adapter
- Bluetooth USB Adapter
- Before Trying to Establish Communication
- Exception During Monitoring

6.1 Drive Parametrization

The following parameters must be set as below:

Drive	Connection Type	USB Driver	Parameter	Description	Recommended
CFW-11	USB	USBIO	-----	-----	-----
CFW700 CFW701	RS485	-----	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
CFW500 CFW501	RS485	-----	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
			0312	Serial Protocol	2 = Modbus RTU [with plug-in module CFW500-IOS]
					6 = HMIR (1) + Modbus RTU (2) [with plug-in module CFW500-CUSB, CFW500-CRS232 or CFW500-CRS485]
					7 = Modbus RTU (2) [with plug-in module CFW500-CUSB, CFW500-CRS232 or CFW500-CRS485]
	USB (Virtual COM Port)	FTDI	0312	Serial Protocol	6 = HMIR (1) + Modbus RTU (2) [with plug-in module CFW500-CUSB]
					7 = Modbus RTU (2) [with plug-in module

					CFW500-CUSB]
CFW100	RS485	-----	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
			0312	Serial Protocol	2 = Modbus RTU
	USB (Virtual COM Port)	FTDI	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
			0312	Serial Protocol	2 = Modbus RTU
	Bluetooth	-----	0770	Bluetooth Device Name	Random number
			0771	Bluetooth PIN	1234
MW500	RS232	-----	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
			0312	Serial Protocol	2 = Modbus RTU
	RS485	-----	0308	Serial Address	1
			0310	Serial Baud Rate	1 = 19200 bits/s
			0311	Serial Bytes Config.	1 = 8 bits, even parity, 1sb
			0312	Serial Protocol	2 = Modbus RTU [with plug-in module CFW500-IOS]
					6 = HMIR (1) + Modbus RTU (2) [with plug-in module CFW500-CUSB, CFW500-CRS232 or CFW500-CRS485]
					7 = Modbus RTU (2) [with plug-in module CFW500-CUSB, CFW500-CRS232 or CFW500-CRS485]
	USB (Virtual COM Port)	-----	0312	Serial Protocol	2 = Modbus RTU (1) [with plug-in module CFW500-CUSB]
					6 = HMIR (1) + Modbus RTU (2) [with plug-in module CFW500-CUSB]
CTW900	USB	USBIO	-----	-----	-----
ECW500	RS485	-----	30006	Serial Baud Rate	2 = 38400 bits/s
			30008	Serial Parity	0 = None
			30010	Serial Stop Bits	1
SCA06	USB	USBIO	-----	-----	-----
SSW-06	RS232	-----	308	SSW Address	1
			312	Serial Protocol	1: MB 9600 N

					(Modbus-RTU 9600 bps, no parity), 8 bits, 2sb
	USB (Virtual COM Port)	FTDI	-----	-----	USB Communication Kit (K-USB) should be used, which is supplied with the product
SSW-07 SSW-08	RS232	-----	308	SSW Address	1
			312	Serial Protocol	1: MB 9600 N (Modbus-RTU 9600 bps, no parity), 8 bits, 2sb
SSW7000	USB	USBIO	-----	-----	-----
CFW-09 PM	RS232	-----	308	Serial:Address	1
			310	Serial:Bit Rate	1: 9600 bps
			311	Serial:Data Con.	3: 8b, no parity, 2sb
			312	Serial:Protocol	2: Modbus-RTU

NOTE!
Drive and SuperDrive G2 must use the same settings.
For CFW-09 PM, P308, P310 and P311 can be changed, see Frequency Inverter Manual - CFW-09 PM.
For CFW700, P0308, P0310 and P0311 can be changed, see Programming and Maintenance Manual - CFW700.
For SSW, P308 and P312 can be changed, see Serial Communication Manual.
(1) CFW500 - Port 1 - terminals 12, 14, 16.
(2) CFW500 - Port 2 - USB, DB9 or RS485 connector (terminals 20, 22, 24).

6.2 Connecting the Drive (USB)

The drive should be located at a distance shorter than 3 m from the computer.

This connection is made with USB Cable, supplied with drive user's guide.

USB Driver: user must install the USB driver available at USB_Driver\USBIO folder.

CFW-11

Figure below shows how to connect a computer to the drive (USB).

WARNING!
Switch off the drive before making the connections.

1. The USB connector is in the front cover of the drive.
2. Connect the type B connector of usb cable to the usb connector of the drive.
3. Connect the type A connector of usb cable to the computer usb port.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is USB.

CTW900

WARNING!
Switch off the drive before making the connections.

1. The USB connector is in the front cover of the drive.
2. Connect the type B connector of usb cable to the usb connector of the drive.
3. Connect the type A connector of usb cable to the computer usb port.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is USB.

SCA06

WARNING!
Switch off the drive before making the connections.

1. The USB connector is in the front cover of the drive.
2. Connect the type B connector of usb cable to the usb connector of the drive.
3. Connect the type A connector of usb cable to the computer usb port.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is USB.

SSW7000

WARNING!
Switch off the drive before making the connections.

1. The USB connector is in the front cover of the drive.
2. Connect the type B connector of usb cable to the usb connector of the drive.
3. Connect the type A connector of usb cable to the computer usb port.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is USB.

CFW700 / CFW701

Figure below shows how to connect a computer to the drive (USB).

WARNING!
Switch off the drive before making the connections.
This connection is available in CFW700's HMI since S/N 1024003697.
This connection is available in CFW701's HMI since S/N 1023801859.

1. The USB connector is in the drive's HMI.
2. Connect the type mini-B connector of usb cable to the usb connector of the drive.
3. Connect the type A connector of usb cable to the computer usb port.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is USB.

6.3 Connecting the Drive (USB - Virtual COM Port)

The drive should be located at a distance shorter than 3 m from the computer.

This connection is made with USB Cable, supplied with drive user's guide.

USB Driver: user must install the USB driver available at USB_Driver\FTDI folder.

SSW-06

Figure below shows how to connect a computer to the drive (USB).

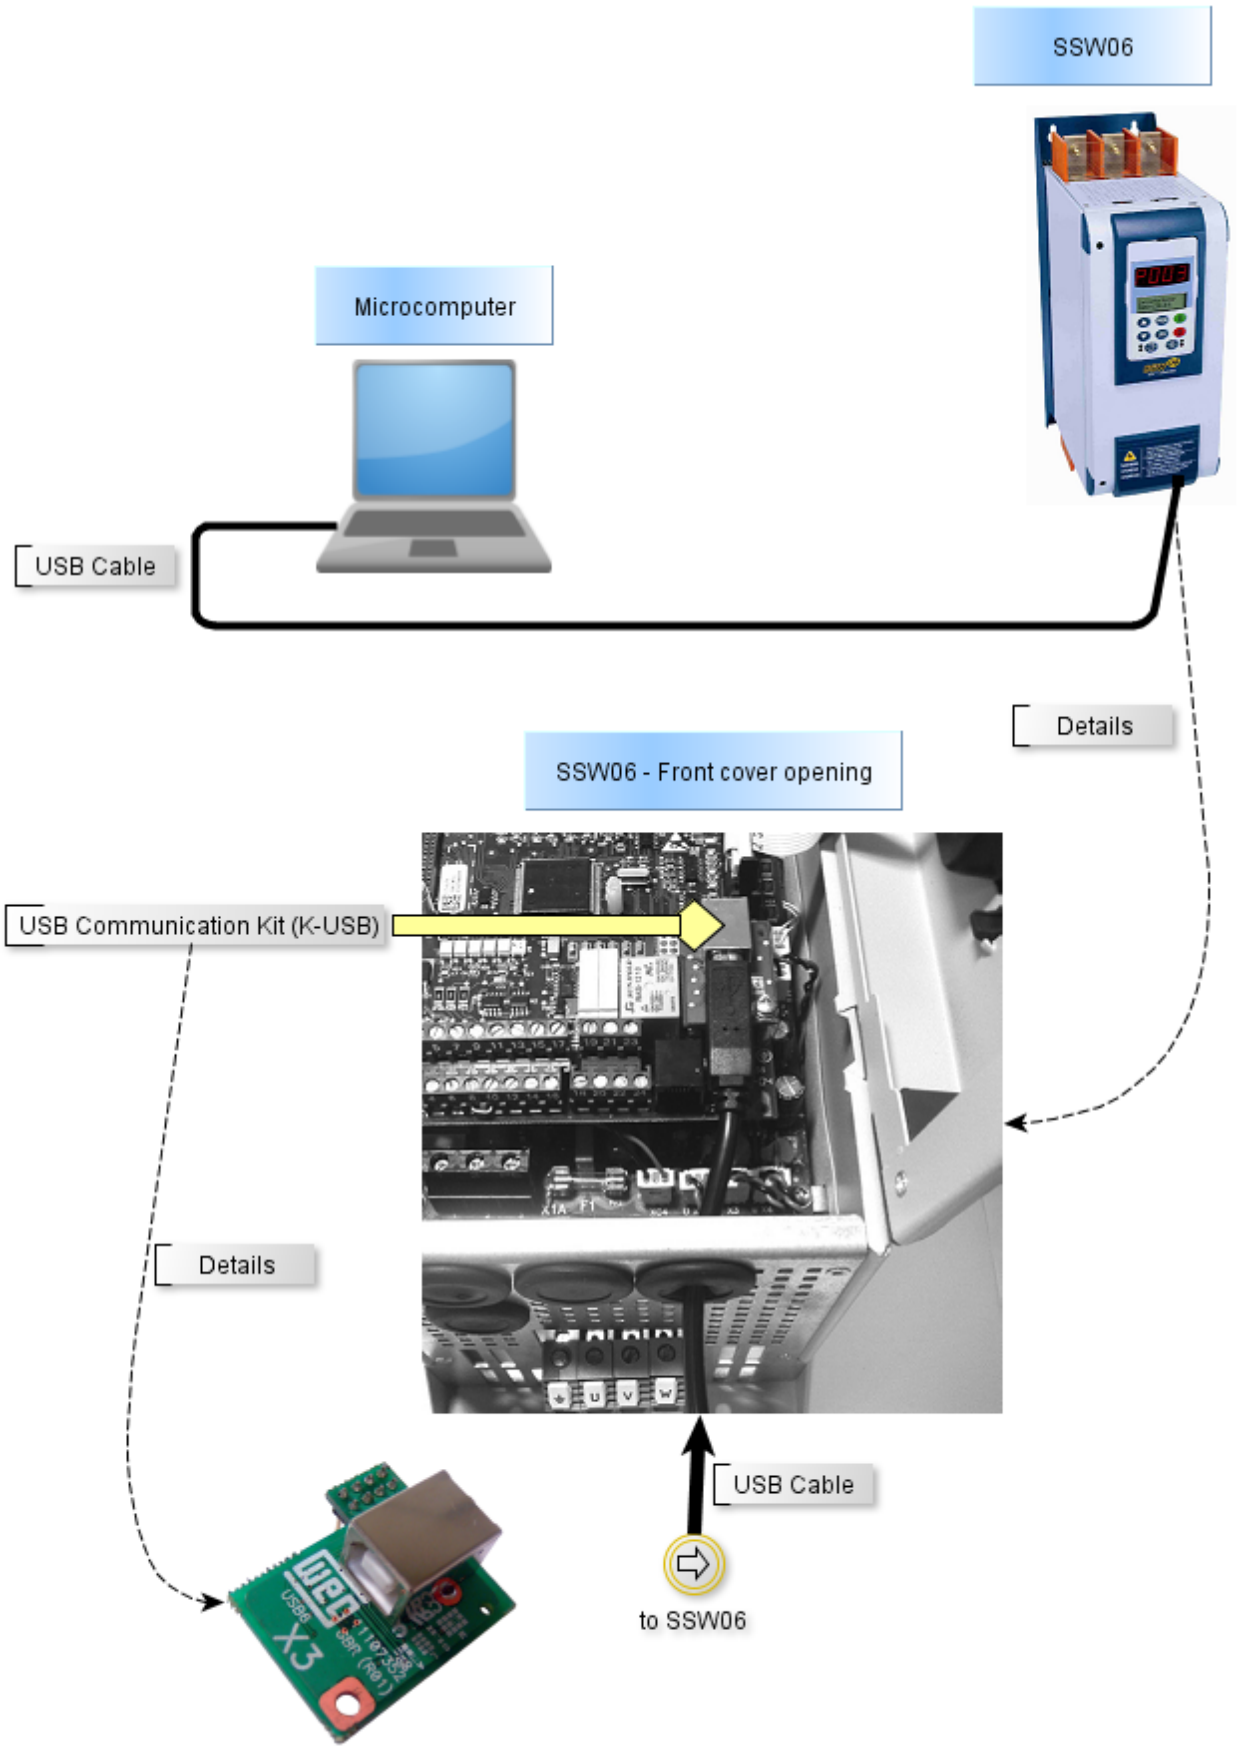

Device manager in Windows indicates which serial port is connected to the drive.

The computer name in device manager is purposely unreadable.

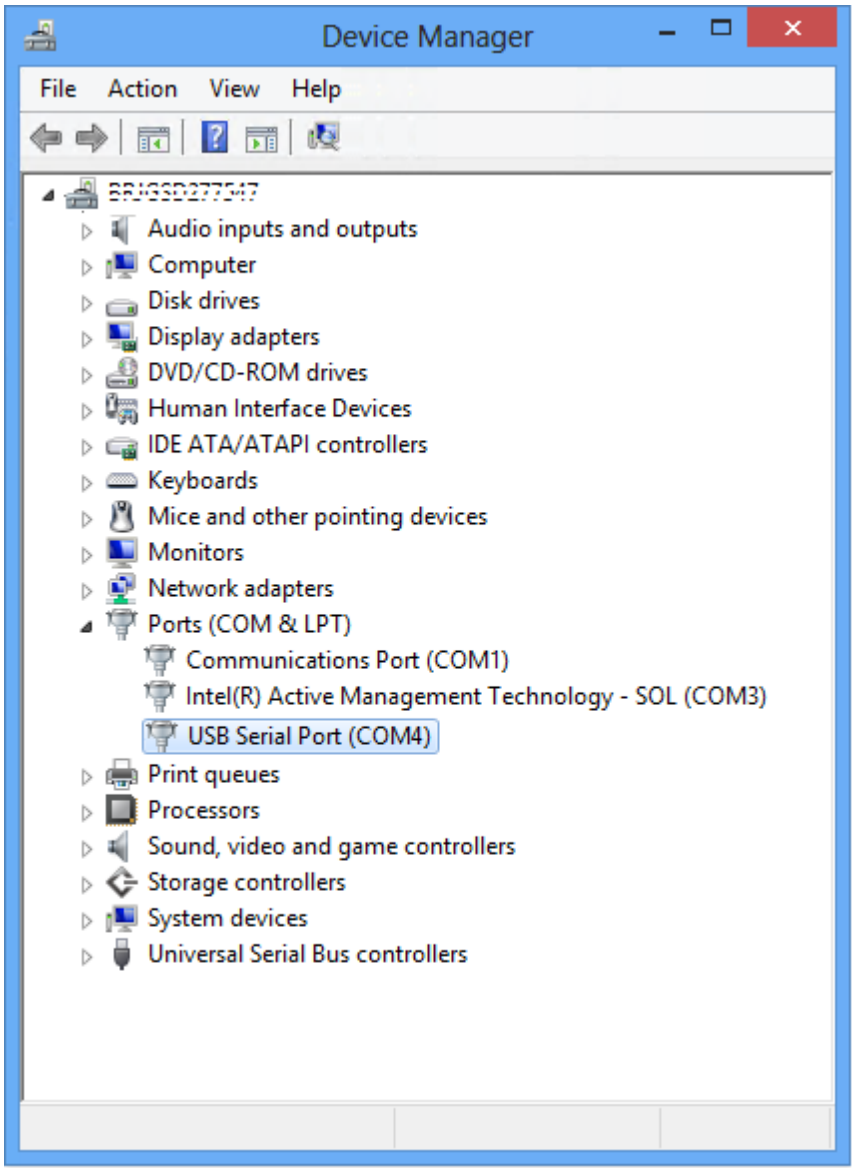

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

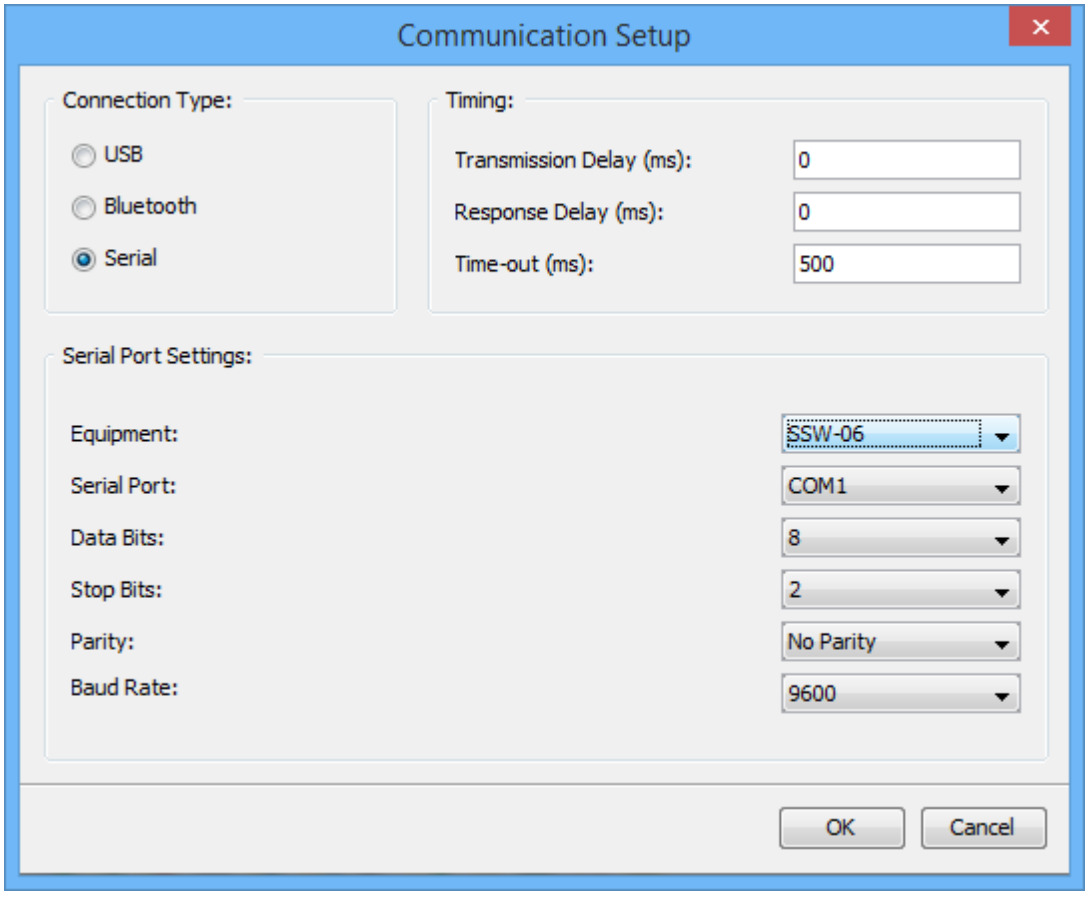

WARNING!
Switch off the drive before making the connections.

1. Connect the mini-B connector of usb cable to the usb connector of the drive.
2. Connect the type A connector of usb cable to the computer usb port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

CFW500 / CFW501

Figure below shows how to connect a computer to the drive (USB).

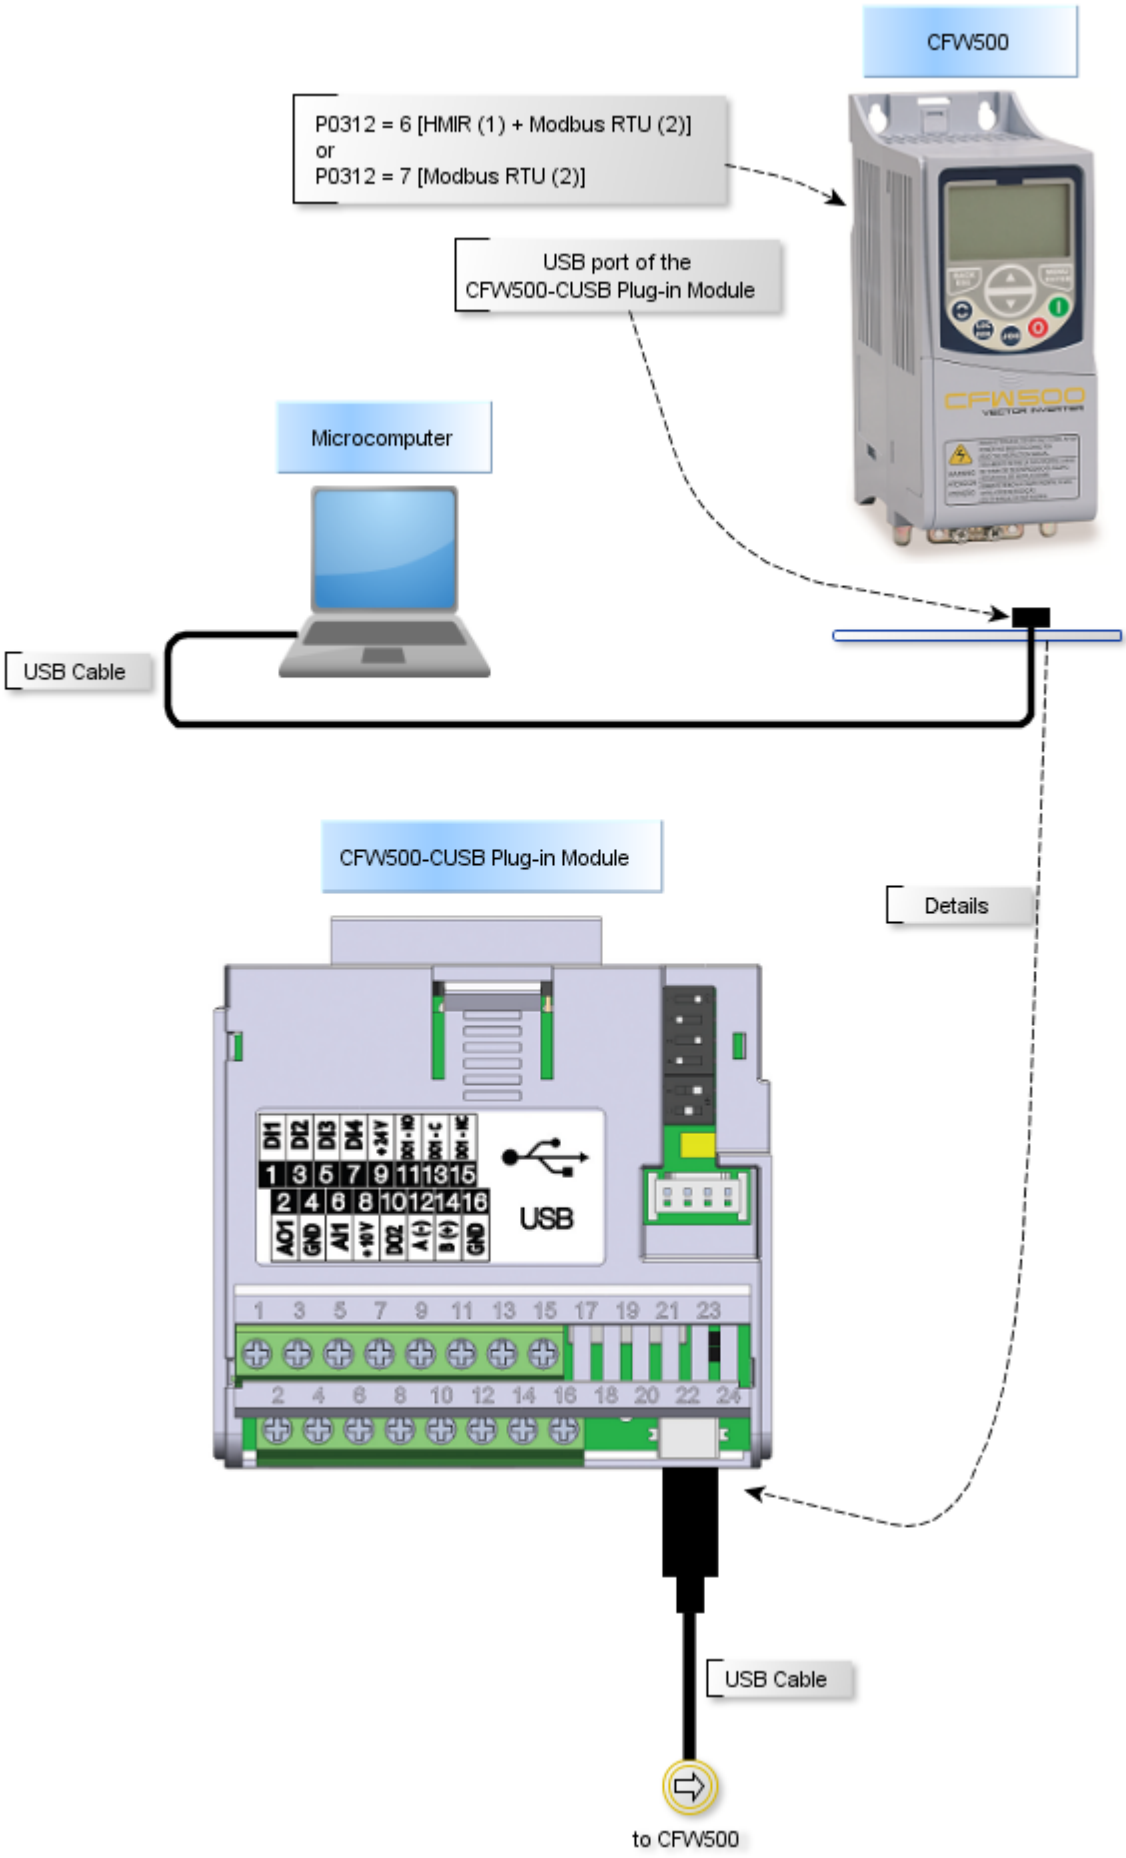
CFW500
P0312 = 6 [HMIR (1) + Modbus RTU (2)]
or
P0312 = 7 [Modbus RTU (2)]
USB port of the
CFW500-CUSB Plug-in Module
Microcomputer
USB Cable
CFW500-CUSB Plug-in Module
Details
USB
USB Cable
to CFW500

Device manager in Windows indicates which serial port is connected to the drive.
The computer name in device manager is purposely unreadable.

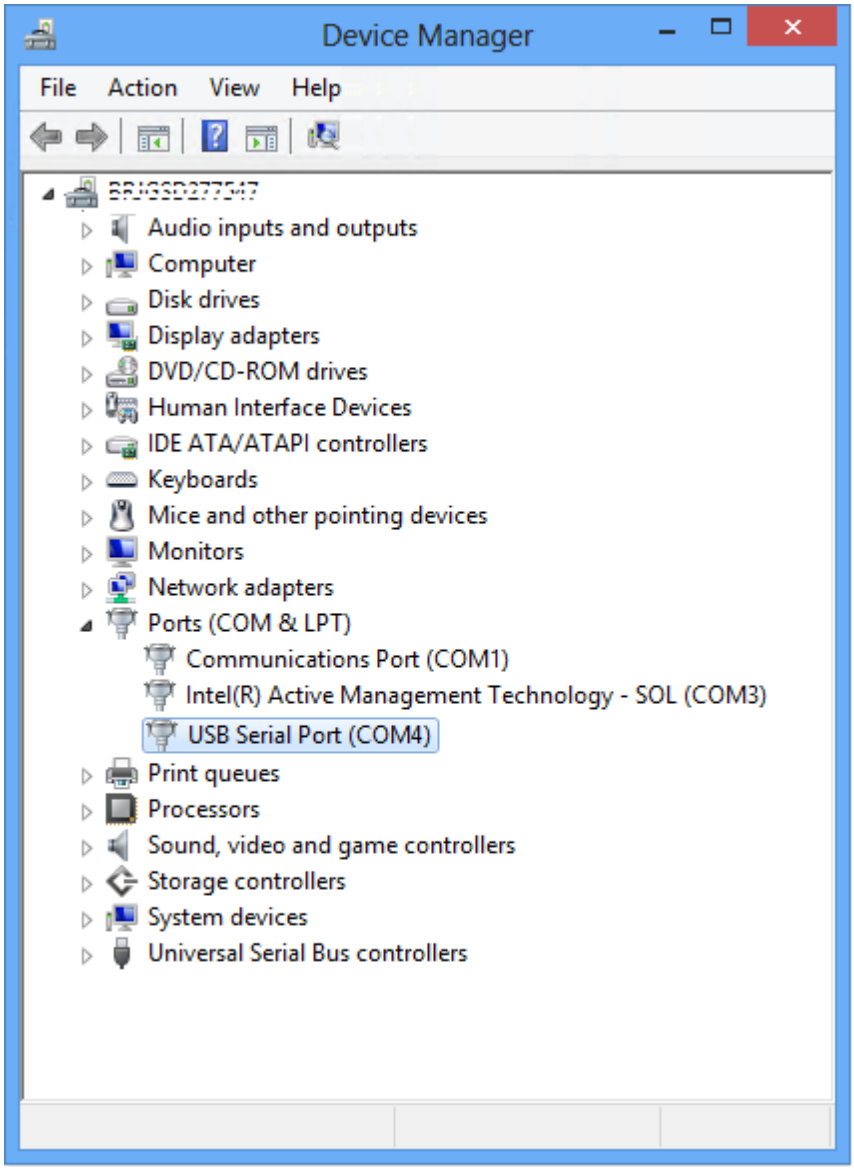

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

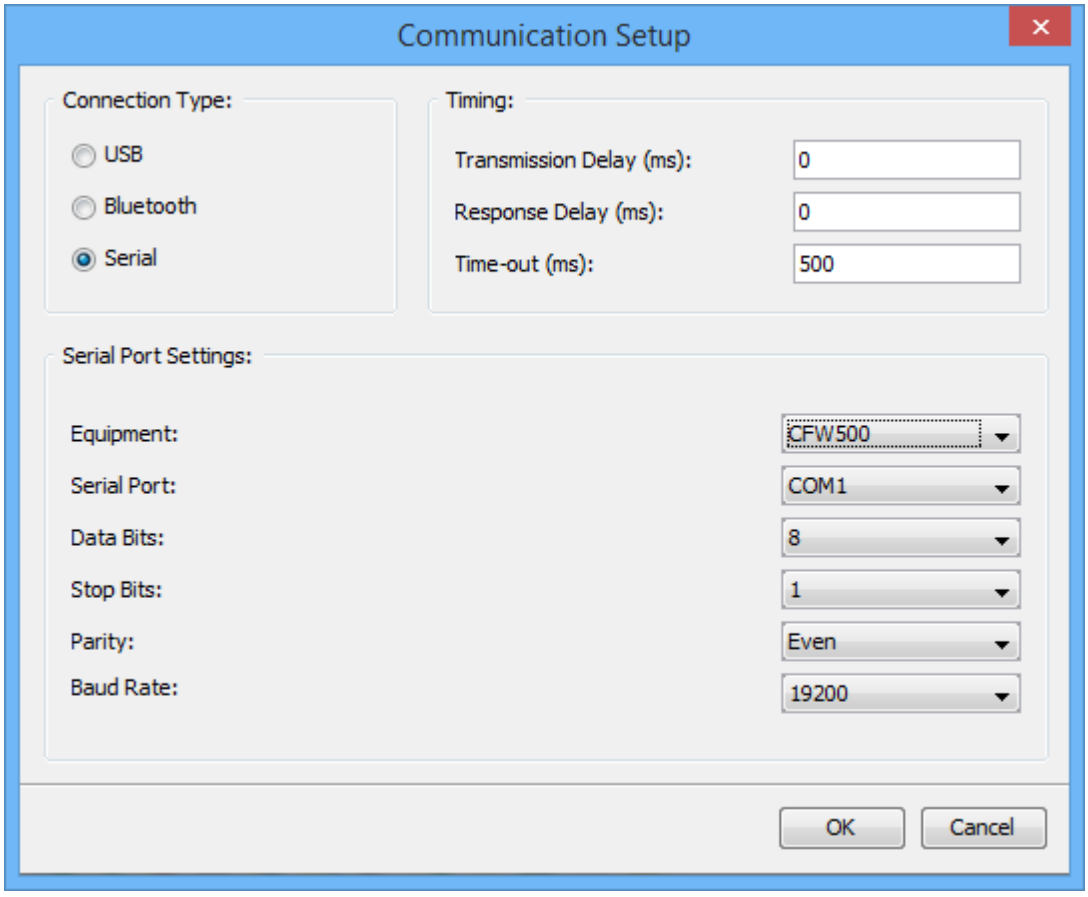

WARNING!
Switch off the drive before making the connections.

1. Connect the mini-B connector of usb cable to the usb connector of the drive.
2. Connect the type A connector of usb cable to the computer usb port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

CFW100

Figure below shows how to connect a computer to the drive (USB).

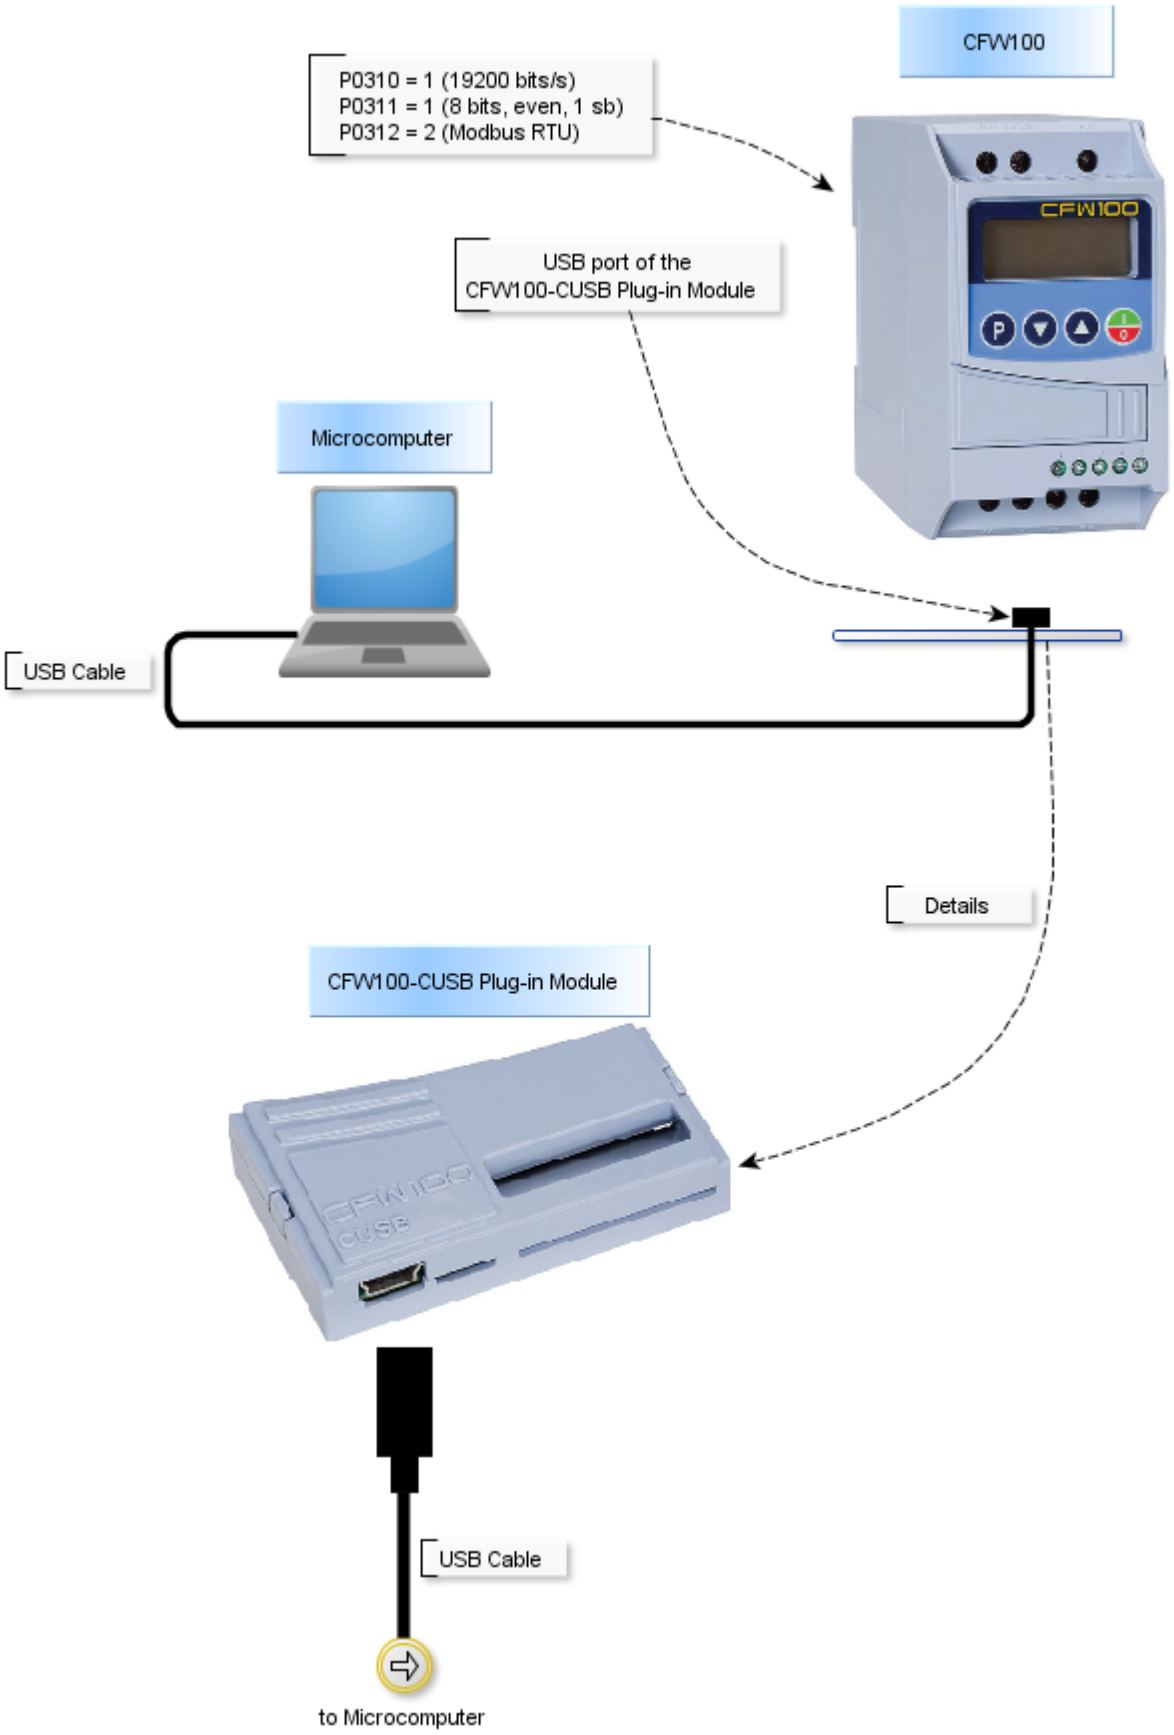

Device manager in Windows indicates which serial port is connected to the drive.
The computer name in device manager is purposely unreadable.

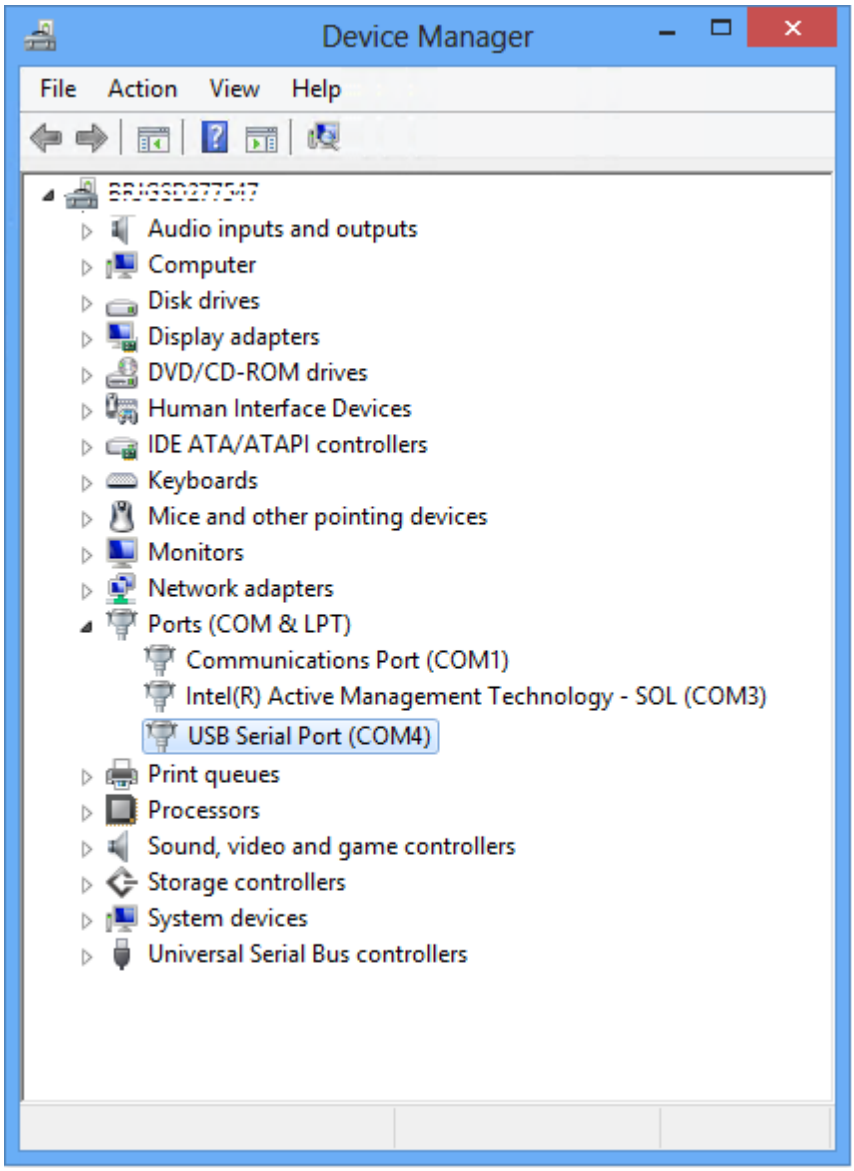

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

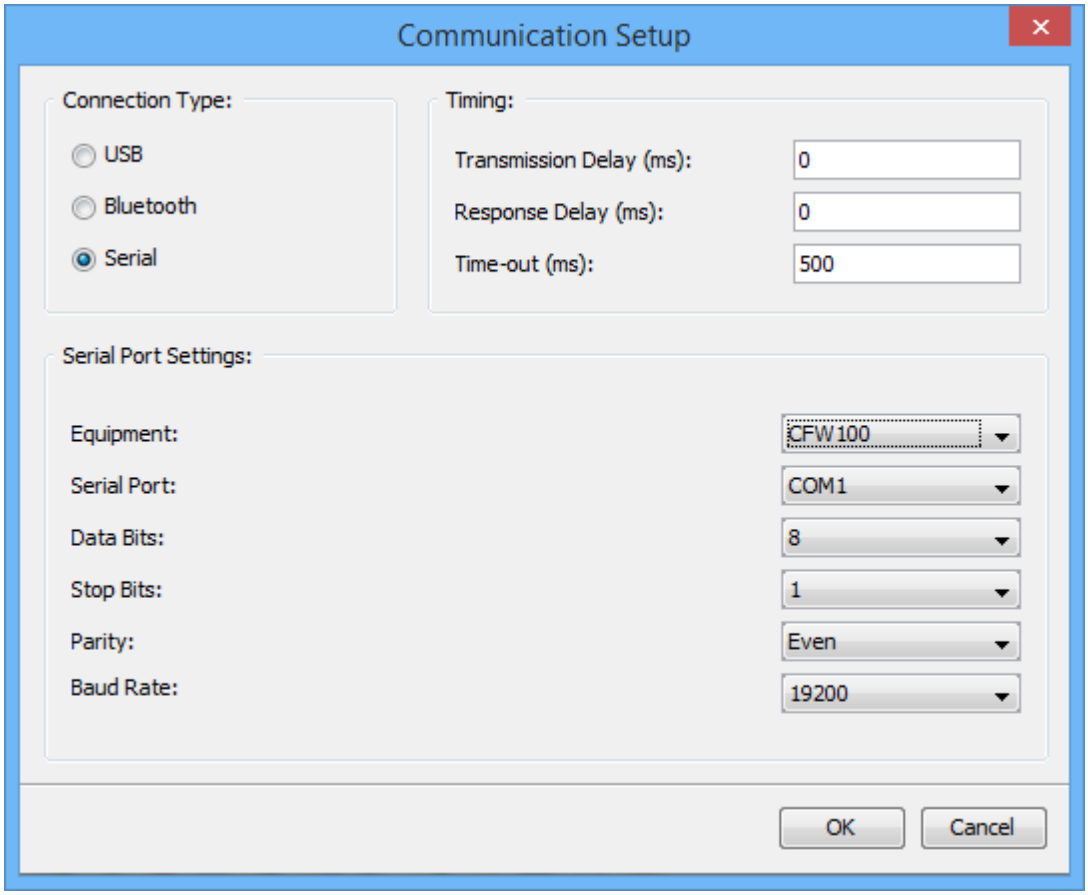

WARNING!
Switch off the drive before making the connections.

1. Connect the mini-B connector of usb cable to the usb connector of the drive.
2. Connect the type A connector of usb cable to the computer usb port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.
6. Never change values in **P308**, **P310** and **P312** during a connection. Changing these parameters instantly causes connection lost between PC and drive.

MW500

Figure below shows how to connect a computer to the drive (USB).

WARNING!
With the drive turned off, be sure that position 1 of DipSwitch S10 is OFF, as shown below:

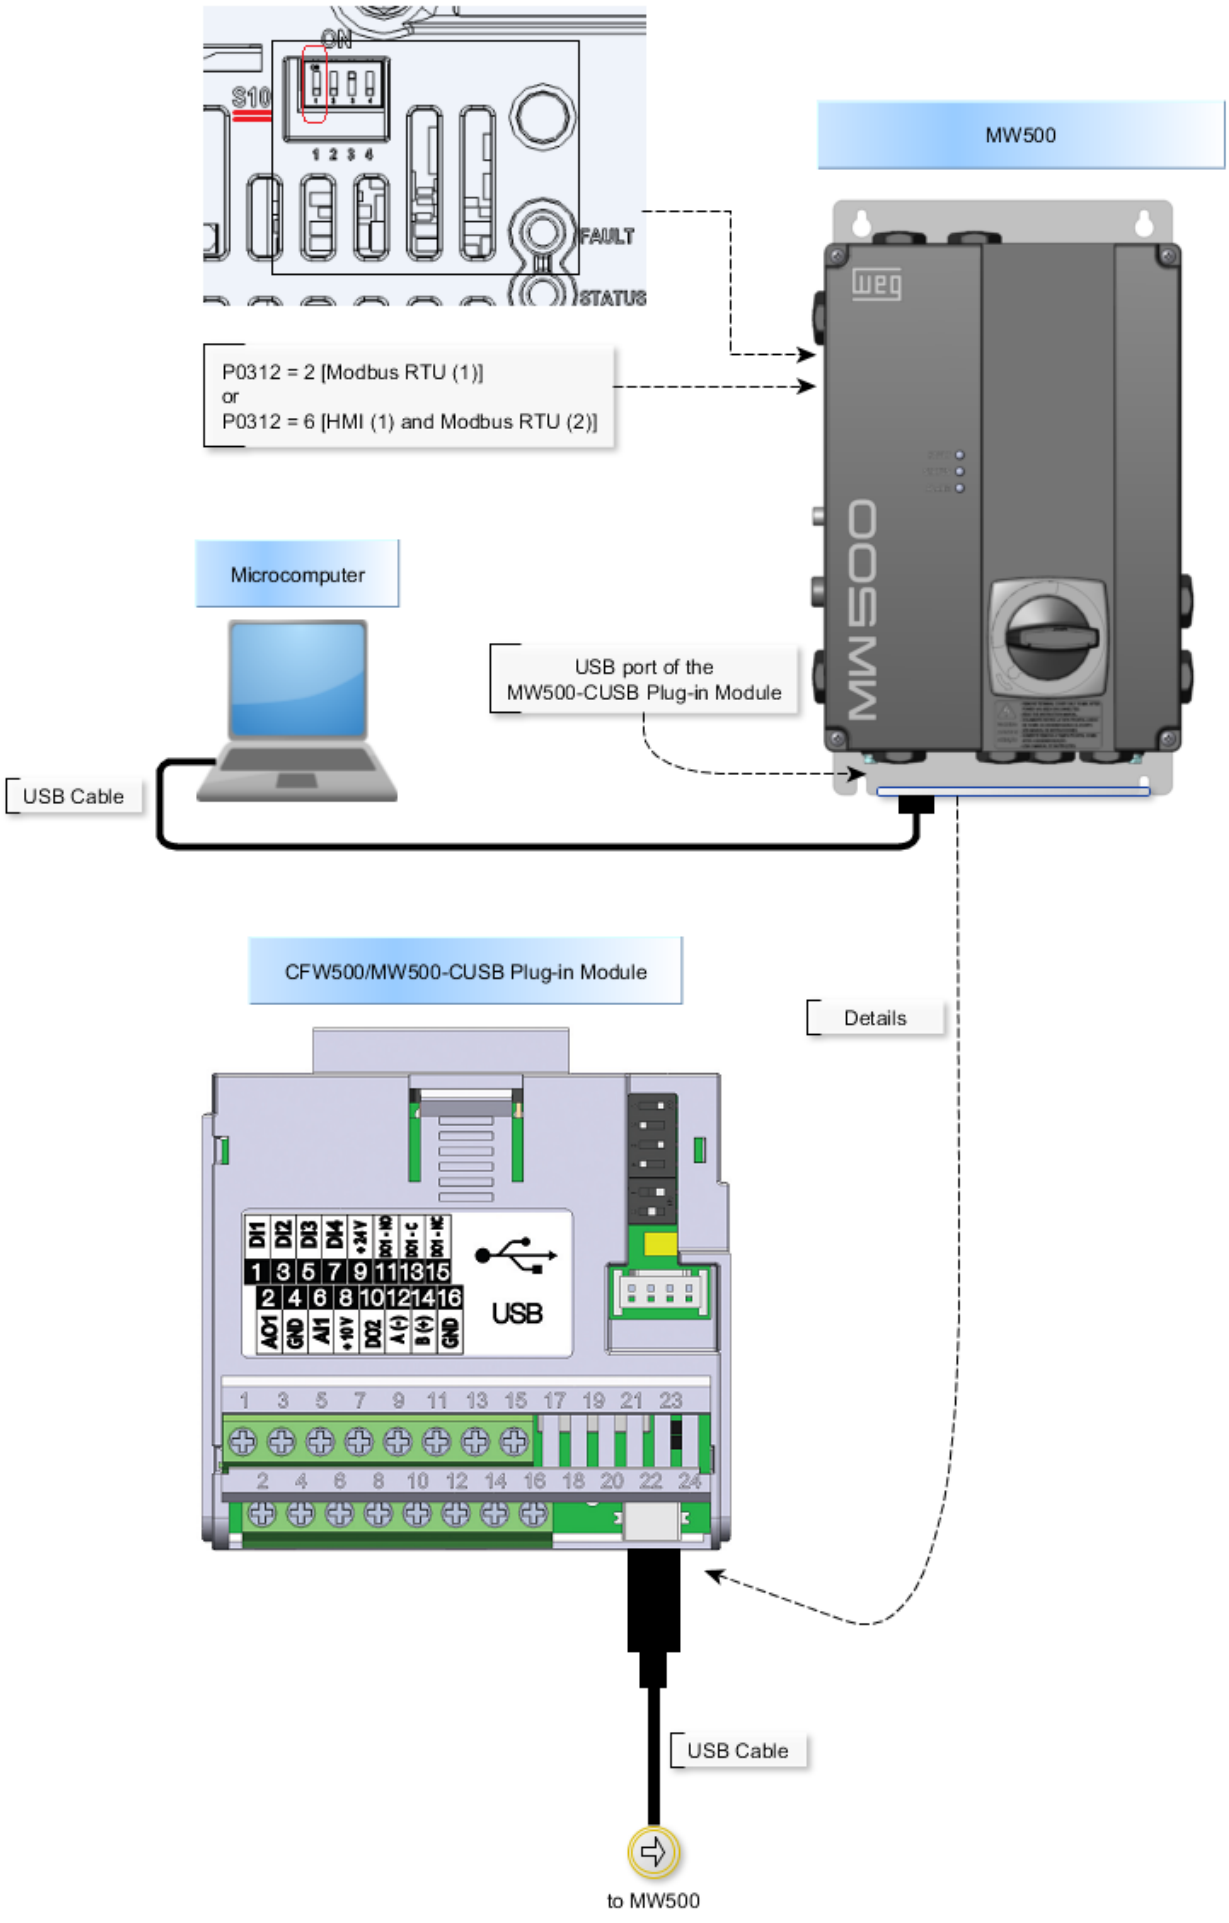
ON
S10
1 2 3 4
FAULT
STATUS
MW500
P0312 = 2 [Modbus RTU (1)]
or
P0312 = 6 [HMI (1) and Modbus RTU (2)]
Microcomputer
USB port of the
MW500-CUSB Plug-in Module
USB Cable
CFW500/MW500-CUSB Plug-in Module
Details
USB
USB Cable
to MW500

Device manager in Windows indicates which serial port is connected to the drive.
The computer name in device manager is purposely unreadable.

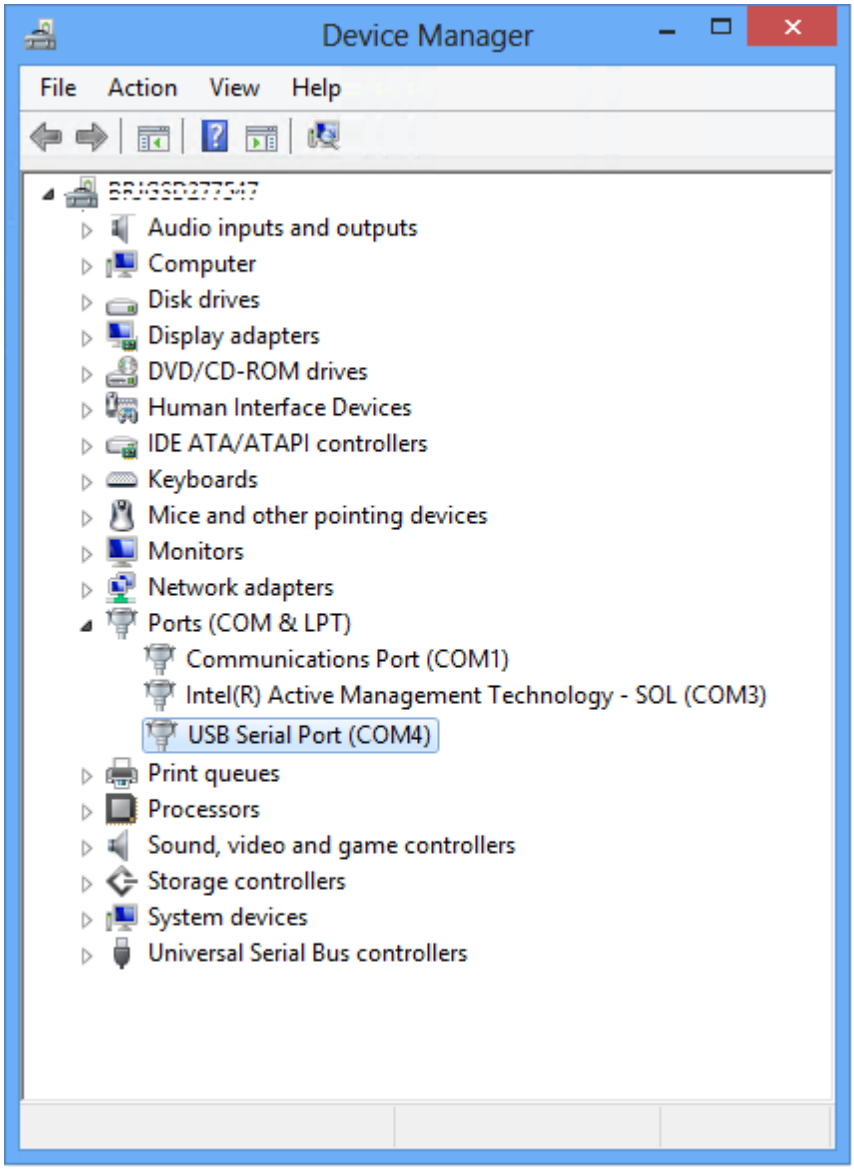

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

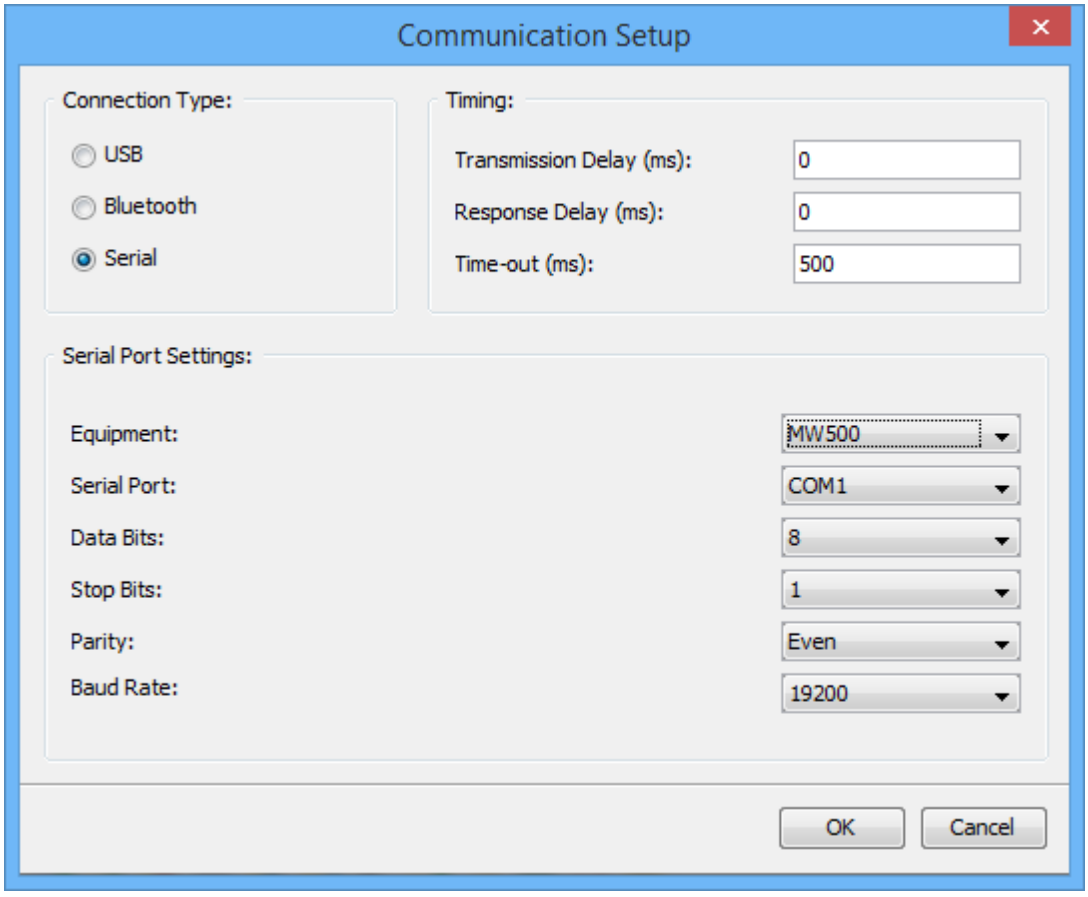

WARNING!
Switch off the drive before making the connections.

1. Connect the mini-B connector of usb cable to the usb connector of the drive.
2. Connect the type A connector of usb cable to the computer usb port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

6.4 Connecting the Drive (RS232)

The drive should be located at a distance shorter than 10 m from the computer.

SSW-06

Figure below shows how to connect a computer to the drive (RS232 point-to-point).

WARNING!
Switch off the drive before making the connections.

1. Opens the front cover of the drive.
2. Connect the RS232 PC/Drive Serial Cable to the X2 serial connector.
3. Plug DB9 connector directly into any one of the computer serial COM port. Use one of the available serial ports, since this information will be necessary later on SuperDrive G2 Communication Setup during operation.
4. Configure the communication parameters on the drive. The communication parameters are described in Drive Parametrization.

SSW-07

Figure below shows how to connect a computer to the drive (RS232 point-to-point).

WARNING!
Switch off the drive before making the connections.

1. Take out the optional plug-in cover.
2. Replace the cover with the optional plug-in module. Make sure that the module is connected.
3. Insert the DB9 connector of the RS232 Connection Cable to the optional module (XC41 connector) and tighten the screws to fix the connector.
4. Plug DB9 connector directly into any one of the computer serial COM port. Use one of the available serial ports, since this information will be necessary later on the SuperDrive G2 Communication Setup during operation.

5. Configure the communication parameters on the drive. The communication parameters are described in Drive Parametrization.

SSW-08

WARNING!
Switch off the drive before making the connections.

1. Take out the optional plug-in cover.
2. Replace the cover with the optional plug-in module. Make sure that the module is connected.
3. Insert the DB9 connector of the RS232 Connection Cable to the optional module (XC41 connector) and tighten the screws to fix the connector.
4. Plug DB9 connector directly into any one of the computer serial COM port. Use one of the available serial ports, since this information will be necessary later on the SuperDrive G2 Communication Setup during operation.
5. Configure the communication parameters on the drive. The communication parameters are described in Drive Parametrization.

MW500

WARNING!
Switch off the drive before making the connections.

1. Be sure that accessory RS232 Serial Interface Module is present and correctly connected to the drive.
2. Connect the DB9 connector from RS232 Connection Cable to the DB9 serial connector of RS232 Serial Interface Module.
3. Plug the another DB9 connector of cable directly into any one of the computer serial COM port. Use one of the available serial ports, since this information will be necessary later on the SuperDrive G2 Communication Setup during operation.
4. Configure the communication parameters on the drive. The communication parameters are described in Drive Parametrization.

CFW-09 PM

WARNING!
Switch off the drive before making the connections.

1. Remove the keypad (HMI) from the inverter.
2. Install RS232 Serial Interface Module in place of the keypad.
3. Connect the RS232 PC/Drive Serial Cable to the XC7 serial connector.
4. Plug DB9 connector directly into any one of the computer serial COM port. Use one of the available serial ports, since this information will be necessary later on the SuperDrive G2 Communication Setup during operation.
5. Configure the communication parameters on the drive. The communication parameters are described in Drive Parametrization.

6.5 Connecting the Drive (RS485)

The drive should be located at a distance shorter than 1000 m from the computer.

CFW700 / CFW701

Figure below shows how to connect a computer to the drive (RS485 point-to-point).

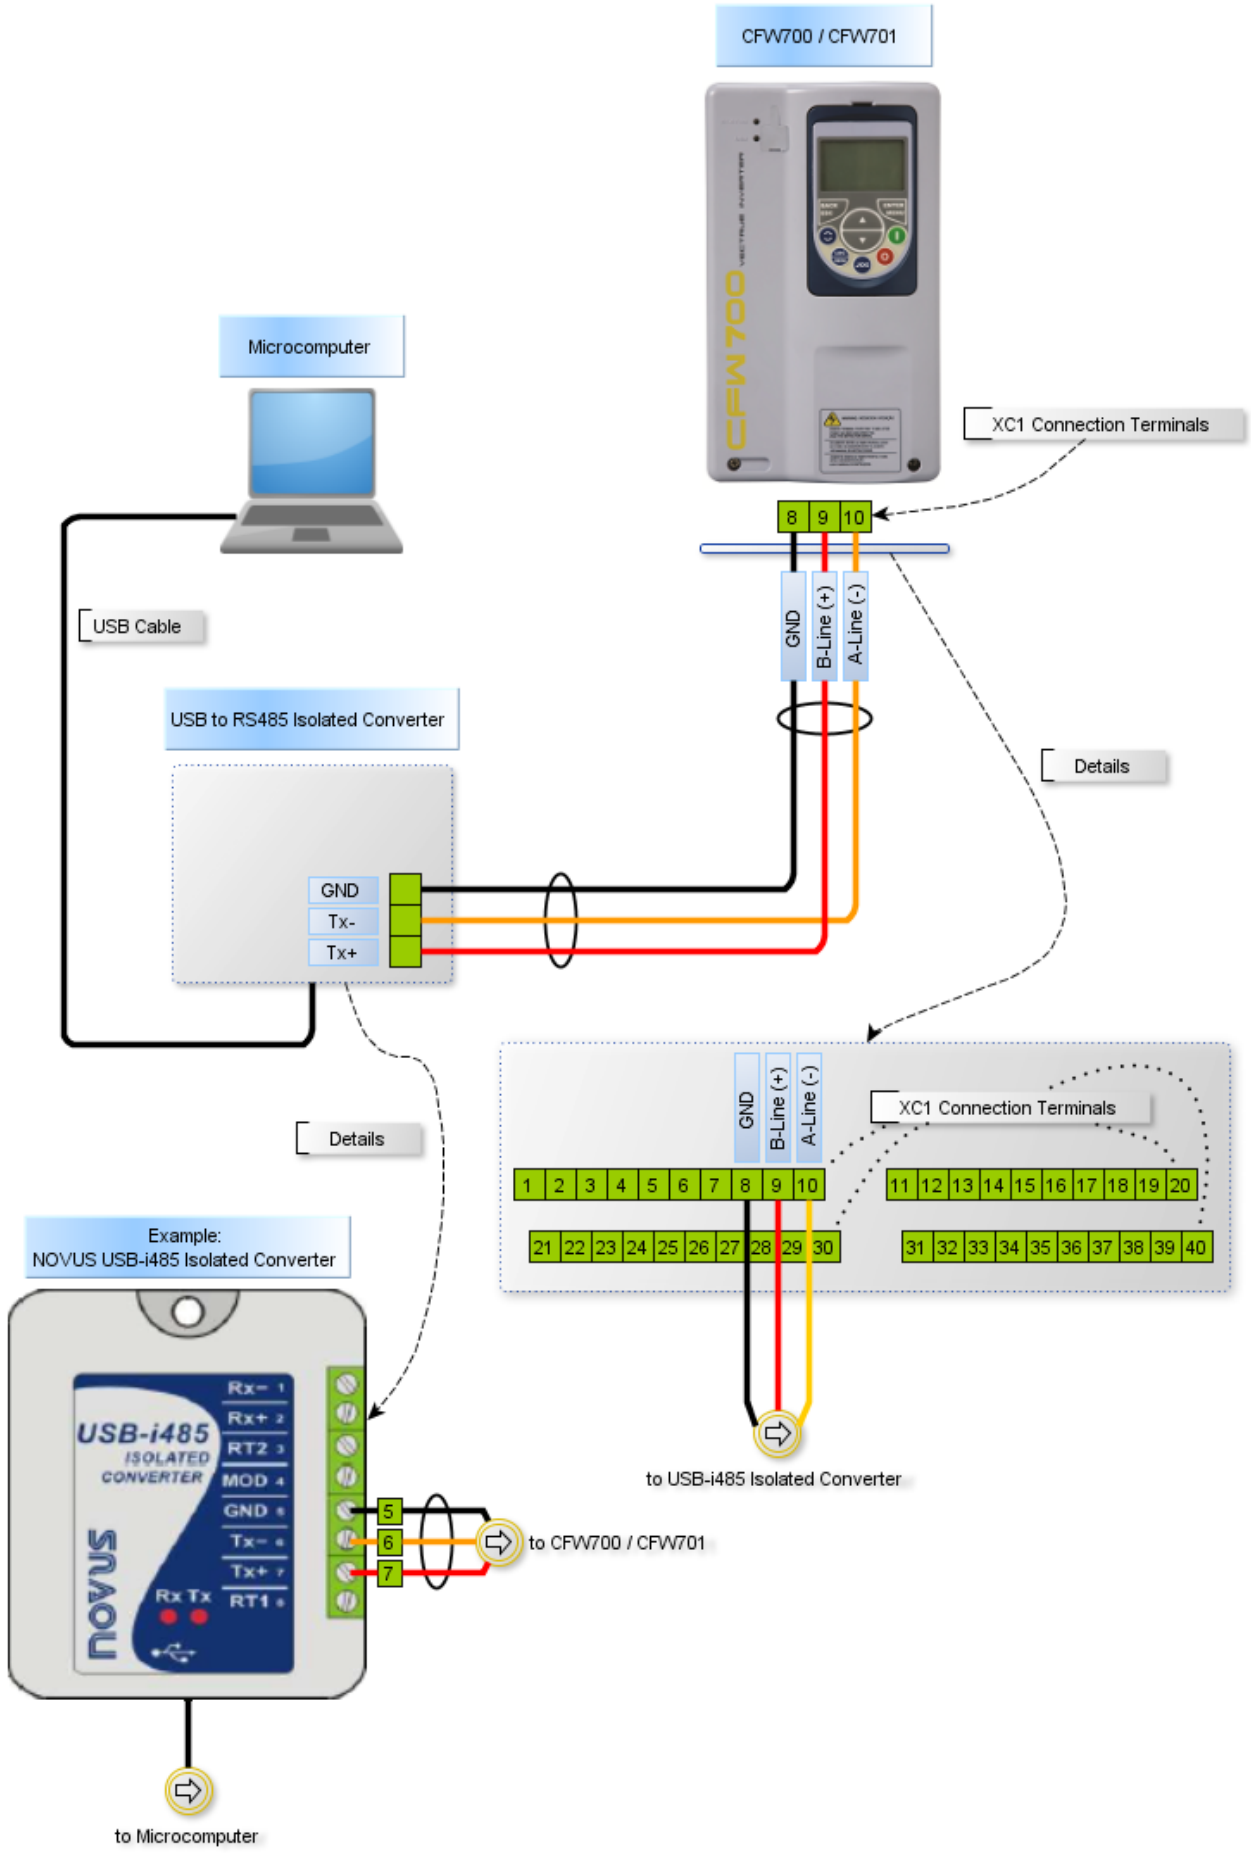
CFW700 / CFW701
Microcomputer
XC1 Connection Terminals
8 9 10
GND
B-Line (+)
A-Line (-)
USB Cable
USB to RS485 Isolated Converter
Details
GND
Tx-
Tx+
GND
B-Line (+)
A-Line (-)
XC1 Connection Terminals
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40
Details
Example:
NOVUS USB-i485 Isolated Converter
USB-i485
ISOLATED
CONVERTER
Rx- 1
Rx+ 2
RT2 3
MOD 4
GND 5
Tx- 6
Tx+ 7
RT1 8
Rx Tx
NOVUS
5
6
7
to CFW700 / CFW701
to USB-i485 Isolated Converter
to Microcomputer

Device manager in Windows indicates which serial port is connected to the USB RS485 converter.
The computer name in device manager is purposely unreadable.

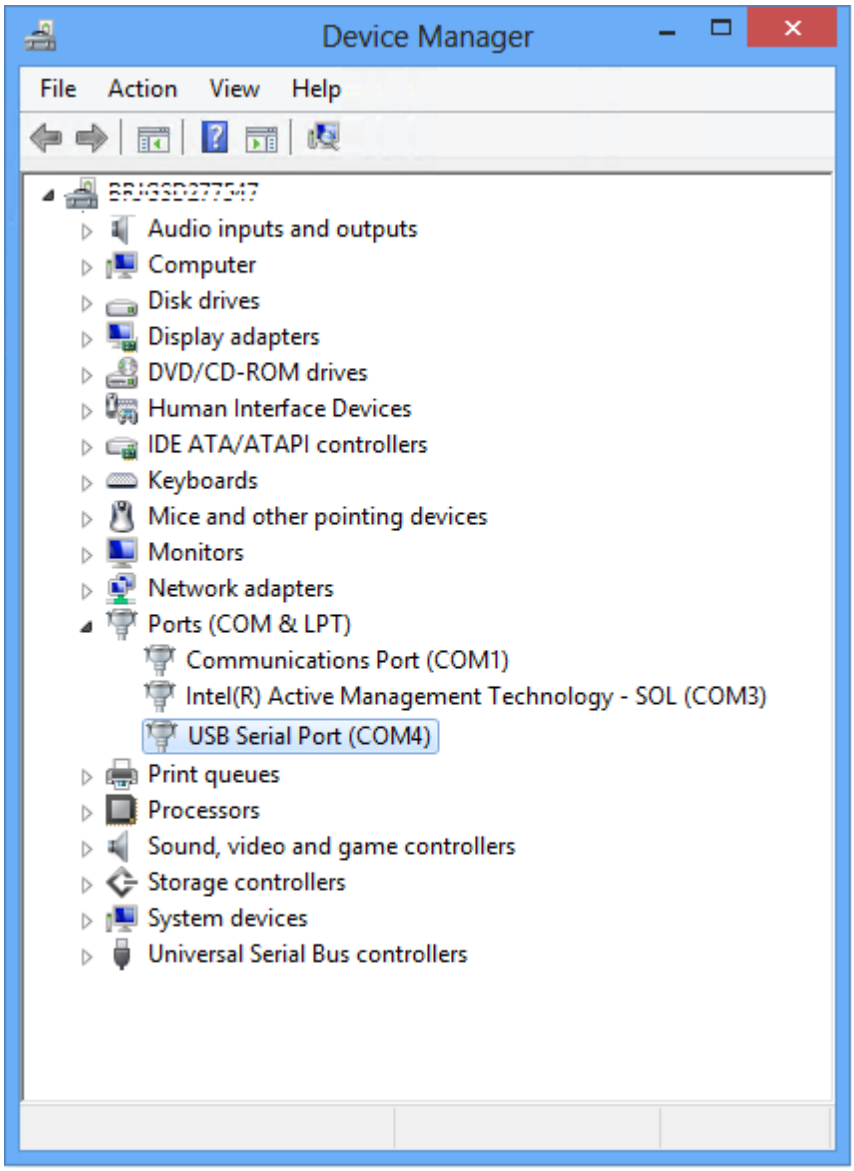

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

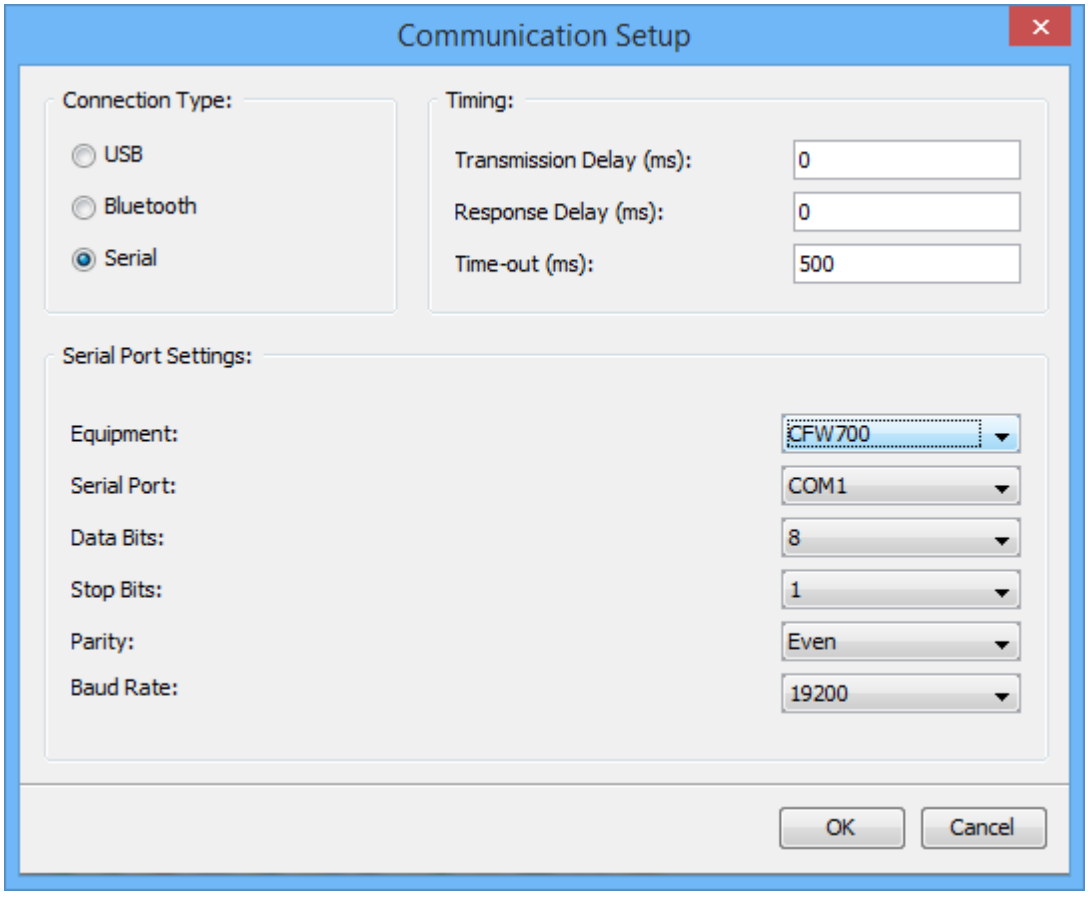

WARNING!
Switch off the drive before making the connections.

1. Connect the type B connector of USB cable to the USB connector of the USB RS485 converter.
2. Connect the type A connector of USB cable to the computer usb port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

CFW500 / CFW501

Figure below shows how to connect a computer to the drive (RS485 point-to-point).

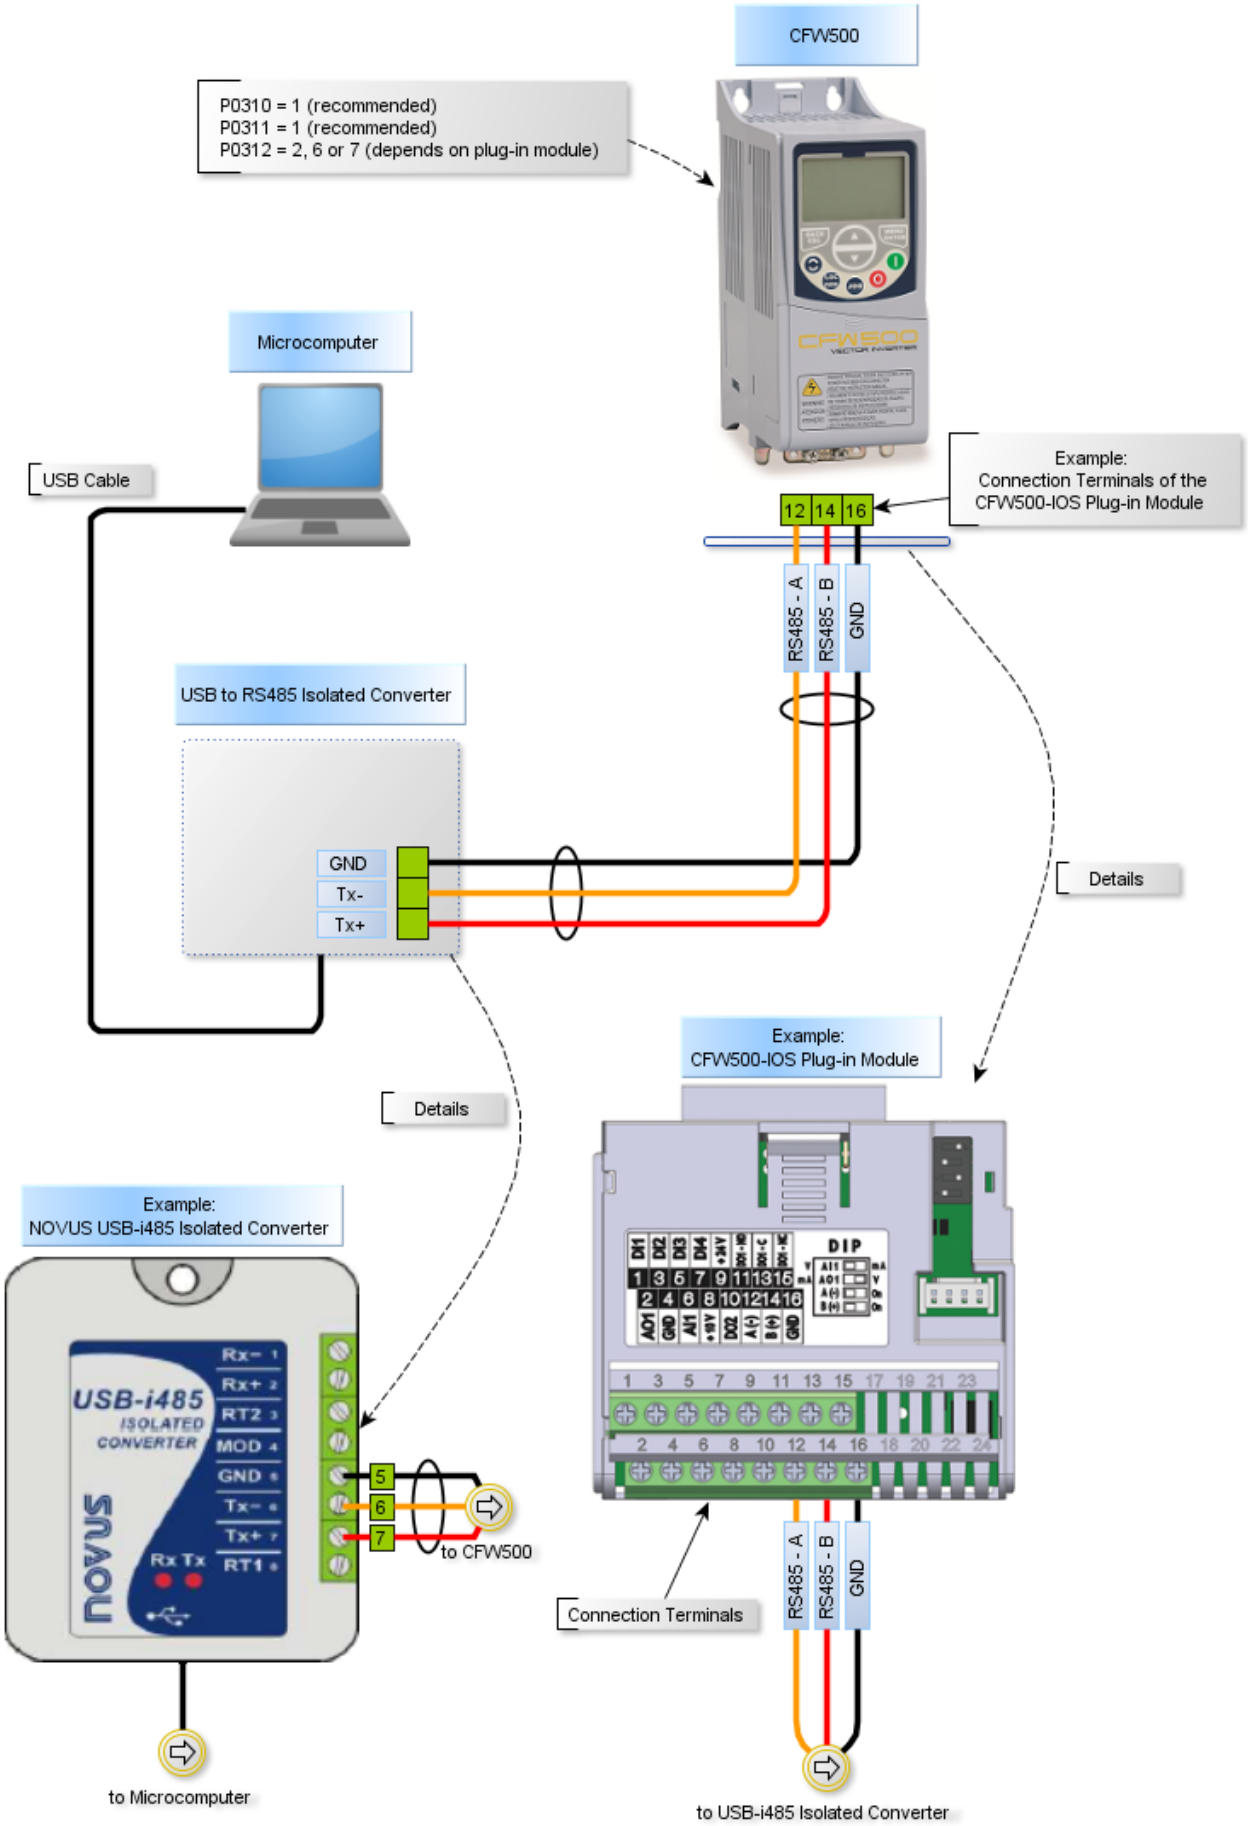
CFW500
P0310 = 1 (recommended)
P0311 = 1 (recommended)
P0312 = 2, 6 or 7 (depends on plug-in module)
Microcomputer
USB Cable
Example:
Connection Terminals of the
CFW500-IOS Plug-in Module
12 14 16
RS485 - A
RS485 - B
GND
USB to RS485 Isolated Converter
GND
Tx-
Tx+
Details
Example:
CFW500-IOS Plug-in Module
Details
Example:
NOVUS USB-i485 Isolated Converter
USB-i485
ISOLATED
CONVERTER
Rx- 1
Rx+ 2
RT2 3
MOD 4
GND 5
Tx- 6
Tx+ 7
RT1 8
Rx Tx
NOVUS
5
6
7
to CFW500
Connection Terminals
RS485 - A
RS485 - B
GND
to Microcomputer
to USB-i485 Isolated Converter

Device manager in Windows indicates which serial port is connected to the USB RS485 converter.
The computer name in device manager is purposely unreadable.

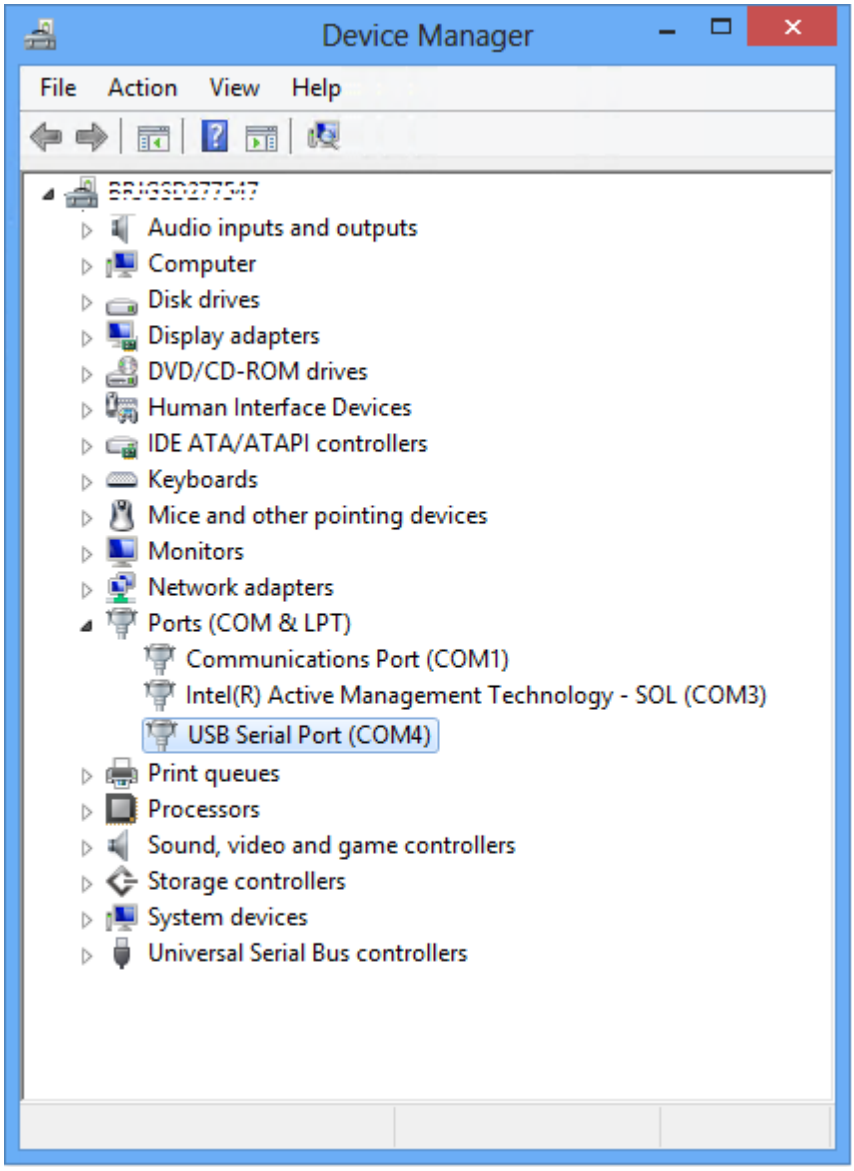

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

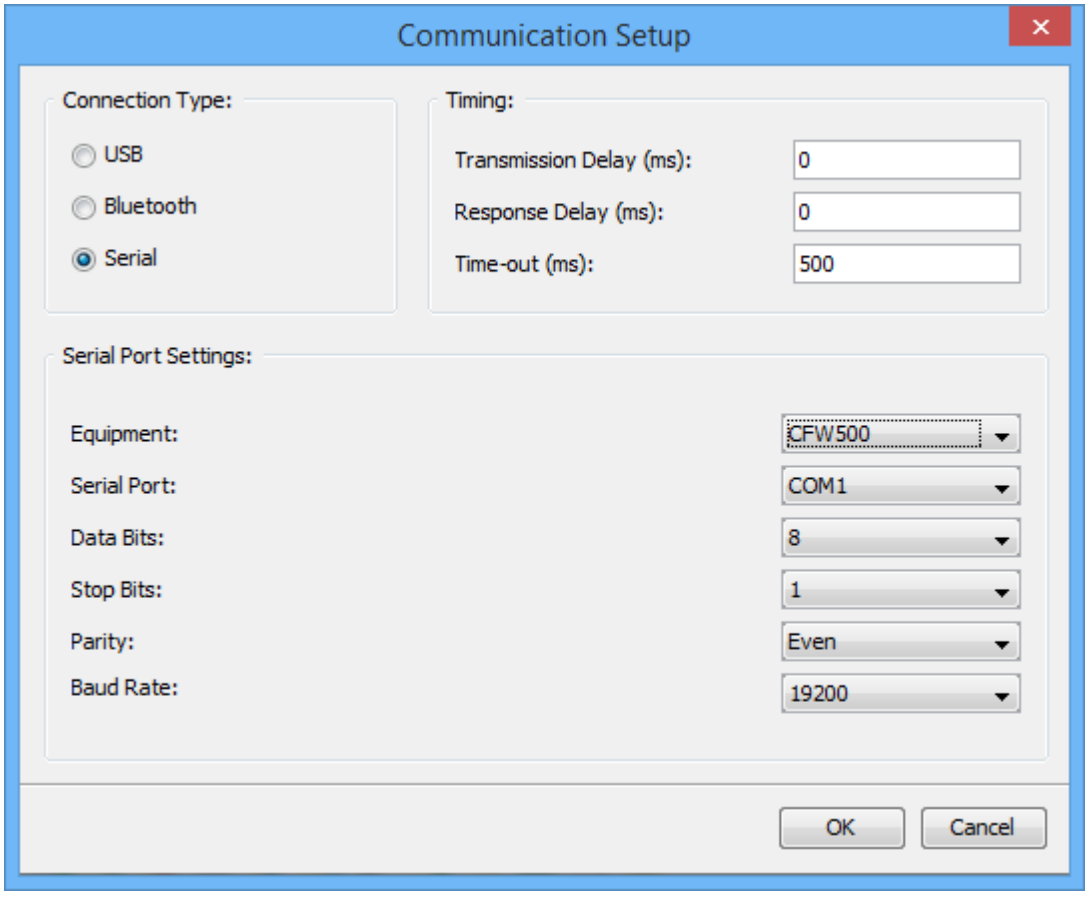

WARNING!
Switch off the drive before making the connections.

1. Connect the type B connector of USB cable to the USB connector of the USB RS485 converter.
2. Connect the type A connector of USB cable to the computer USB port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

CFW100

Figure below shows how to connect a computer to the drive (RS485 point-to-point).

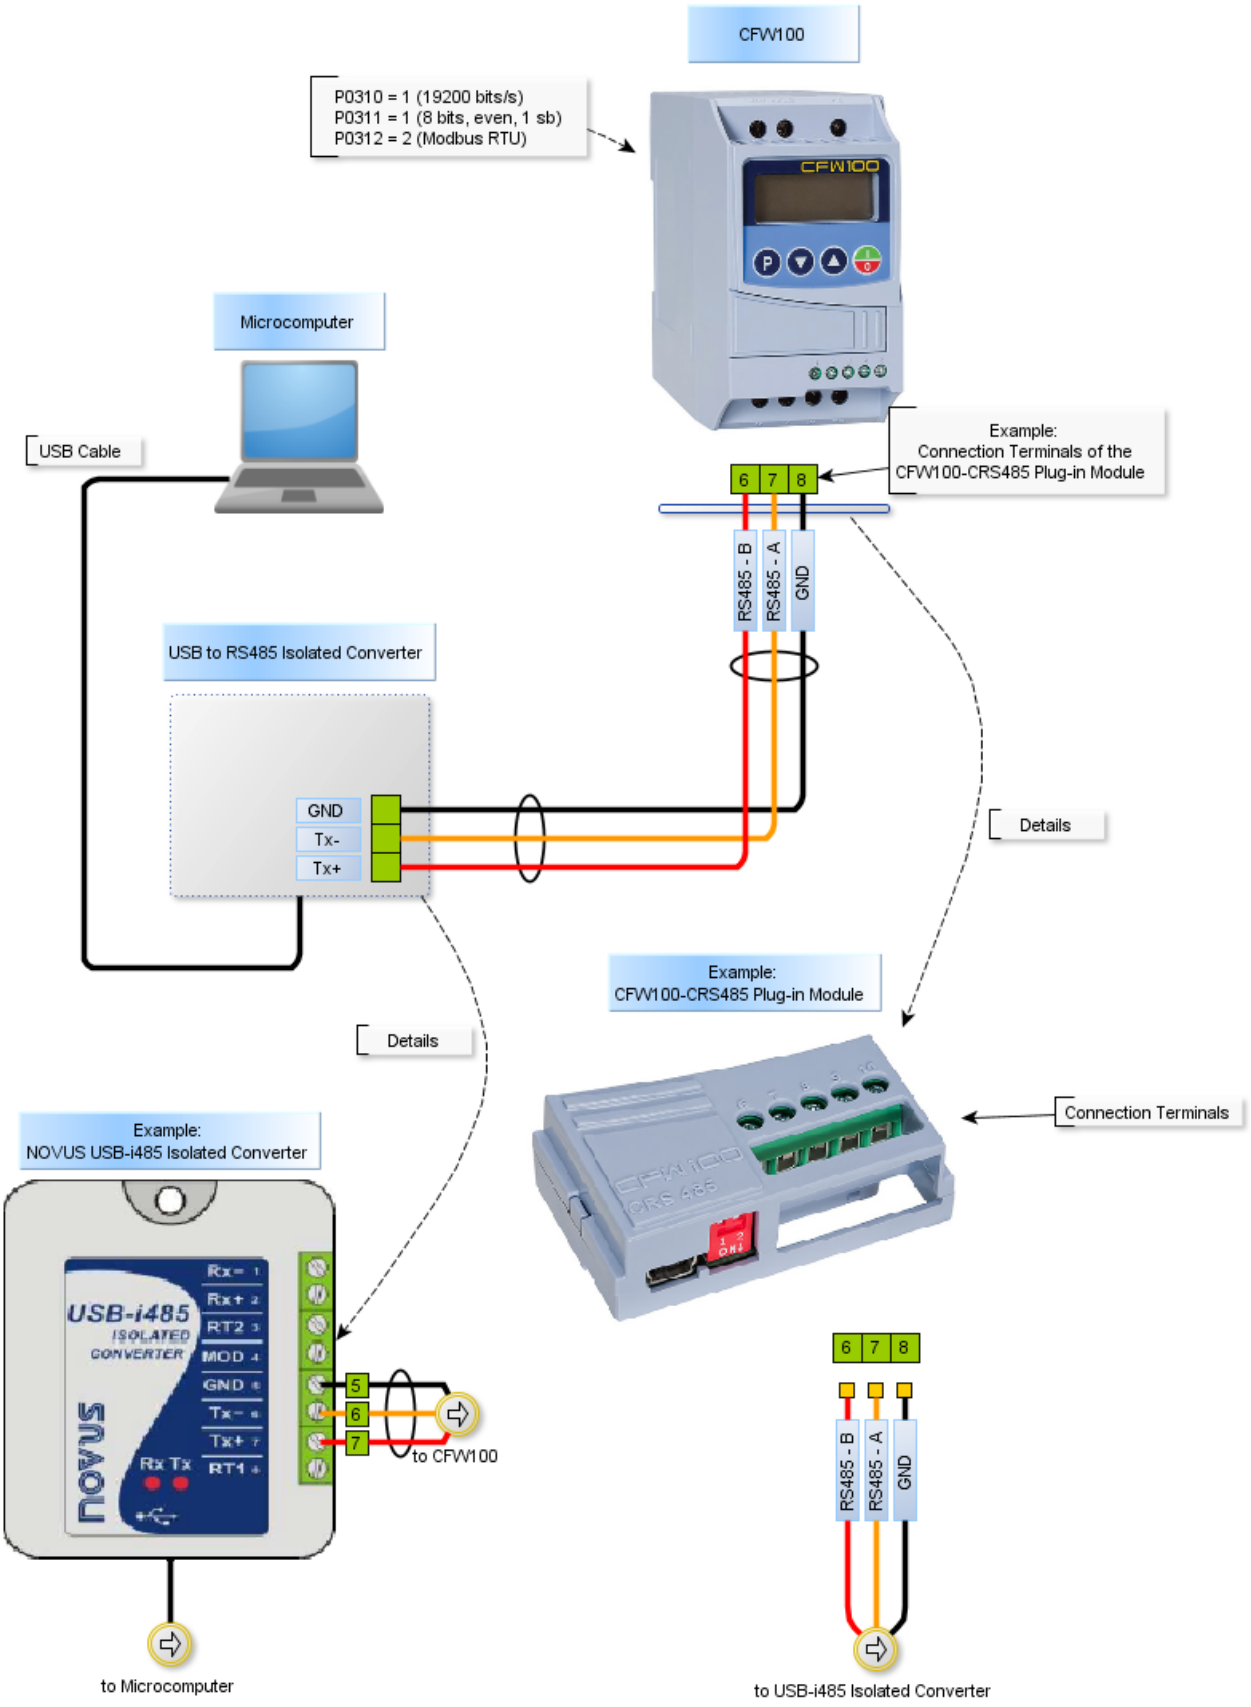

Device manager in Windows indicates which serial port is connected to the USB RS485 converter.
The computer name in device manager is purposely unreadable.

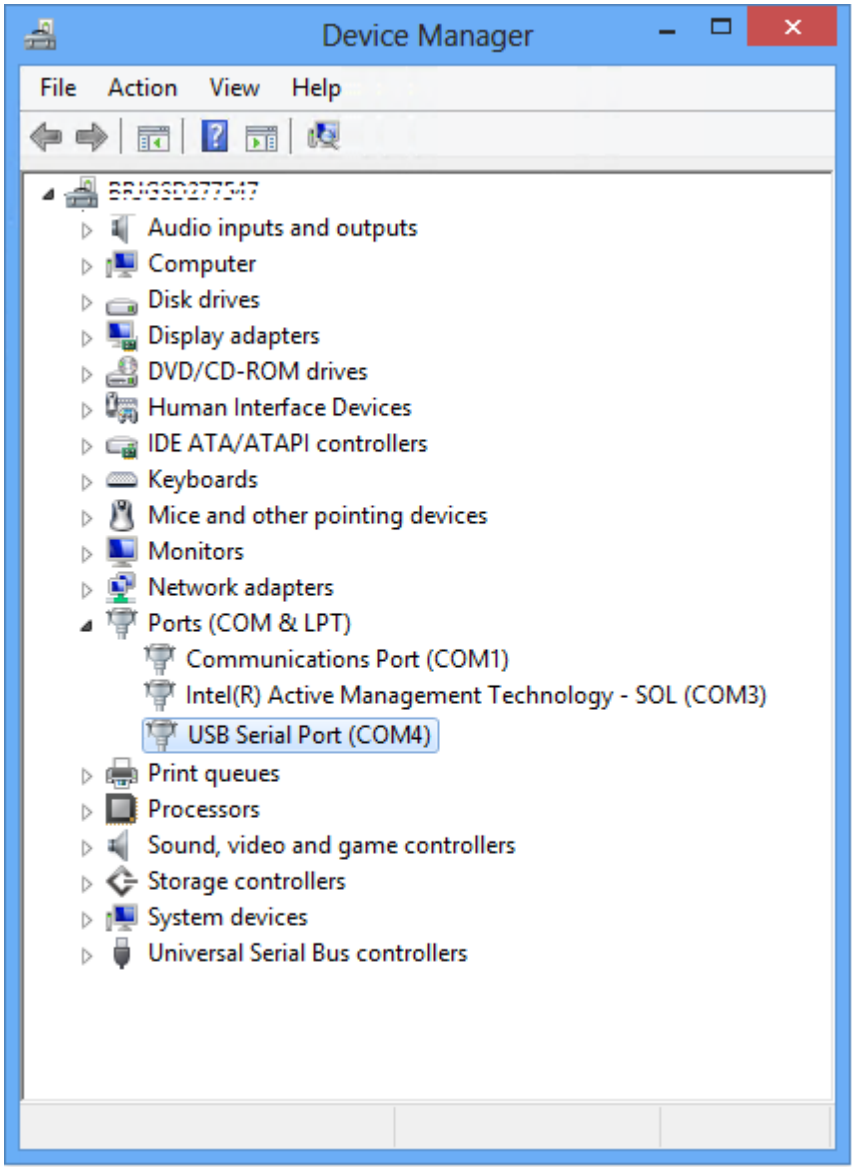

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

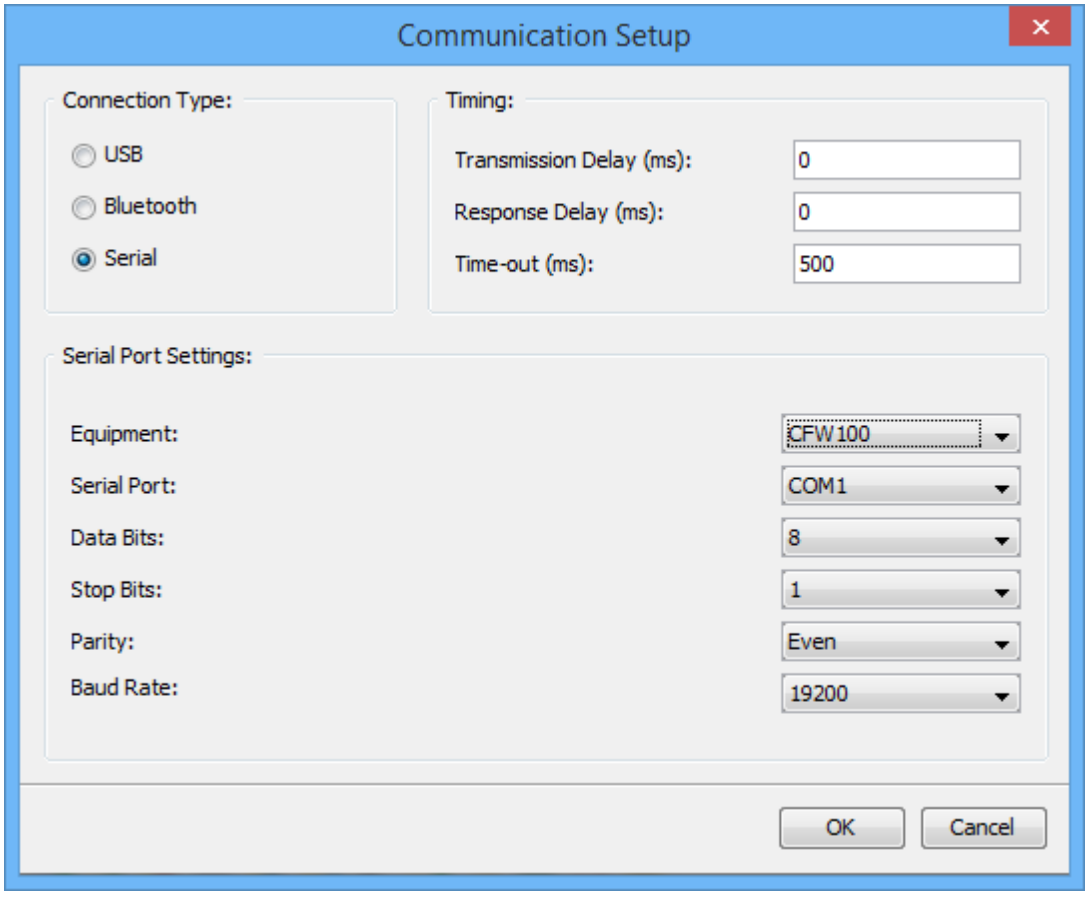

WARNING!
Switch off the drive before making the connections.

1. Connect the type B connector of USB cable to the USB connector of the USB RS485 converter.
2. Connect the type A connector of USB cable to the computer USB port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

MW500

Figure below shows how to connect a computer to the drive (RS485 point-to-point).

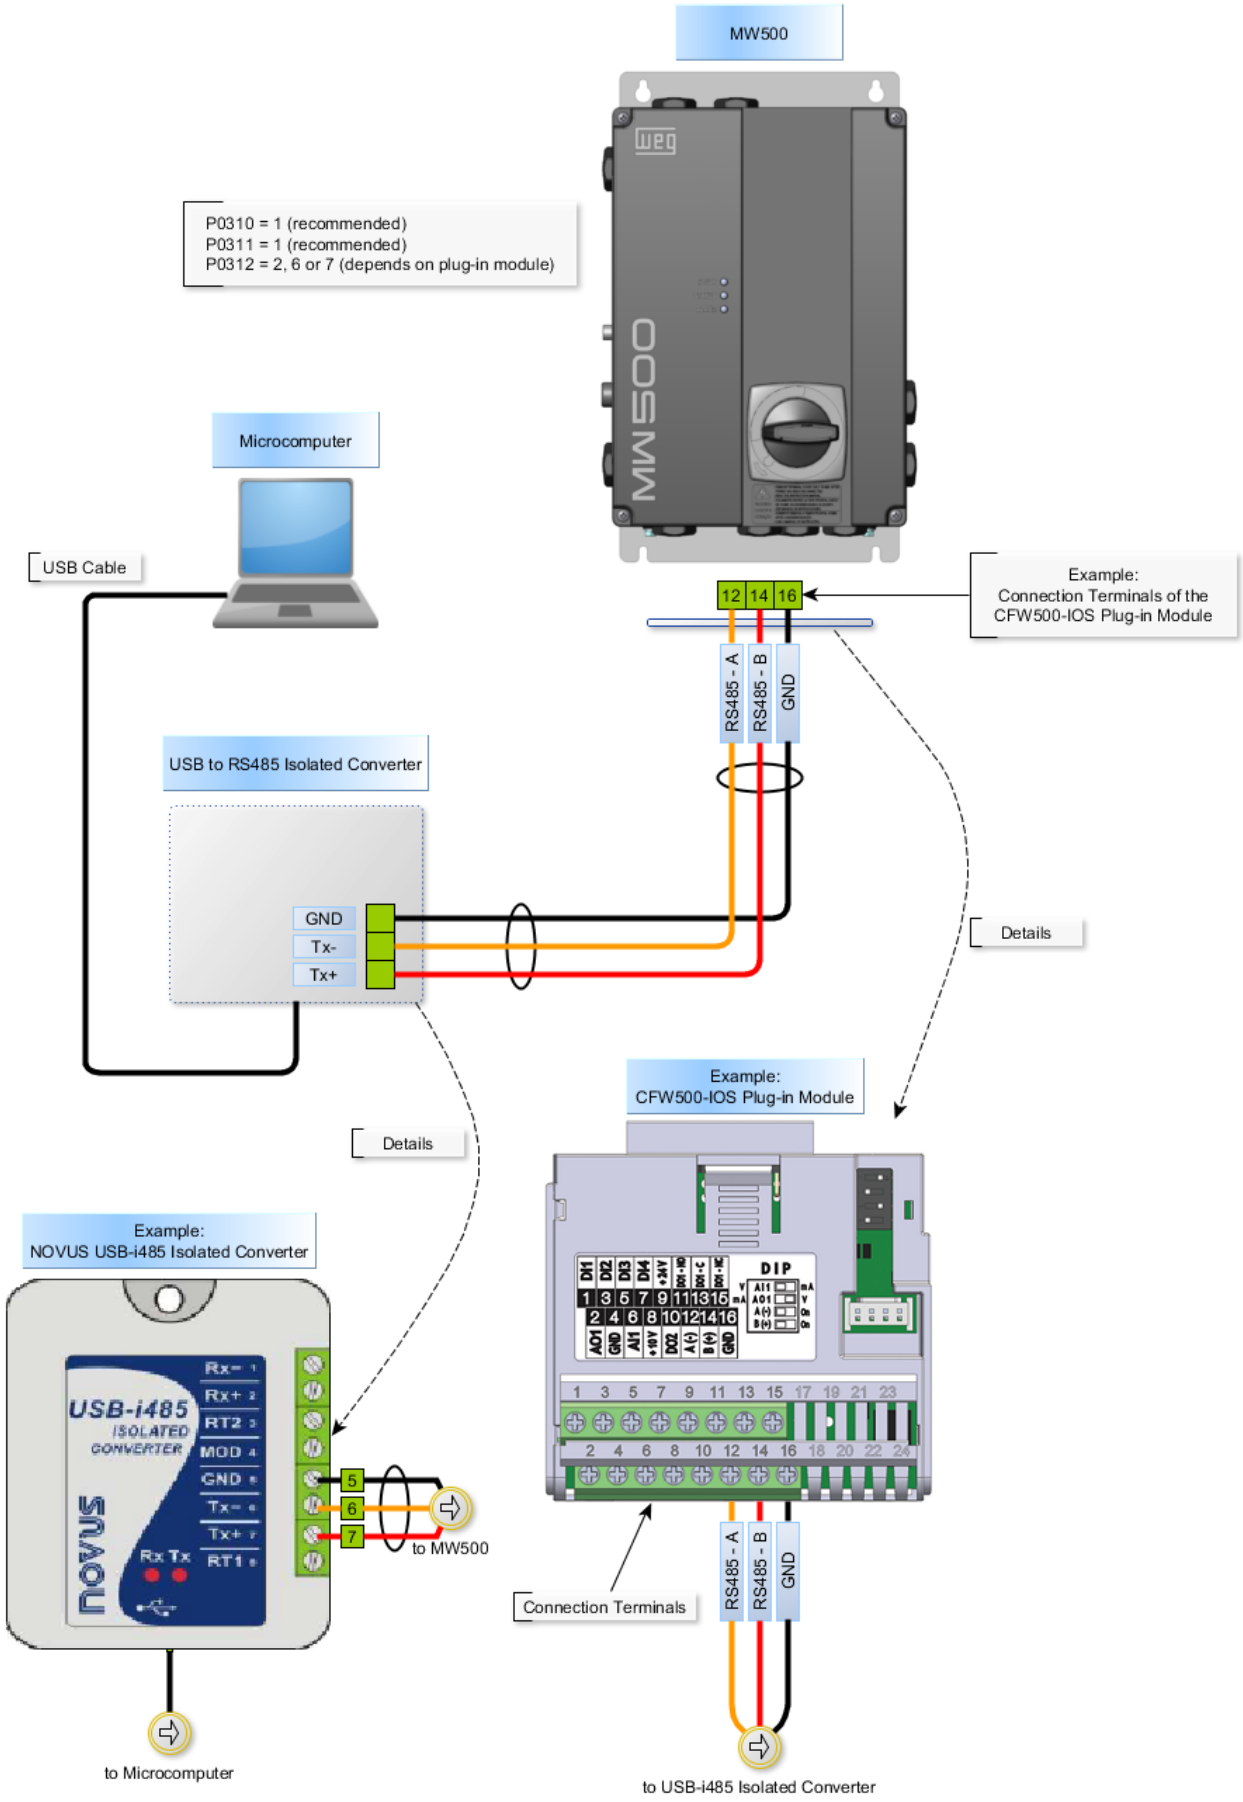

Device manager in Windows indicates which serial port is connected to the USB RS485

converter.
The computer name in device manager is purposely unreadable.

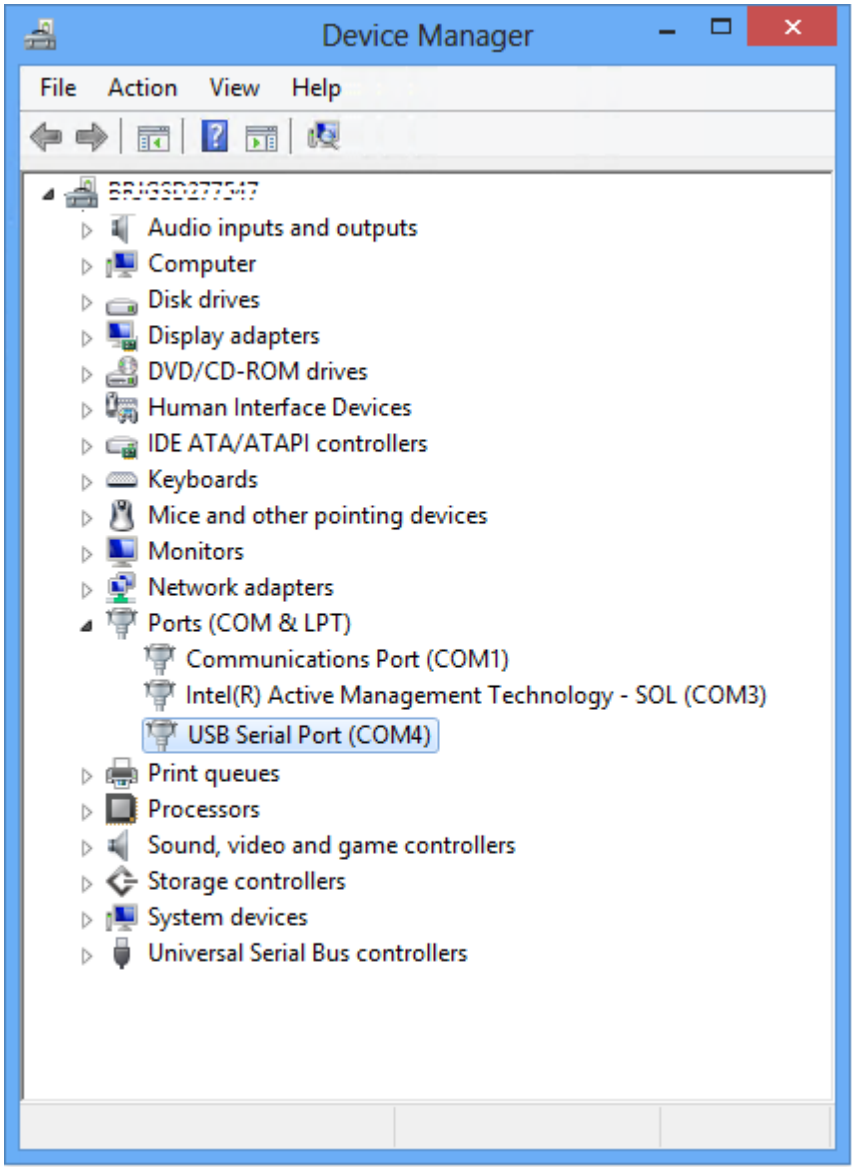

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

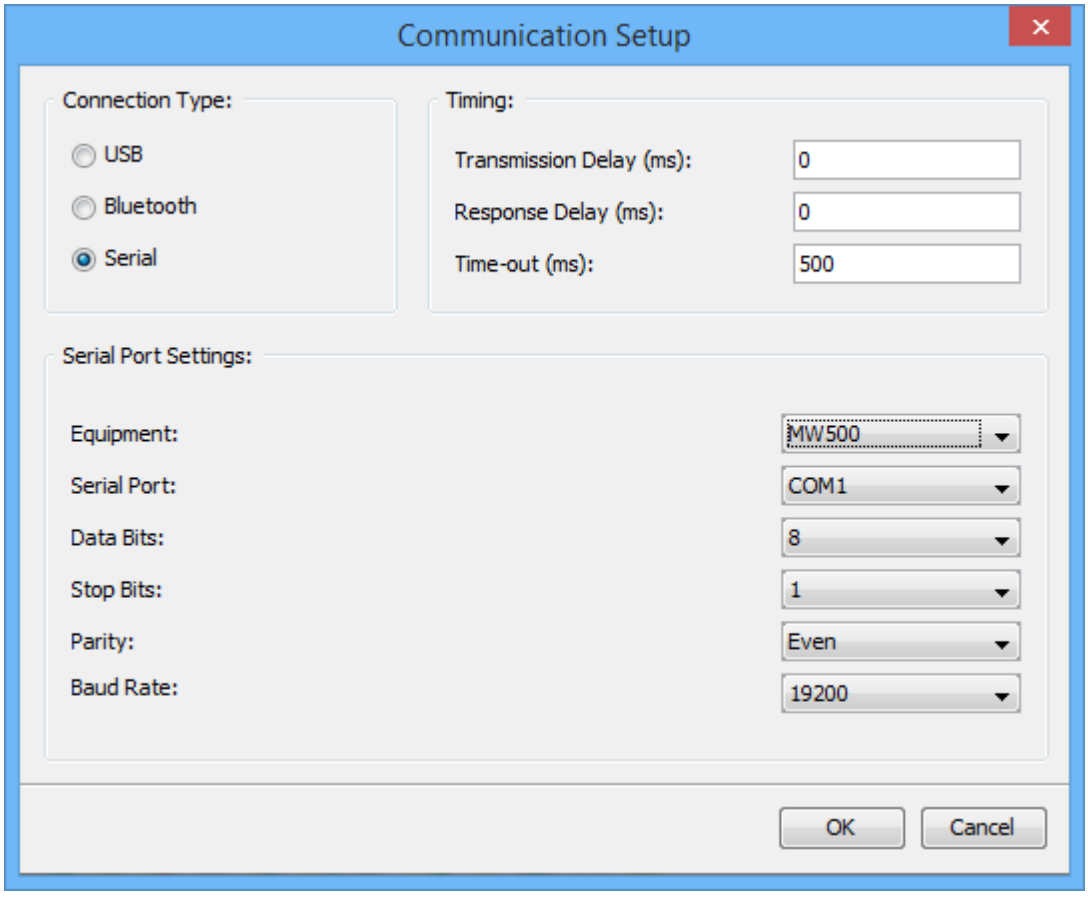

WARNING!
Switch off the drive before making the connections.

1. Connect the type B connector of USB cable to the USB connector of the USB RS485 converter.
2. Connect the type A connector of USB cable to the computer USB port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

ECW500

Figure below shows how to connect a computer to the drive (RS485 point-to-point).

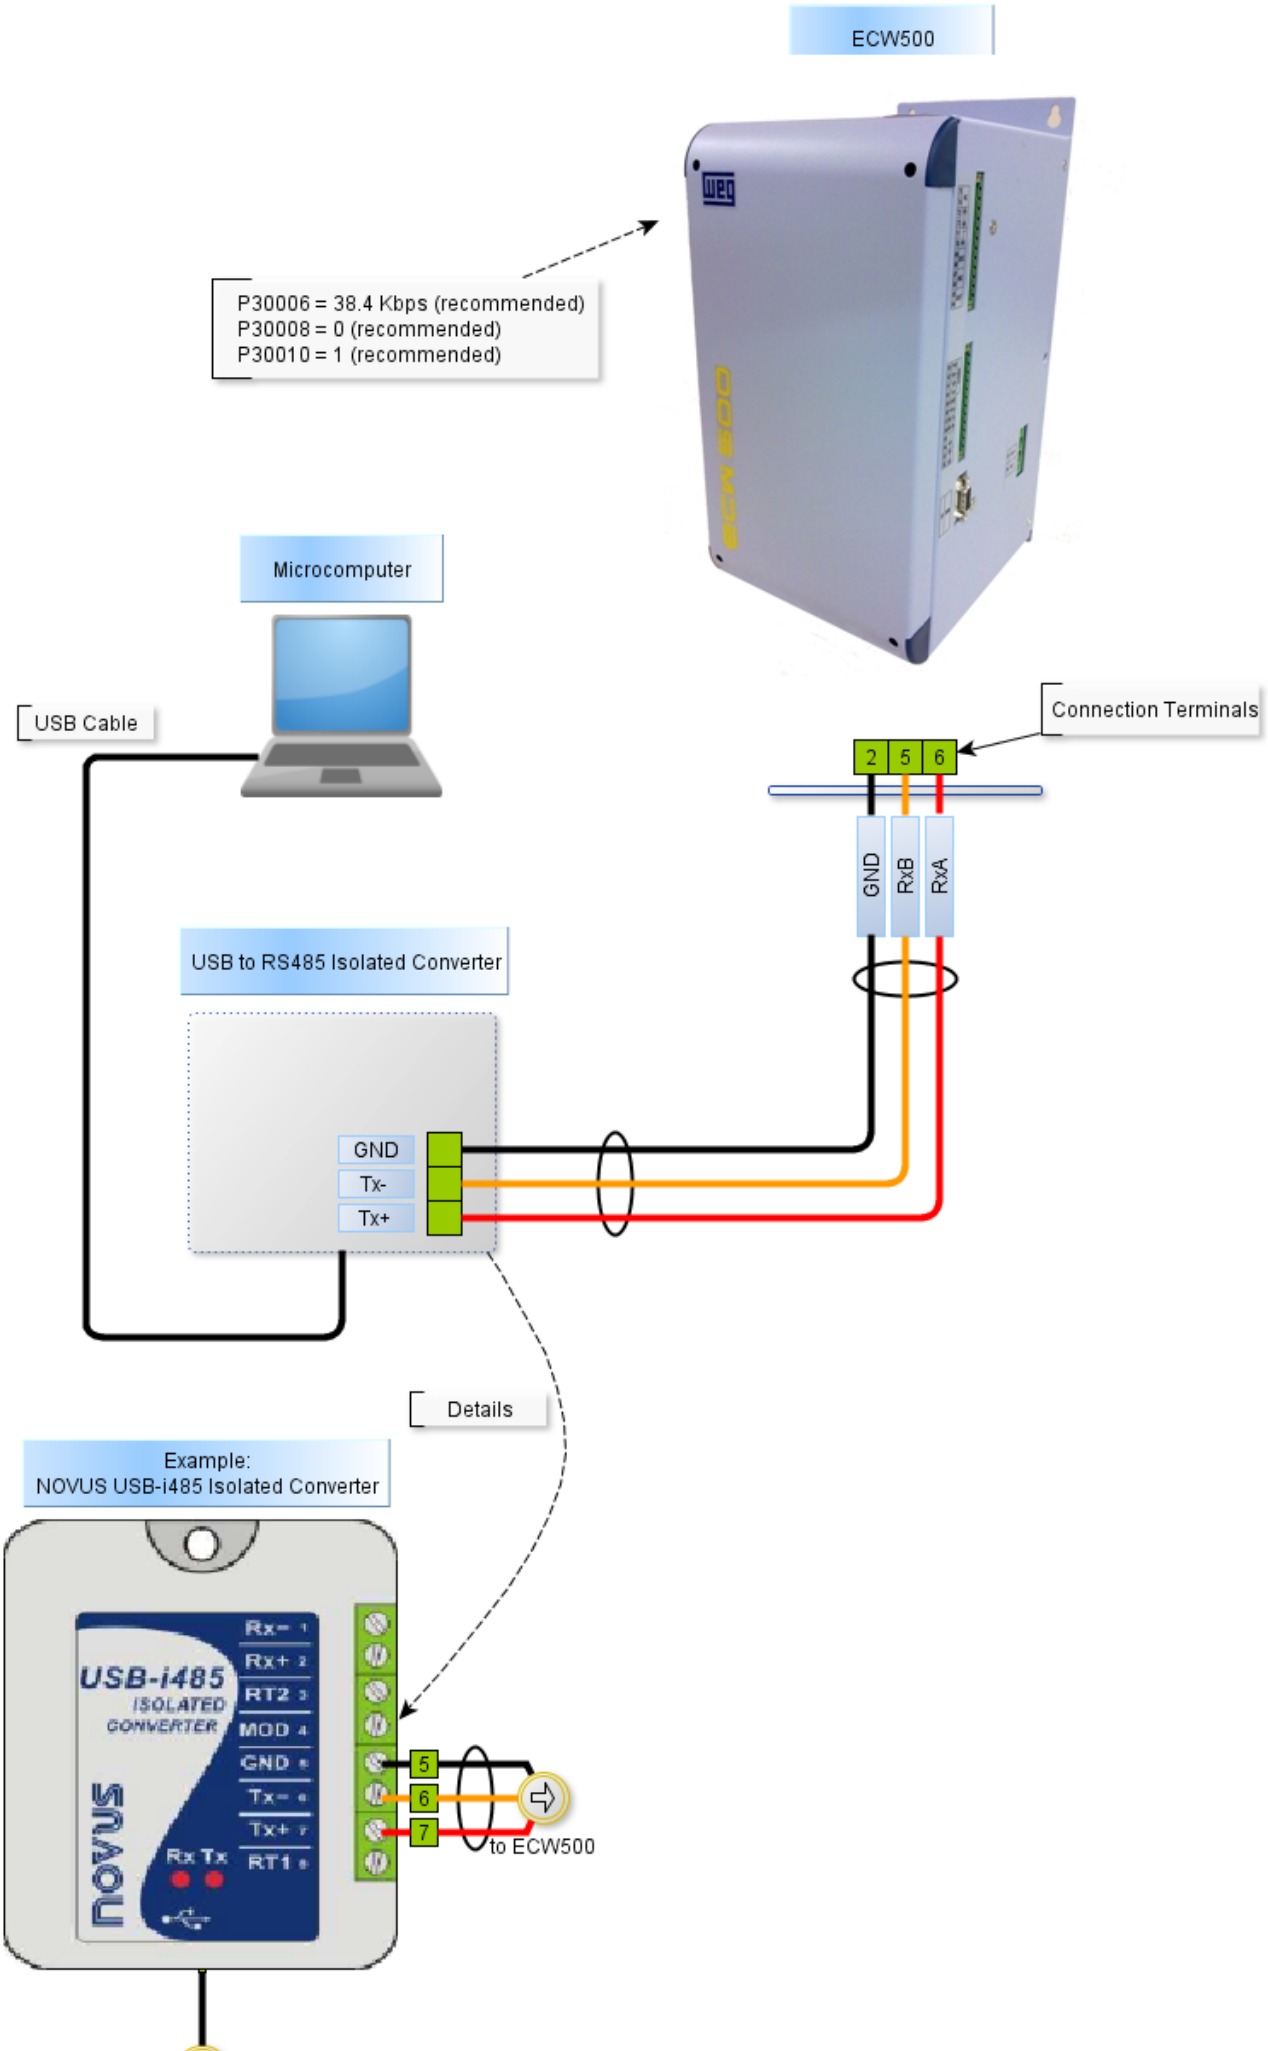
ECW500
P30006 = 38.4 Kbps (recommended)
P30008 = 0 (recommended)
P30010 = 1 (recommended)
Microcomputer
USB Cable
Connection Terminals
2
5
6
GND
RxB
RxA
USB to RS485 Isolated Converter
GND
Tx-
Tx+
Details
Example:
NOVUS USB-i485 Isolated Converter
USB-i485
ISOLATED
CONVERTER
Rx-
Rx+
RT2
MOD
GND
Tx-
Tx+
RT1
Rx Tx
5
6
7
to ECW500

Device manager in Windows indicates which serial port is connected to the USB RS485 converter.
The computer name in device manager is purposely unreadable.

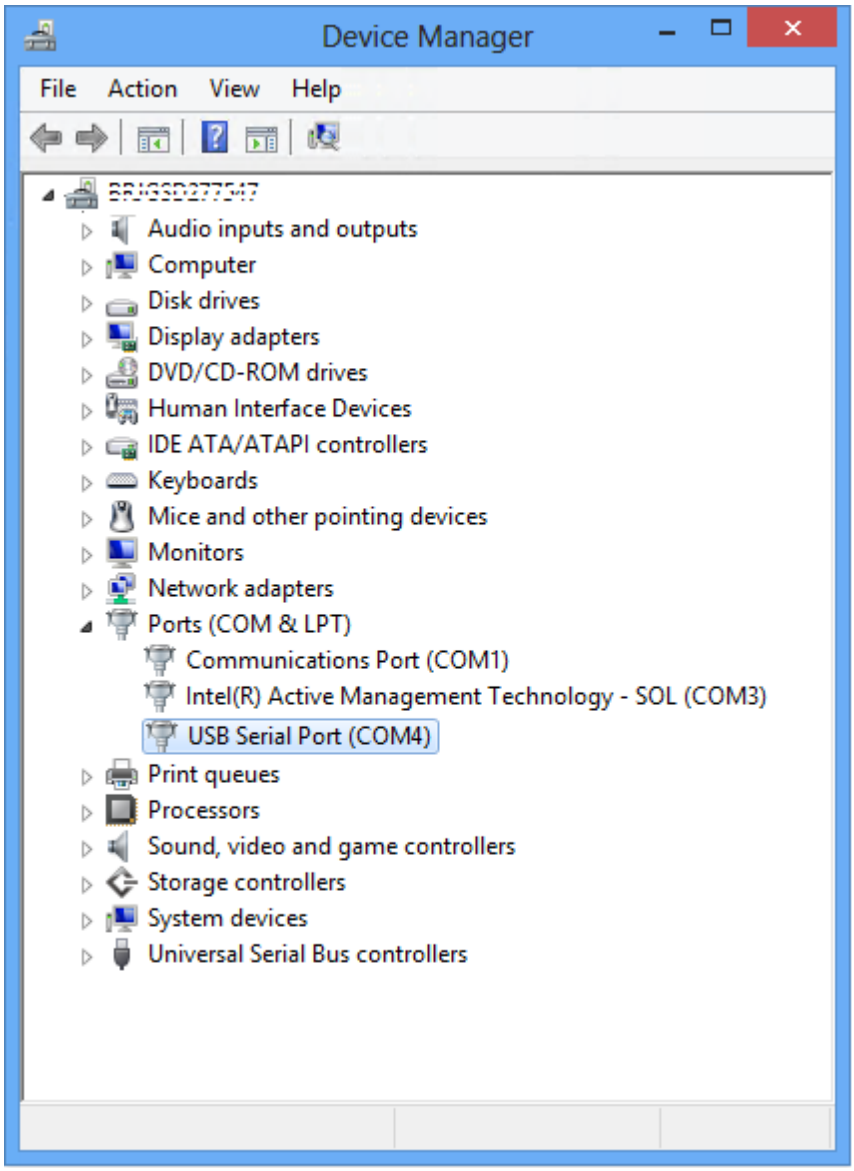

In SuperDrive G2, select the serial port correctly in Communication Setup window as follows.

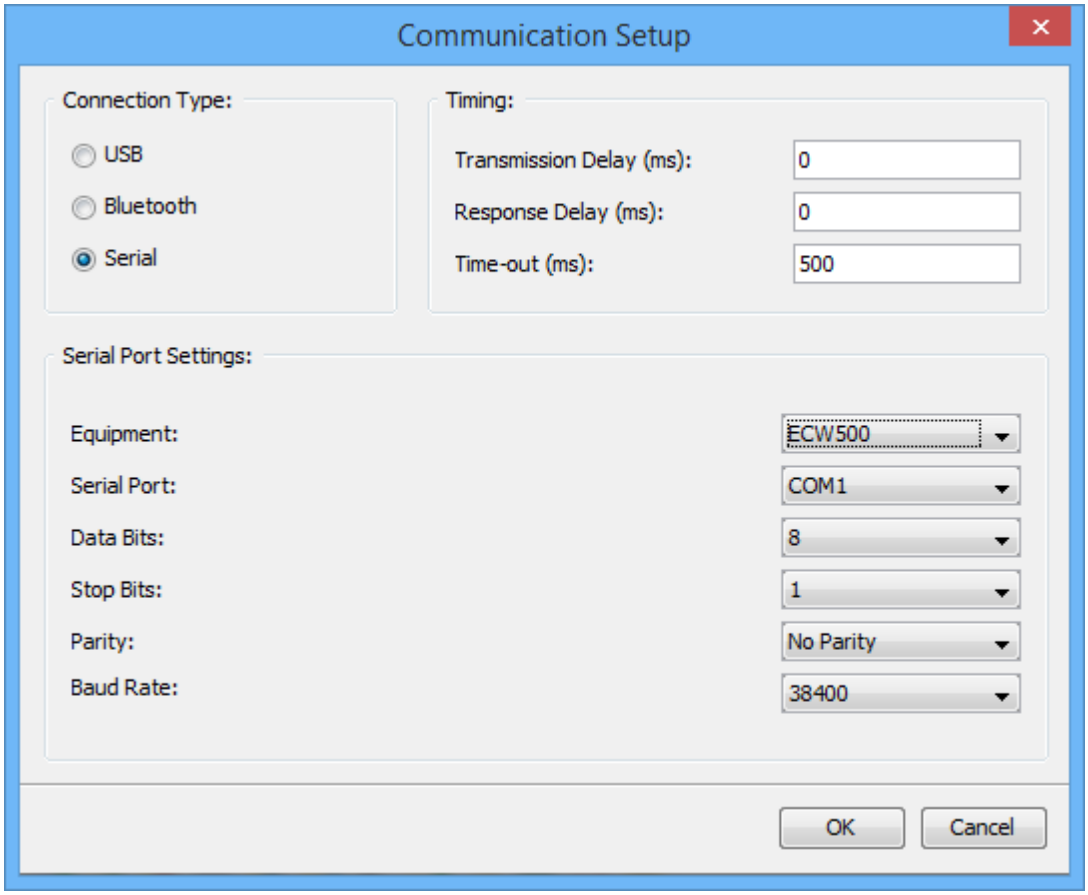

WARNING!
Switch off the drive before making the connections.

1. Connect the type B connector of USB cable to the USB connector of the USB RS485 converter.
2. Connect the type A connector of USB cable to the computer USB port.
3. In device manager check which serial port is connected.
4. Check if in the SuperDrive G2 Communication Setup the selected connection type is serial.
5. The serial port in the window of communication setup window should be the same serial port that appears in the device manager, where the USB cable is connected.

6.6 Connecting the Drive (Bluetooth)

Bluetooth is a wireless technology standard for exchanging data over short distances.

The drive must be placed less than 3ft, 33ft or 330ft from computer, depending on Bluetooth class available in the computer.

Class	Alcance
Class 1	Until 330 ft (100 m)
Class 2	Until 33 ft (10 m)
Class 3	Until 3 ft (1 m)

CFW100

The image below shows how to connect a computer to the drive via Bluetooth.

1) Drive with CFW100-CBLT accessory.

Be sure the drive has a Bluetooth communication module named CFW100-CBLT.

Be sure the drive has parameters P310, P311 and P312 set with the factory default values.

If the computer does not have Bluetooth technology, use an Bluetooth USB adapter.

NOTE!
Once USB Bluetooth adapter was enabled in computer, it can not be removed or replaced during its utilization.
For the proper operation of the CFW100 inverter with the CFW100-CBLT module, parameters P310, P311 and P312 must be set with the factory default values.
During communication, the values of parameters P308, P310, P311 and P312 should not be changed. Otherwise there is loss of communication between the drive and the SuperDrive G2 12.0.0 .

2) Be sure that Bluetooth communication module has the red LED (ACTIVE) on. This indicates that it is ready to accept a connection.

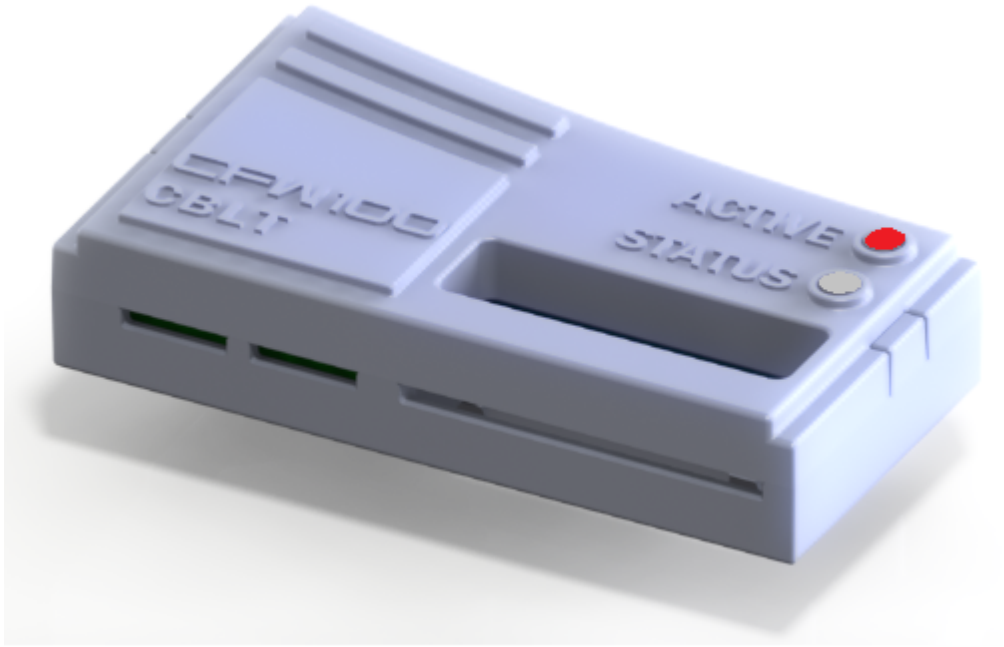

3) Be sure that Bluetooth technology is enabled and ready on computer. Bluetooth's logo appears on Windows taskbar.

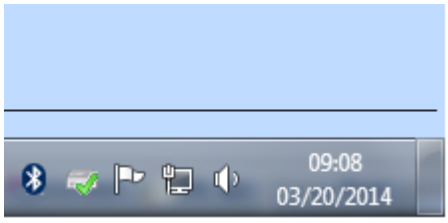

4) Select the connection type (Bluetooth) in Communication Setup window.

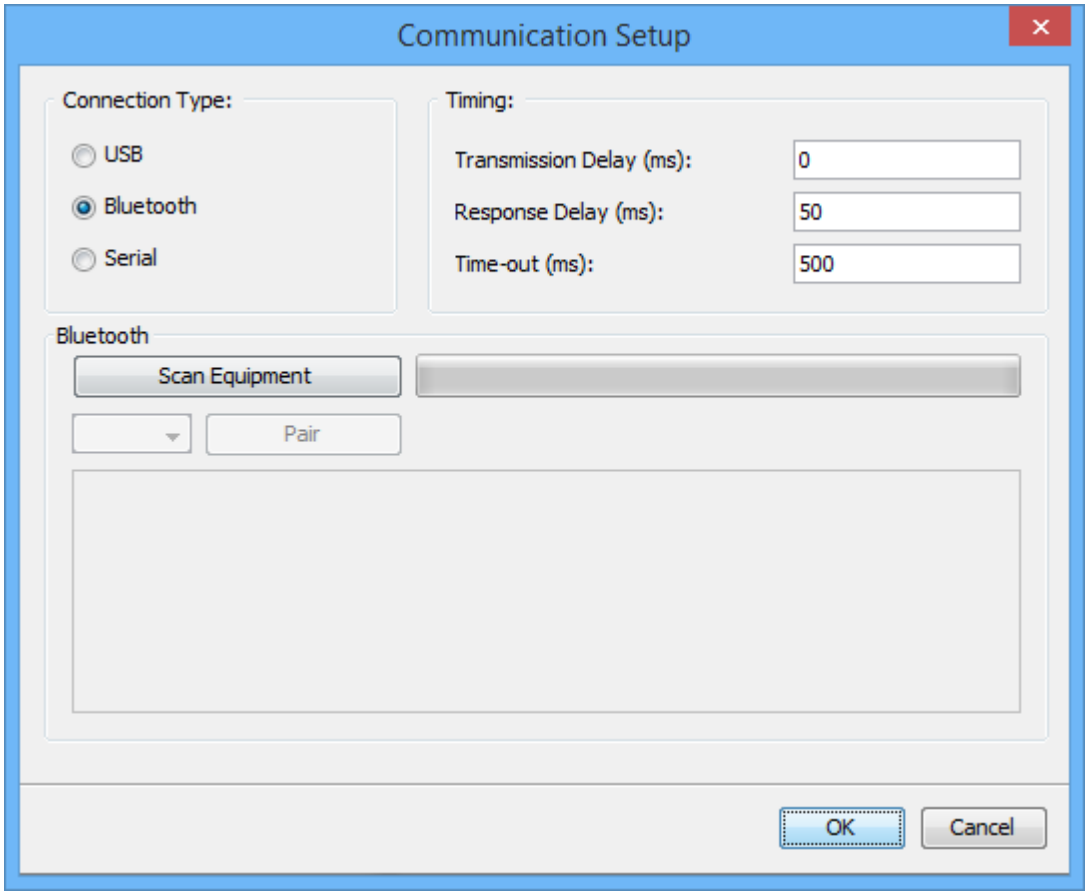

5) Click Scan Equipment.

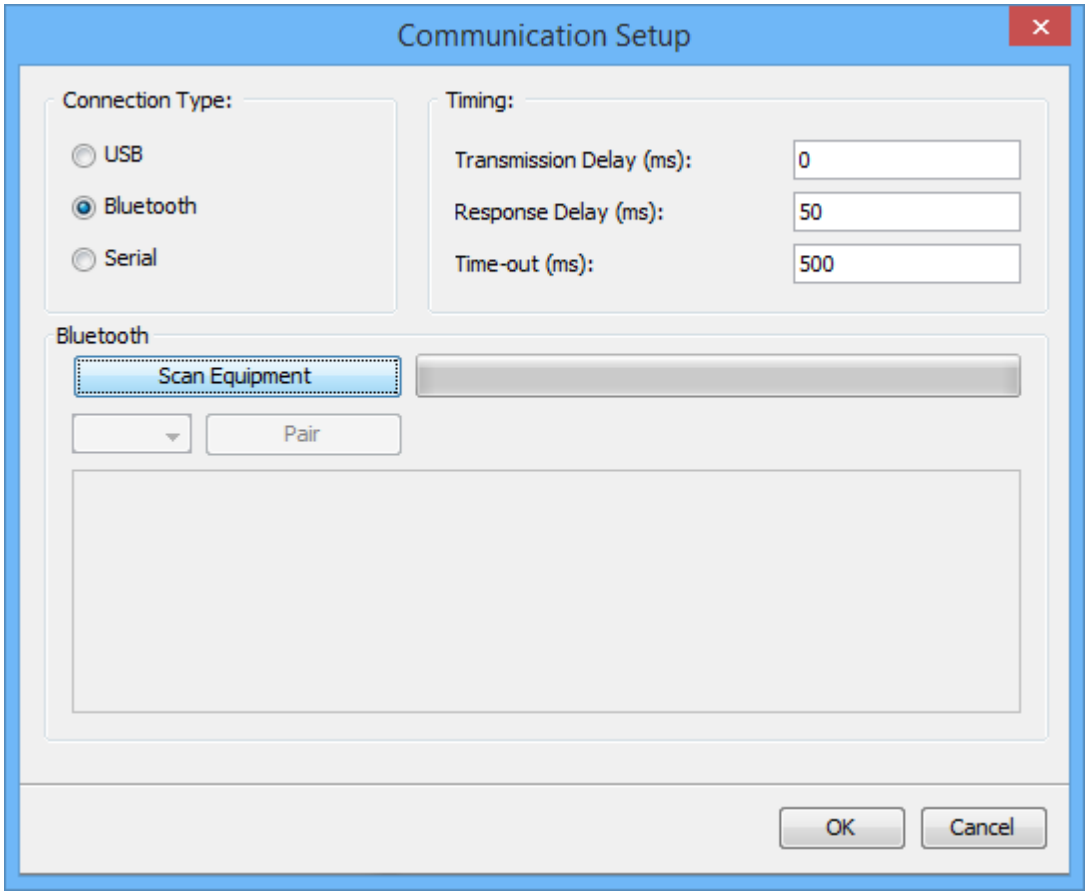

6) Wait for the scanning of drive. This process takes a few minutes depending on the Bluetooth technology.

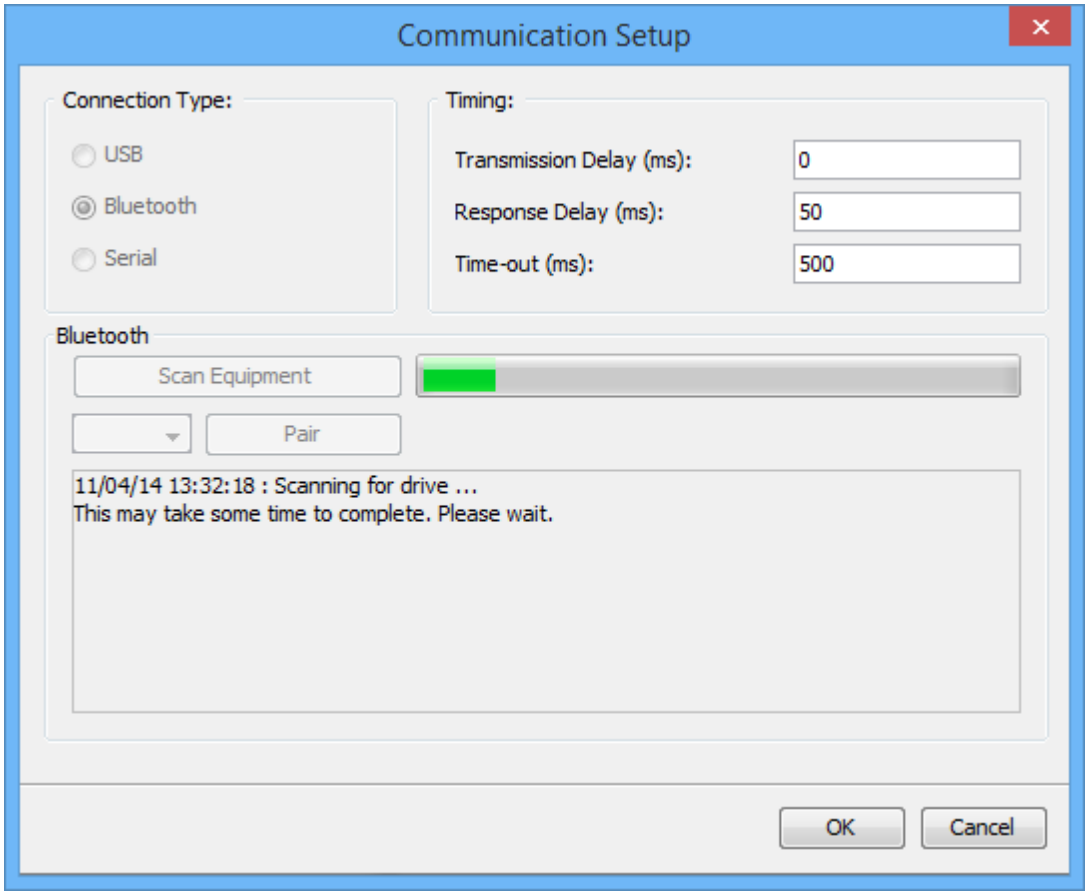

If there is no error until this step, proceed to item 7.

6.1) In Windows 8 or 8.1, some additional steps must be performed on first use.

6.1.1) Once you have clicked Scan Equipment(1), click the box(2) to add the drive:

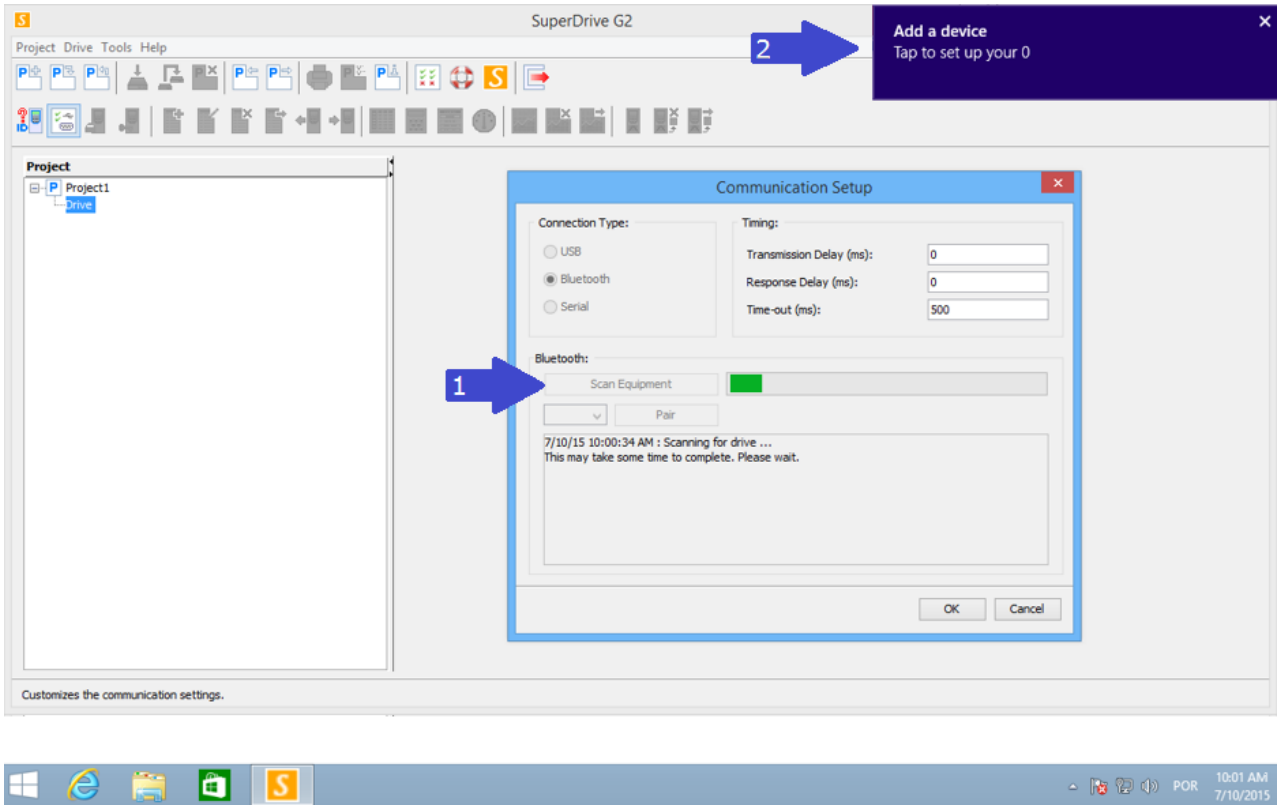

6.1.2) After that, click Pair:

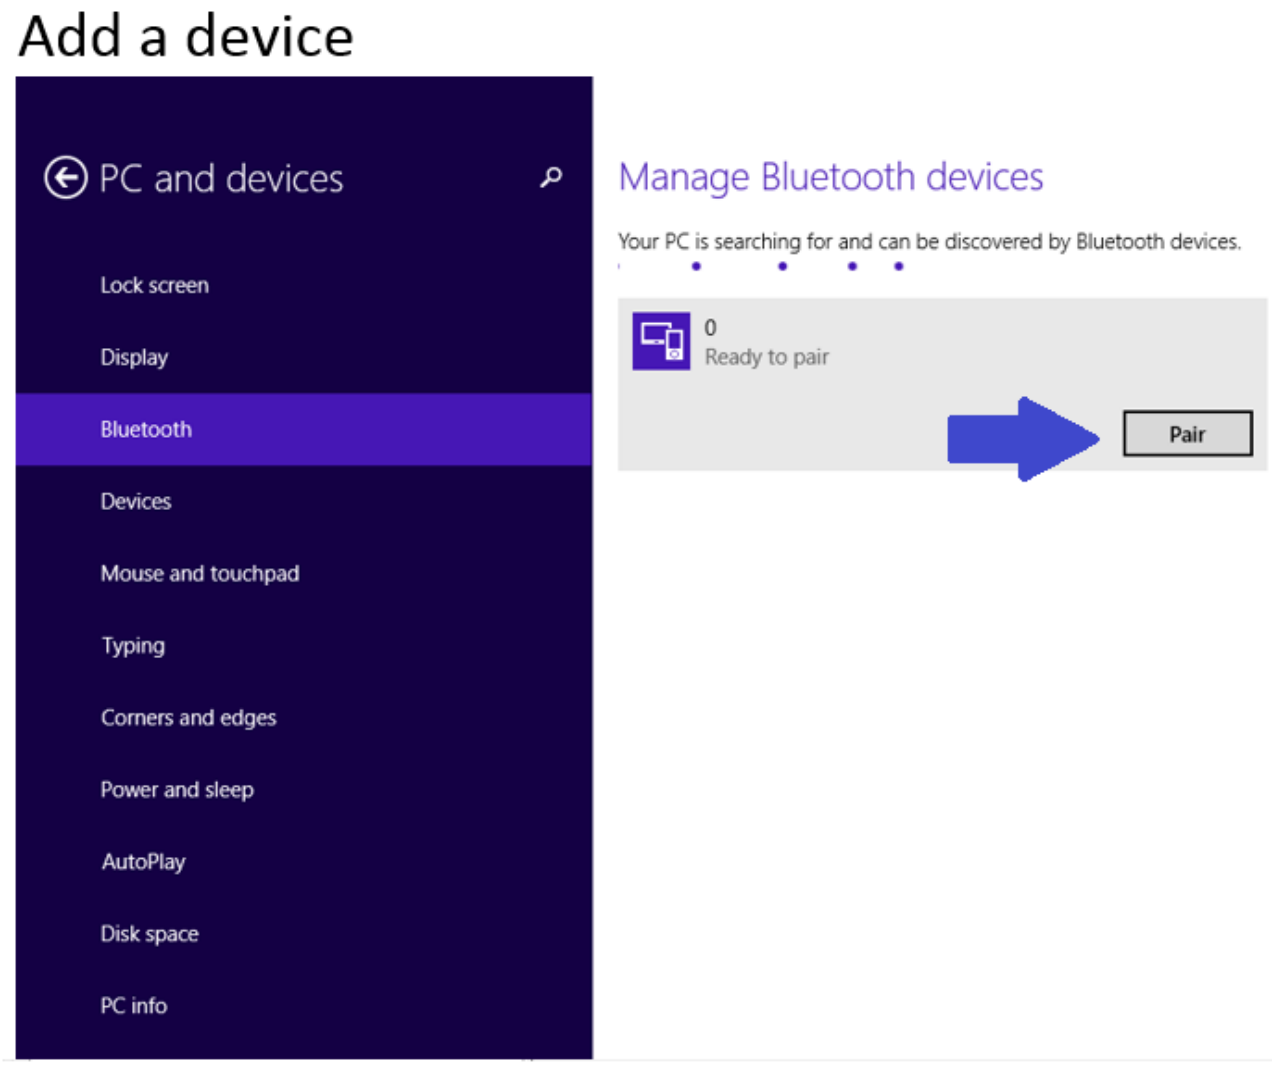

6.1.3) If a numerical code was displayed, just click Yes:

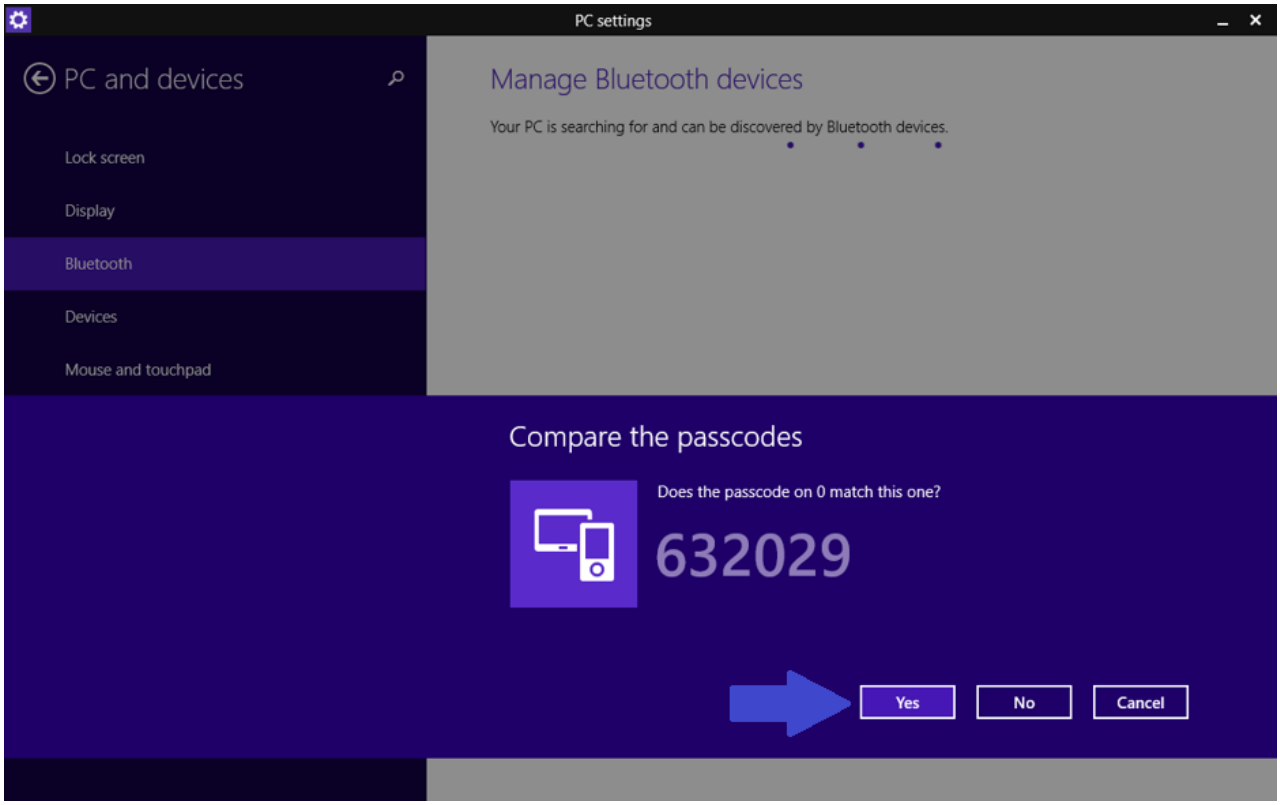

6.1.4) The drive is paired. Close the Bluetooth's configuration window:

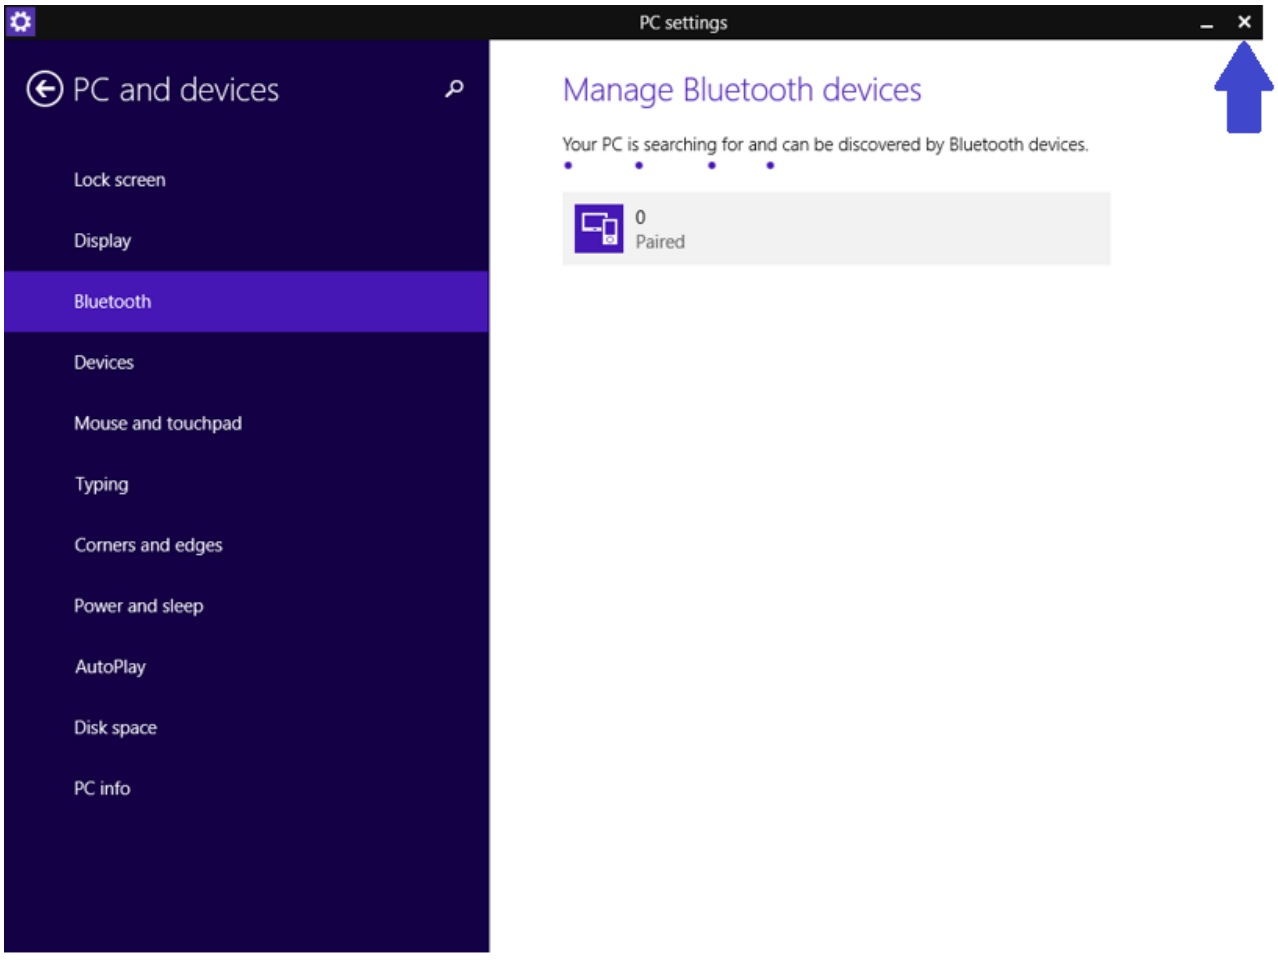

6.1.5) If there were no errors until this step, go to item 7. Otherwise, repeat steps from item 5
.

Errors

If a problem occurs during this step, please verify the items below:

- If Bluetooth technology fails during the scanning process, a message is shown.

Click OK and repeat the steps since item 2.

Example of failure during detection of Bluetooth technology:

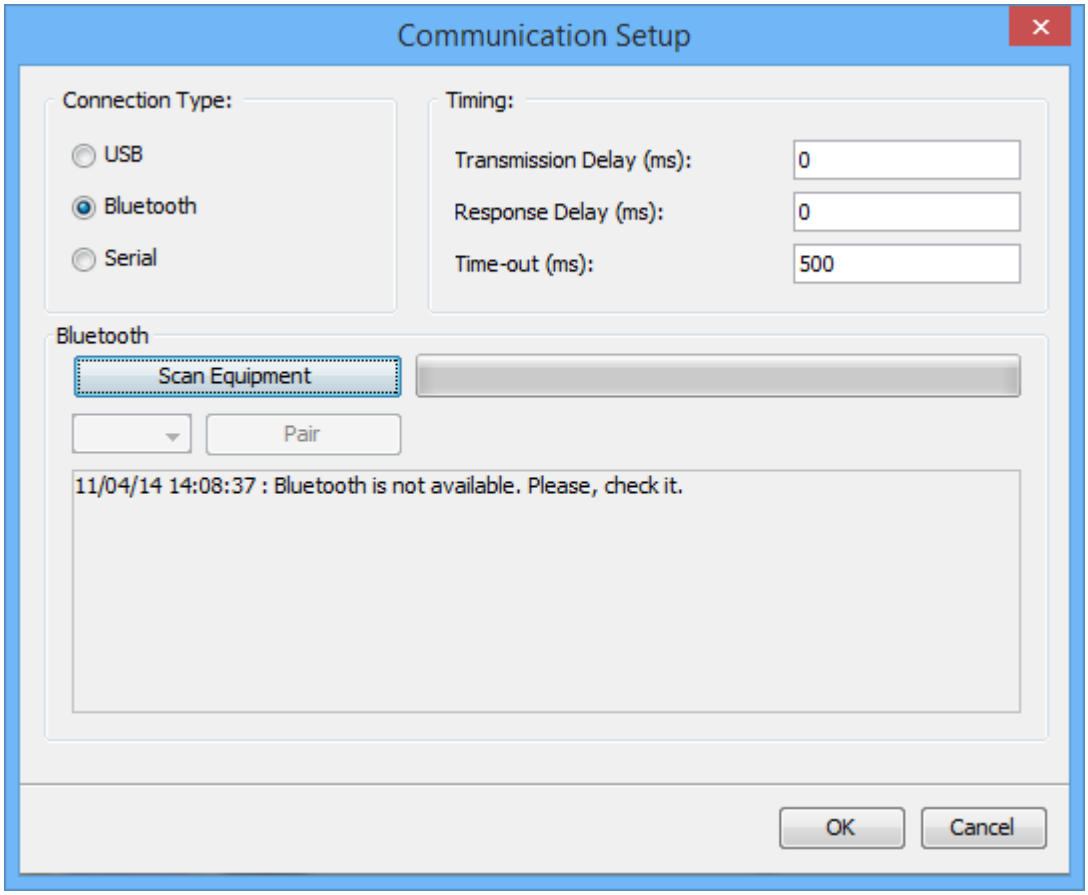

- If Bluetooth technology was removed or disabled in computer during the scanning process, a message is shown.

Example of failure during detection of Bluetooth technology:

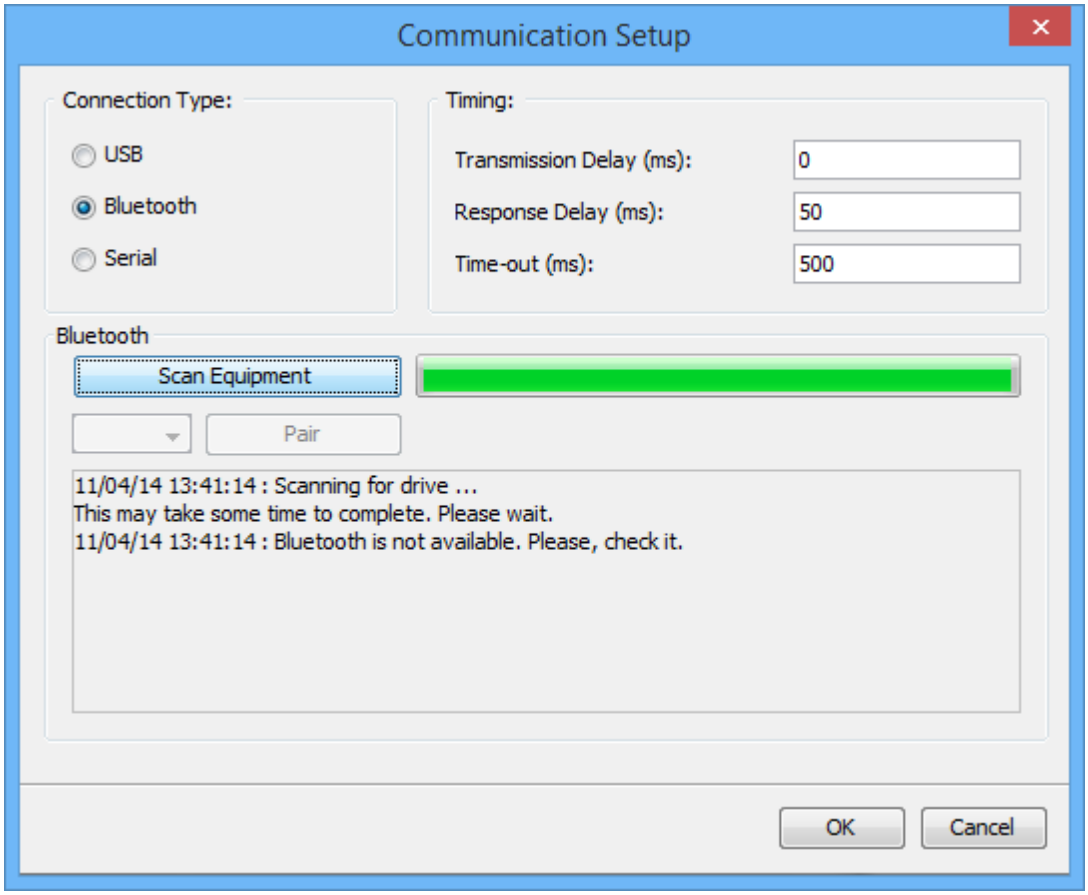

To fix this problem:

- Reconnect USB Bluetooth adapter on computer, if it is disconnected;
- Click OK as shown previously;
- Repeat the steps of identification process from item 2.

7) Wait for the system message indicating that drives were found.

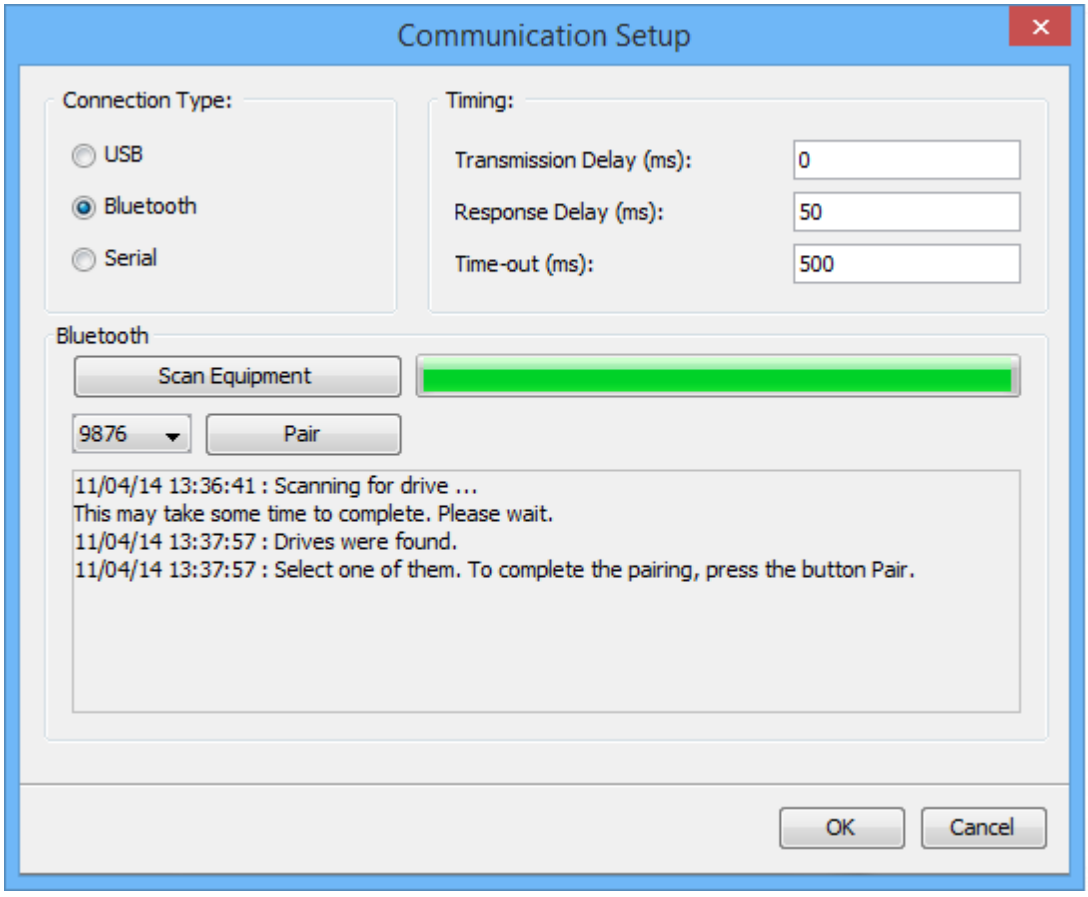

8) Bluetooth technology requires pairing before allowing the use of their services.

Pairing devices is the establishing of a connection between two Bluetooth devices (in this case, between computer and the drive).

a) When only one drive is found, the system automatically makes the pairing.

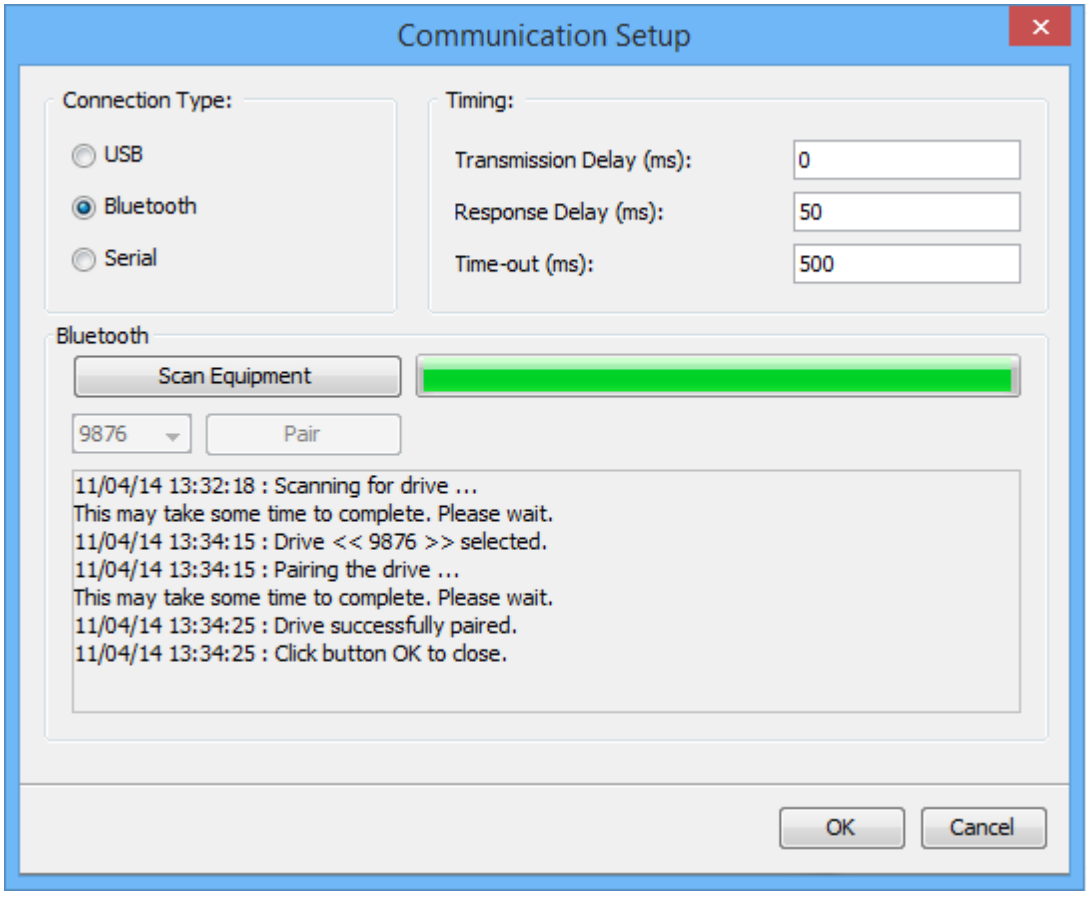

b) When more than one drive is found, click the combo box and select a drive. The code presented in this combo box is the content from P770 parameter of CFW100.

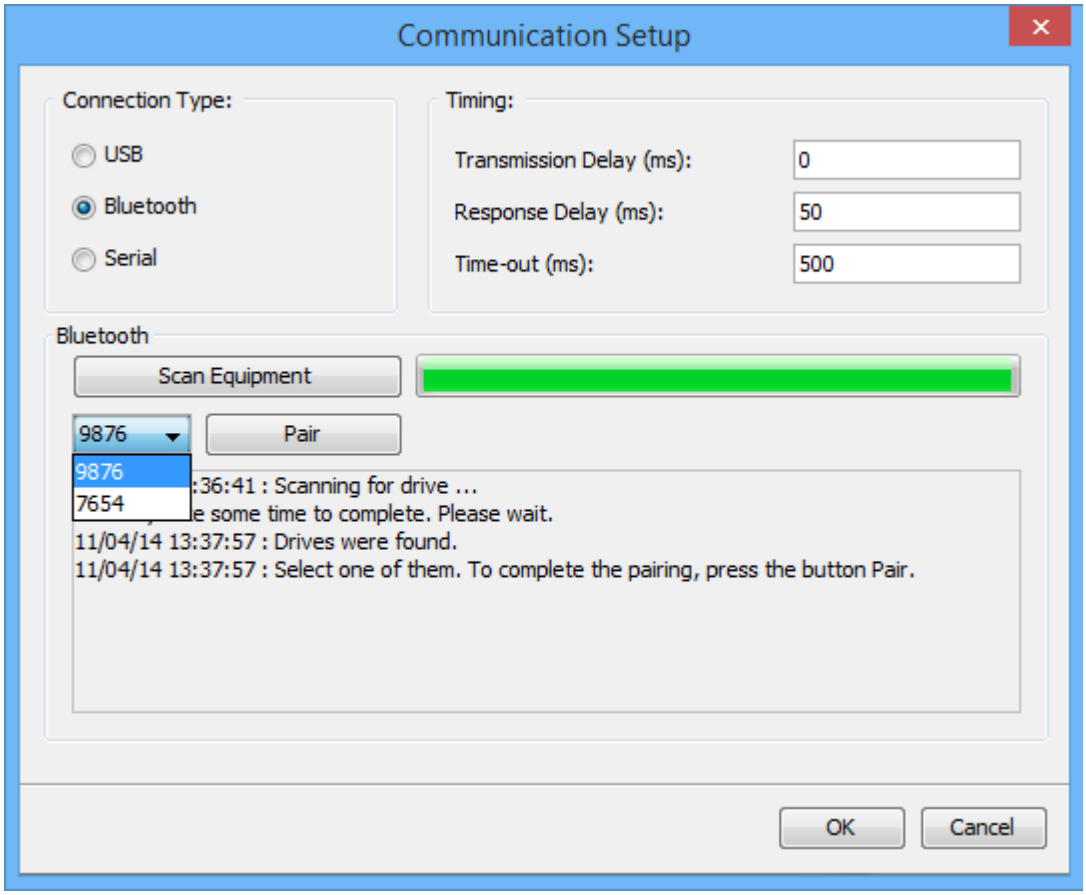

Click Pair to make the pairing.

NOTE!
Always use unique code (P770 content) for each drive.

NOTE!
Do not skip this step because the system will not warn if any communication failure occurs.

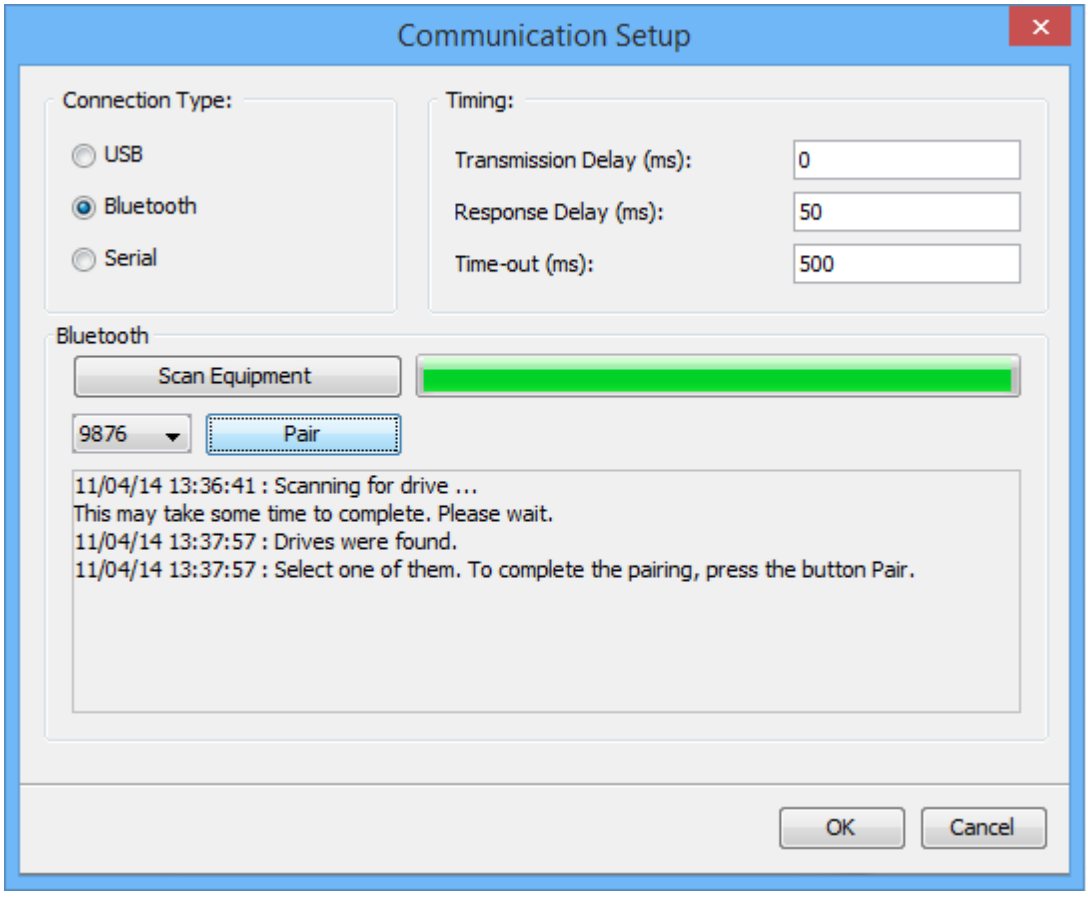

9) This process takes a few minutes depending on the Bluetooth technology.

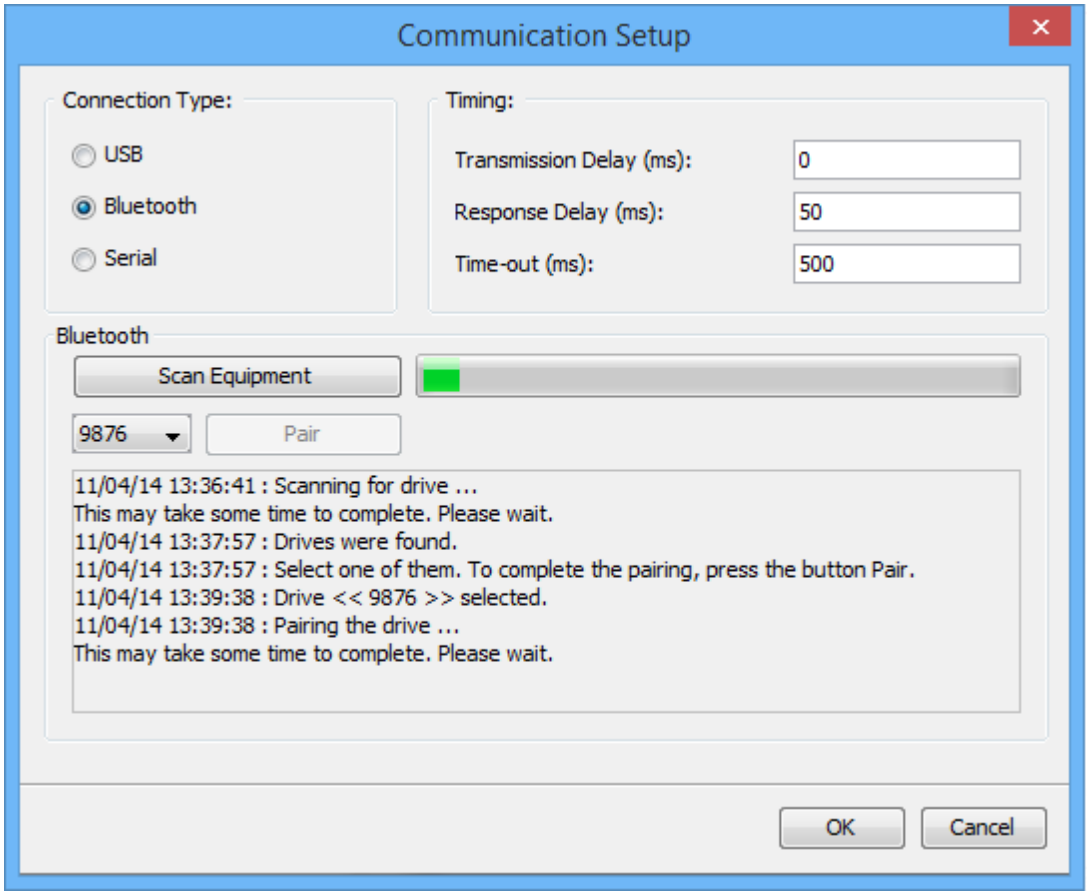

10) Wait for the message indicating that the drive was successfully paired.

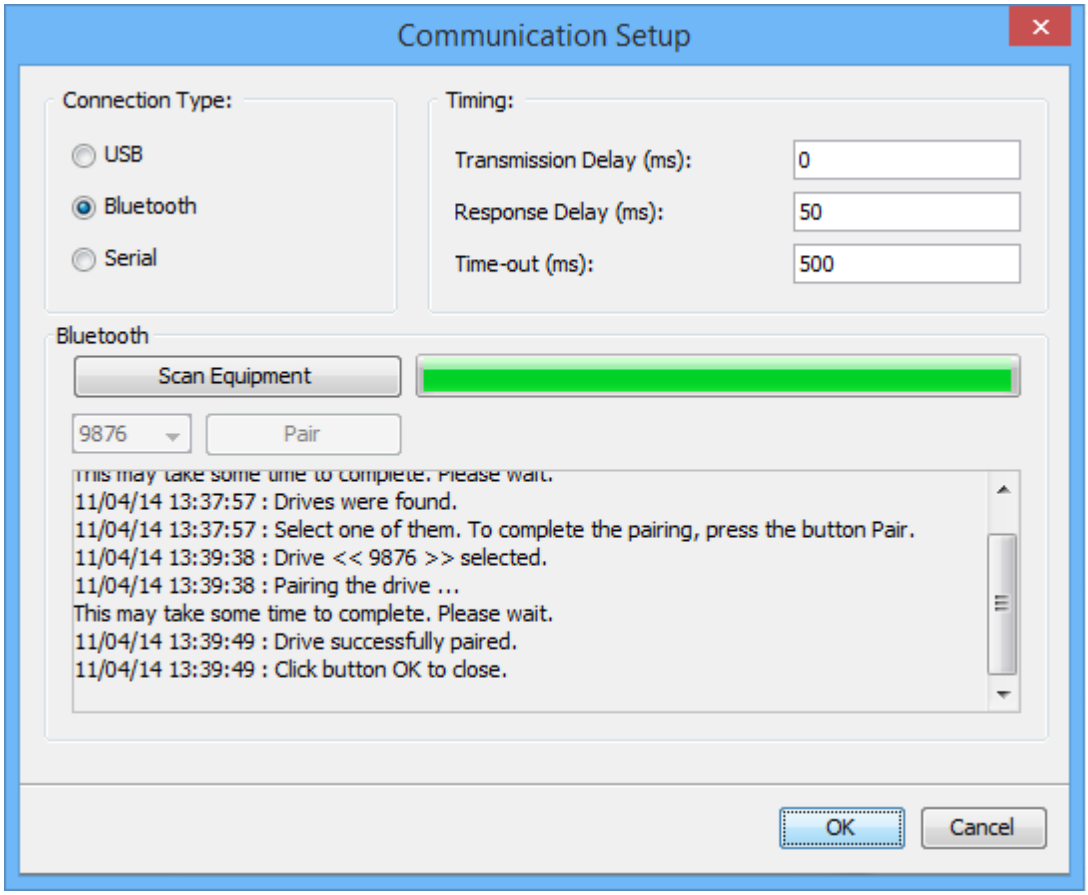

Click OK to close this window.

Drive is ready for use.

Green LED (STATUS) in the drive is on.

If there is no error until this step, proceed to item 11.

Errors

- If drive is out of range during the pairing process, the STATUS LED is off in drive and a message is shown.

Example of failure during the pairing:

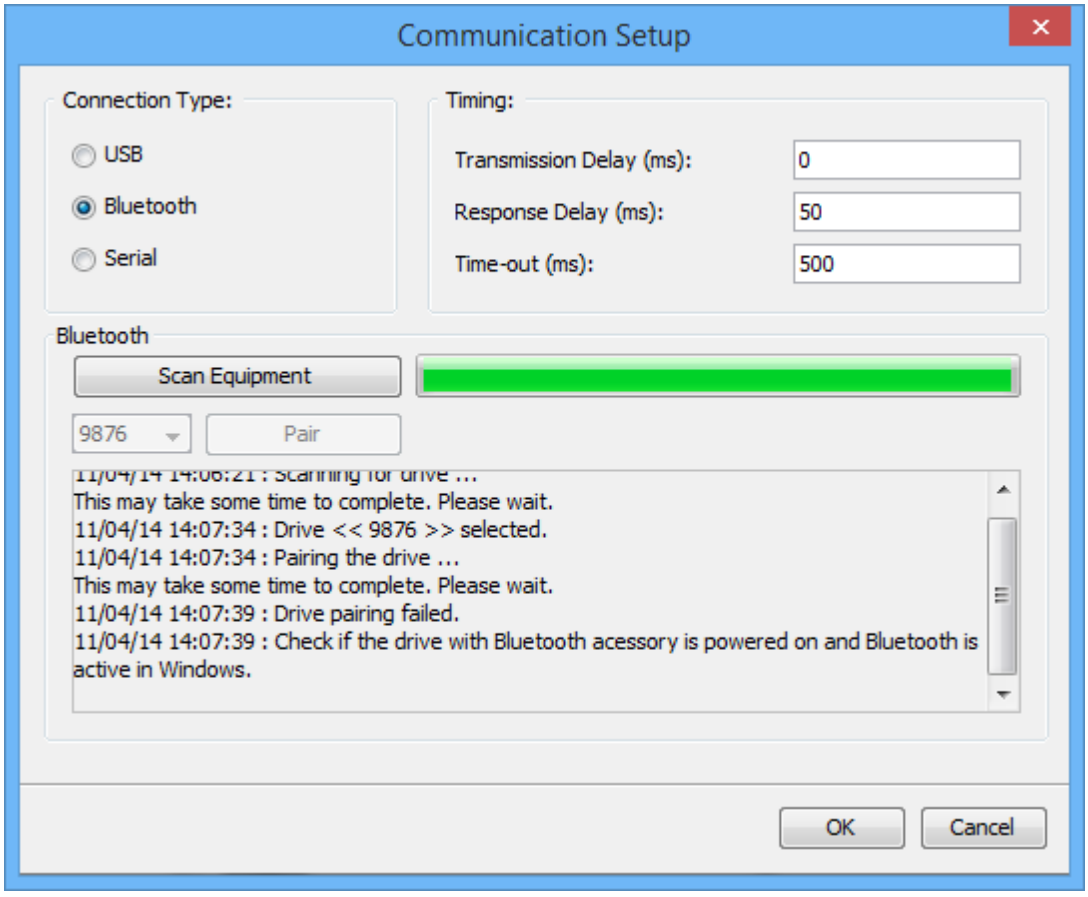

To fix this problem:

- Check if there are obstacles between the drive and the computer;
- Check if distance between drive and computer is too long;
- Check if there is another computer with Bluetooth enabled, which is competing for the same drive connection.
- Repeat the steps from 5.

11) Drive is correctly connected. ACTIVE and STATUS LEDs are on:

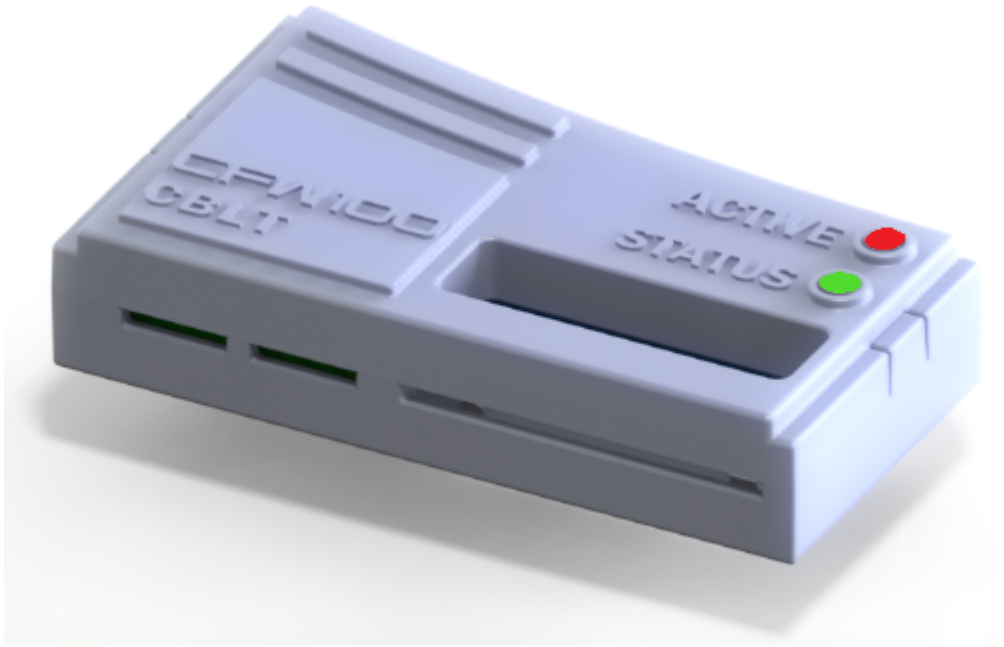

NOTE!
If STATUS LED is off:
- Check if there are obstacles between the drive and computer;
- Check if distance is too long between drive and computer;
- Check if there is another computer around with Bluetooth enabled, which is competing for the same drive connection.

12) Proceed with drive identification. See Identify Drive for details.

General Information

Depending on the Bluetooth technology available on computer, it may be necessary to confirm pairing during the search for Bluetooth drives. This usually occurs in the first connection between drive and computer.

In this case just confirm it if any pairing code is showed, selecting Yes and click Next.

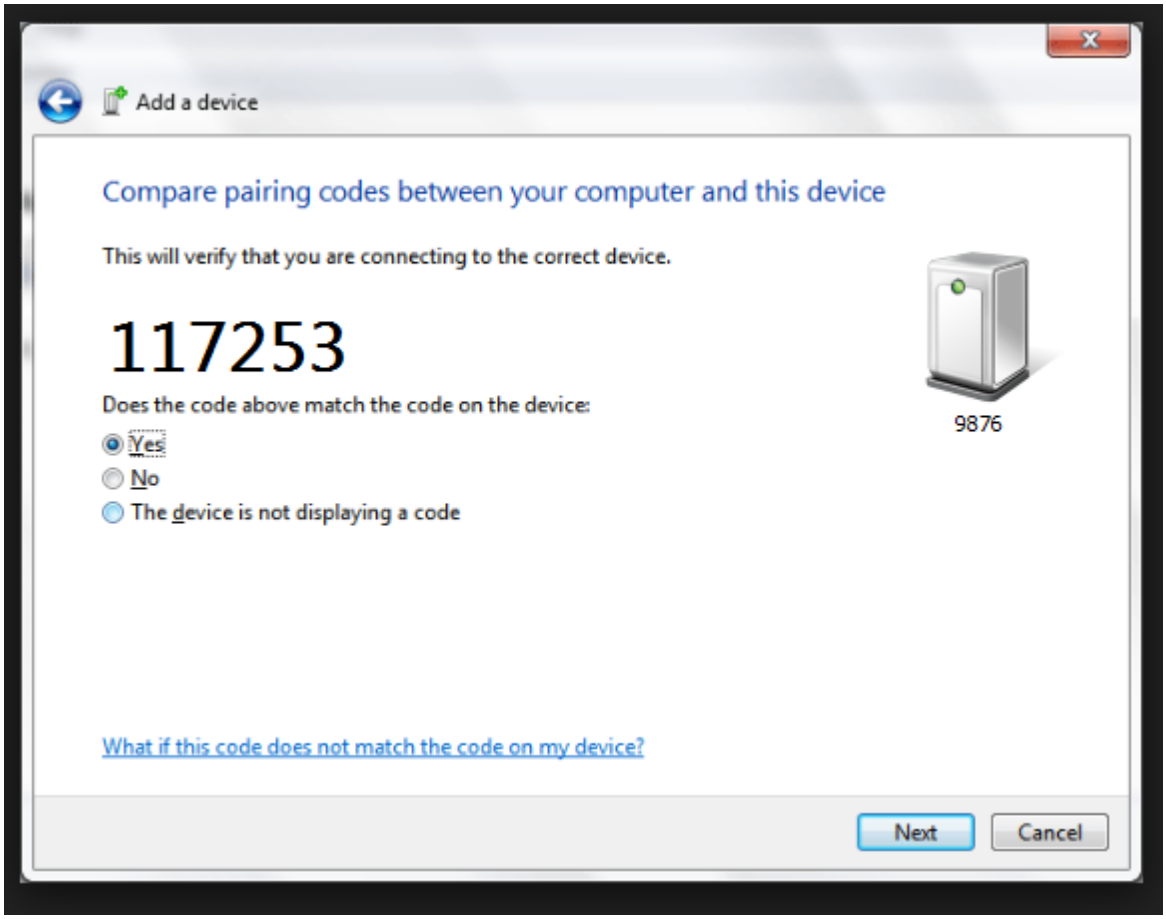
Add a device
Compare pairing codes between your computer and this device
This will verify that you are connecting to the correct device.
117253
Does the code above match the code on the device:
Yes
No
The device is not displaying a code
9876
What if this code does not match the code on my device?
Next
Cancel

If a pairing code is requested, type "1234" and click Next.

6.7 RS232 Cable

RS232 PC/DRIVE SERIAL CABLE

Drive: CFW-09 PM, SSW-06

Figure below shows the cable parts for point-to-point RS232 connection. Only pins 2, 3 and 5 of the DB9 female connector are used.

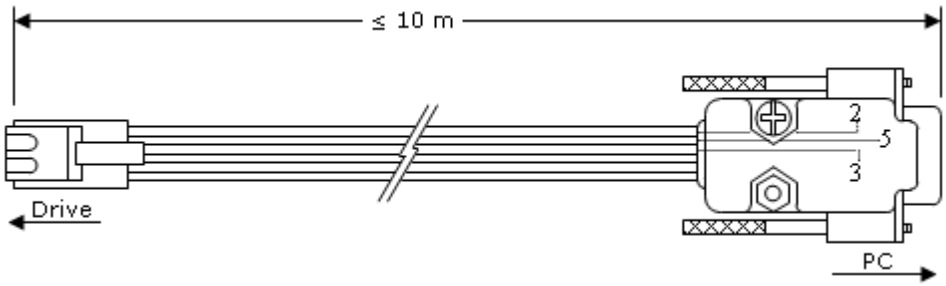

Maximum cable length: 10 meters.

RS232 CONNECTION CABLE

Drive: SSW-07, SSW-08

Figure below shows the cable parts for point-to-point RS232 connection. Only pins 2, 3 and 5 of the DB9 female connector are used.

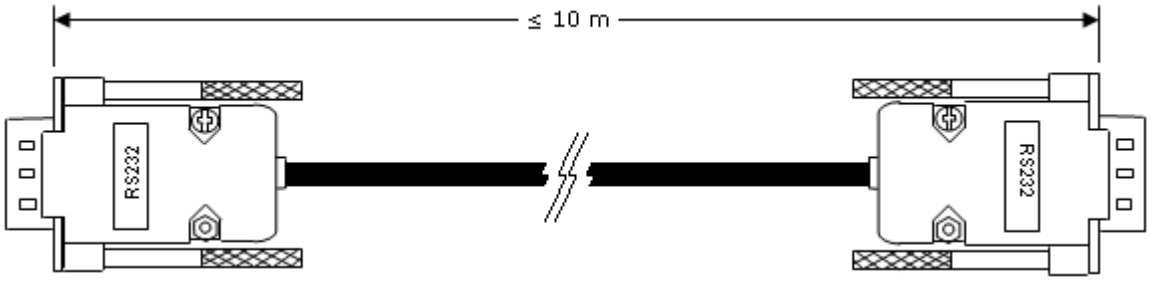

Maximum cable length: 10 meters.

6.8 USB Cable

USB CABLE

Drive: CFW-11, SCA06, SSW7000, CTW900

Figure below shows the cable parts for point-to-point USB connection.

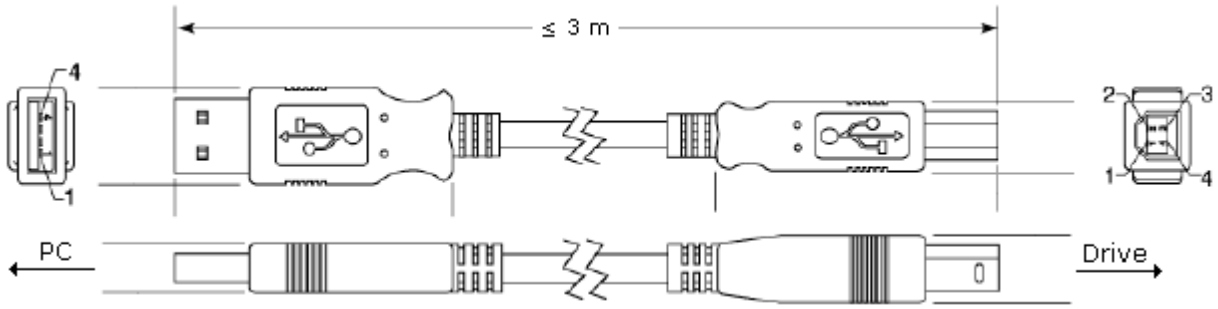

Figure below shows the connectors.

A = Type A connector
B = Type B connector

Maximum cable length: 3 meters.

Always use a standard host/device shielded USB cable. Unshielded cables may lead to communication errors.

The USB connection is galvanically isolated from the mains power supply and from other high voltages internal to the inverter. However, the USB connection is not isolated from the Protective Ground (PE). Use an isolated computer for the USB connection or a desktop connected to the same Protective Ground (PE) of the inverter.

Purchase Suggestions

Manufacturer:

- Samtec, Inc: http://www.samtec.com/

If you want to buy USB cable directly from Samtec, please see below.

Description	Item
USB shielded High Speed Cable 2.0 Revision, 1 m, Samtec	USBC-AM-MB-B-B-S-1
USB shielded High Speed Cable 2.0 Revision, 2 m, Samtec	USBC-AM-MB-B-B-S-2
USB shielded High Speed Cable 2.0 Revision, 3 m, Samtec	USBC-AM-MB-B-B-S-3

At the time this help was being written, the specification was found at http://www.samtec.com/ftppub/cpdf/USBC-AM-BM-B-B-S-X-MKT.pdf

USB CABLE (mini-B)

Drive: CFW100, CFW700, CFW701

Figure below shows the cable parts for point-to-point USB connection.

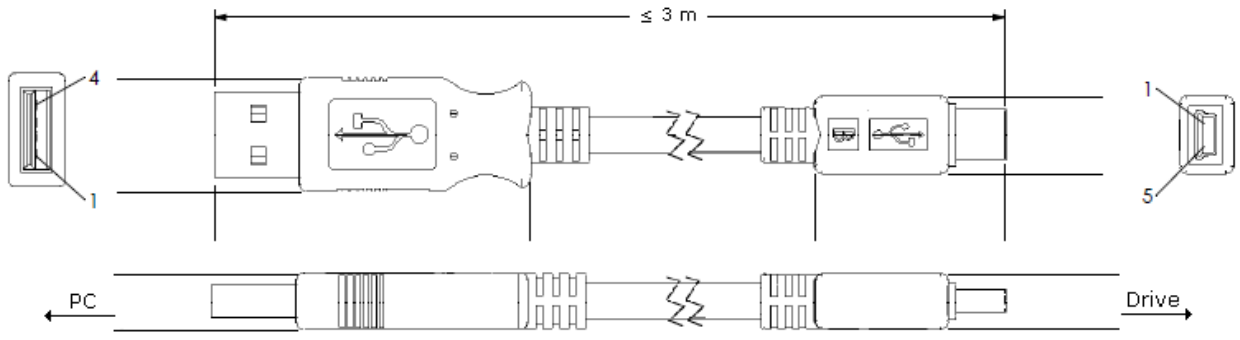

Figure below shows the connectors.

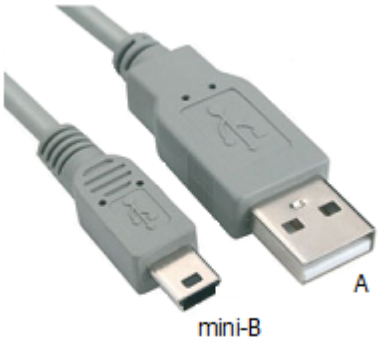

A = Type A connector
B = Type mini-B connector

Maximum cable length: 3 meters.

Always use a standard host/device shielded USB cable. Unshielded cables may lead to communication errors.

The USB connection is galvanically isolated from the mains power supply and from other high voltages internal to the inverter. However, the USB connection is not isolated from the Protective Ground (PE). Use an isolated computer for the USB connection or a desktop connected to the same Protective Ground (PE) of the inverter.

Purchase Suggestions

Manufacturer:

- Samtec, Inc: http://www.samtec.com/

If you want to buy USB cable directly from Samtec, please see below.

Description	Item
USB shielded High Speed Cable 2.0 Revision, 1 m, Samtec	USBC-AM-BM-B-B-S-1
USB shielded High Speed Cable 2.0 Revision, 2 m, Samtec	USBC-AM-BM-B-B-S-2
USB shielded High Speed Cable 2.0 Revision, 3 m, Samtec	USBC-AM-BM-B-B-S-3

At the time this help was being written, the specification was found at
http://www.samtec.com/ftppub/cpdf/USBC-AM-MB-B-B-S-X-X-MKT.pdf

6.9 USB to Serial Adapter

The USB to serial adapter is the best solution for the connection of serial equipment (RS232) to USB ports, i. e., for connecting computer USB output to a RS232 serial equipment.

This is a low cost solution and meets the install requirements of new computer serial ports that have busy bus bars or equipments that are not fitted with RS232 ports.

The USB to serial adapter allows the plug & play connection with your computer, thus

maintaining free the existing serial port.

Figures below show a sample of this adapter.

PURCHASE SUGGESTIONS

Manufacturer: Comm5 Tecnologia

Product: Conversor de USB para 1 saída serial RS232
Model: 1S-USB - conversor USB para 1 serial
Web Site: http://www.comm5.com.br/1S-USB--CONVERSOR-USB-PARA-1-SERIAL
For further information about product installation, please refer to user's manual.

Manufacturer: Tripp Lite

Product: USB High Speed Serial Adapter
Model: USA-19HS
Web Site: http://www.tripplite.com/en/products/model.cfm?txtSeriesID=849&txtModelID=3914
For further information about product installation, please refer to user's manual.

6.10 Bluetooth USB Adapter

Drive: CFW100

The image below shows an USB Bluetooth adapter (a.k.a. dongle) which should be connected to the USB port of computer. There are several models with different features.

6.11 Before Trying to Establish Communication

Before trying to establish communication make sure the following has been done:

- Communication cable connected to the drive;
- Communication cable connected to computer;
- Drive is powered up;
- Communication parameters on the drive correspond to SuperDrive G2 communication settings.

6.12 Exception During Monitoring

SOFT-STARTER

SSW-06 V1.3X

- P014 to P017 = 13107 => this means there is no fault.

SSW-07 and SSW-08

- P219 defines parametrization mode for the following parameters: P101, P102, P104, P110, P202, P206, P401, P520, P521, P611, P613, P617, P620 and P640;
- On Trimpot and Dip Switch Mode, the parametrization of the above parameters is done through the Trimpots and Dip Switches. These parameters act like read only parameters, showing the Trimpots and Dip Switches programmed values. The values which where programmed through RS232 serial communication are not used;
- On Keypad Mode, the parametrization of parameters previously cited is made with RS232 serial communication or Keypad. The value adjusted with Trimpots and Dip Switch are not used.

7 Libraries

- JFreeChart
- jSSC

7.1 JFreeChart

This software incorporates JFreeChart, © 2005-2012 Object Refinery Limited.

The JFreeChart home page can be found at: http://www.jfree.org/jfreechart/.

To read GNU Lesser General Public Licence, Version 3, access http://www.gnu.org/licenses/lgpl.html.

To get the complete source code of JFreeChart for the version of the library that it is used in this software please contact the manufacturer (see SuperDrive G2 12.0.0).

7.2 jSSC

This software incorporates jSSC, © 2010-2012 Sokolov Alexey.

The jSSC home page can be found at: http://code.google.com/p/java-simple-serial-connector/ .

To read GNU Lesser General Public Licence, Version 3, access http://www.gnu.org/licenses/lgpl.html.

To get the complete source code of jSSC for the version of the library that it is used in this software please contact the manufacturer (see SuperDrive G2 12.0.0).

Index

- A -

About 66

- B -

Before Installing 15
Before Trying To Establish Communication 129
Bluetooth USB Adapter 129

- C -

Close 34
Communication 71
Communication Setup 41
Connecting the Drive (Bluetooth) 105
Connecting the Drive (RS232) 87
Connecting the Drive (RS485) 89
Connecting the Drive (USB - Virtual COM Port) 75
Connecting the Drive (USB) 73
Contents 66
Copyright Notice 14

- D -

Drive 39
Drive Parametrization 71

- E -

Edit Parameters File 46
Exception During Monitoring 129
Exit 39
Export 37
Export Parameters File 47
Export Trace File 62
Export Trend File 58

- G -

Getting Started 6

- H -

Help 66

- I -

Identify Drive 39
Import 36
Installation Instructions 15
Installing 22

- J -

JFreeChart 130
jSSC 130

- L -

Libraries 130

- M -

Main Features 6
Menus 33
Minimum Requirements 15
Monitor Parameters 49
Monitor Speed Reference 53
Monitor Status 51
Monitor using Keypad 50

- N -

New 33
New Parameters File 45

- O -

Open 34
Options 63

- P -

Print 38
Project 33
Project Information 38

- R -

Read Parameters from Drive 48
Remove 36
Remove Parameters File 47
Remove Trace File 62
Remove Trend File 58
RS232 Cable 124

- S -

Safety Warning 14
Save 35
Save As 35
Security System 43
Security System (Session) 44
SuperDrive G2 12.0.0 5
Supported Drives 16

- T -

Tools 63
Trace 59
Trend 54

- U -

Uninstalling 28
USB Cable 125
USB Driver 32
USB to Serial Adapter 127
User's Manual - PDF 14

- W -

Welcome 6
What's New 6
Write Parameters to Drive 49